
## LANTRONIX®

Insert one or two SIM cards and a microSD card, if any.

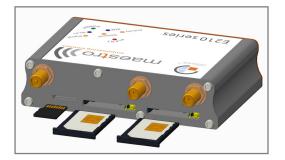

Use either our ACC-PS2x-F power adapter or your own power adapter\* with our ACC-CA10 or ACC-CA10-F power cord.



Attach our:


 ✓ ACC-A21 antenna to the leftmost antenna connector (labelled Wi-Fi), if needed; and
 ✓ ACC-A14 or A14H to the two rightmost antenna

connectors (labelled Cellular Main and GNSS).



## E213G E215G QUICK START GUIDE

Plug:
✓ a serial cord into E210 series' 9-pin female sub-D header; and / or
✓ one or two Ethernet cords into its RJ-45 headers.

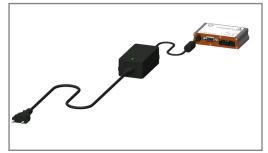

\* Provided its output voltage fell inside E210 series' 8 V  $\sim$  32 V range



Scan for product information www.lantronix.com/mylantronix/

