LANTRONIX®

Insert one or two SIM cards and a microSD card, if any.



Use either our ACC-PS2x-F power adapter or your own power adapter* with our ACC-CA10 or ACC-CA10-F power cord. Attach our. ✓ ACC-A nector ✓ ACC-A


✓ ACC-A32H or A33 to the second leftmost and to the two rightmost antenna connectors (labelled Cellular Main, GNSS and Cellular Diversity).

✓ ACC-A21 antenna to the leftmost antenna connector (labelled Wi-Fi), if needed; and



E214G QUICK START GUIDE

Plug:
✓ a serial cord into E210 series' 9-pin female sub-D header; and / or
✓ one or two Ethernet cords into its RJ-45 headers.

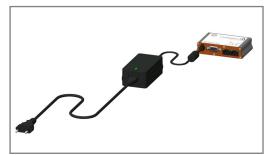

* Provided its output voltage fell inside E210 series' 8 V \sim 32 V range



Scan for product information www.lantronix.com/mylantronix/



895-0008-00, Rev B