

IONMM

Application Note M03 – Upgrade the Firmware

Upgrade the Firmware

Occasionally changes need to be made to the firmware version that is currently stored in the memory of the IONMM. This could occur because of features being added, etc. Transition Networks recommends that before completing any steps on an install that a user verify that the management has the latest firmware version installed and running.

To find the latest version of the firmware, go to:

<http://www.transition.com/TransitionNetworks/TechSupport/Downloads/Software.aspx>

IMPORTANT

Doing an upgrade of the IONMM will cause all configuration backup files to be lost.

Upgrading the IONMM

The following describes the procedure for upgrading the firmware in the IONMM through the Web Interface.

1. Access the IONMM through the Web interface – Default IP address is 192.168.1.1
2. Select the **Main** tab.
3. Locate the **TFTP Upgrade** section.

The screenshot shows a web interface section titled "TFTP Settings". It contains three input fields: "TFTP Server Address", "Firmware File Name", and "Status". The "Status" field currently displays "No Action". Below the input fields are three buttons: "Save Server Address", "Upgrade Firmware", and "Refresh".

4. In the TFTP Server Address field, enter the IP address of the server where the upgrade file is located.
5. To save the server address, click **Save Server Address**.
6. In the **File Name** field, enter the name of the upgrade file.
7. Click **Upgrade**.
8. When the confirmation window appears, click **OK**. The upgrade begins.



Transition Networks, Inc.
10900 Red Circle Drive
Minnetonka, MN 55343
USA

Transition Networks Inc. offers networking connectivity solutions that make networks perform better, faster and more reliably while helping companies leverage their existing networking infrastructure.