

# IONMM

## Application Note M04 – Reset to Factory Defaults

### Reset to Factory Defaults

If need be, you can reset all configurations in the IONMM back to their original factory defaults.

### IMPORTANT

This operation deletes **all** configuration information that was saved in the IONMM, including the IP and gateway addresses you assigned to the IONMM.

1. Access the IONMM through the Web interface
2. Select the **Main** tab.
3. Locate the **System Configuration** section.

MAIN	SNTF	HTTPS	SSH	RADIUS	ACL	PROVISIONING	UPGRADE
Model Information							
Serial Number	Model	Software Revision	Hardware Revision				
SN-agent-001	IONMM	0.3.12	0.0.1				
System Configuration							
System Name	System Up Time	System Contact	System Location				
IONMM	0:19:03:18:20	Transition Networks(techs	Frank's place				
Console Access	Number of Ports	MAC Address					
Enabled	2	00-C0-F2-20-DE-9D					
Uptime Reset	System Reboot	Reset To Factory Config					

4. Click **Reset to Factory Config**.
  5. When the confirmation window appears, click **OK**.
- All configuration parameters will be reset to their factory values.

**NOTE:** Your Web session will be discontinued.



Transition Networks, Inc.  
10900 Red Circle Drive  
Minnetonka, MN 55343  
USA

Transition Networks Inc. offers networking connectivity solutions that make networks perform better, faster and more reliably while helping companies leverage their existing networking infrastructure.