

IONMM

Application Note M06 – Configuring Management VLAN


Configuring Management VLAN

When configuring Management VLAN for the IONMM you can specify whether one or both of the ports on the IONMM are part of the Management VLAN.

IMPORTANT NOTE – Before performing this configuration

When you specify a management VLAN, your Web and Telnet interfaces to the IONMM are lost, unless the management station is on the same VLAN. Only stations in the same VLAN will be allowed to communicate with the IONMM through the network. Enabling a Management VLAN does not disable a USB serial interface to the IONMM.

1. Access the IONMM through the Web interface
2. Select the **Main** tab.
3. Locate the **Management VLAN Configuration** section.

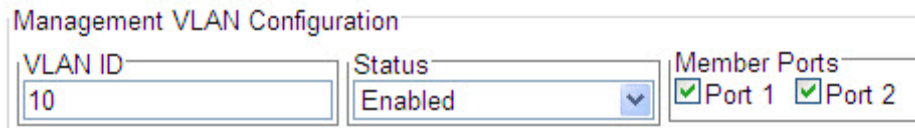

VLAN ID	Status	Member Ports
10	Enabled	<input checked="" type="checkbox"/> Port 1 <input checked="" type="checkbox"/> Port 2

4. In the **VLAN ID** field, enter the VLAN ID number (2–4094).
5. In the **Status** field, select **Enabled**.
6. In the **Member Ports** field, select the ports that will be associated with the VID.
7. Click **Save**.



Transition Networks, Inc.
10900 Red Circle Drive
Minnetonka, MN 55343
USA

Transition Networks Inc. offers networking connectivity solutions that make networks perform better, faster and more reliably while helping companies leverage their existing networking infrastructure.