


## Package Contents

1. Open-Q™ 865XR SOM with SXR2130P processor
2. Open-Q™ 865XR SOM Carrier Board
3. AC Power Adapter
4. LCD/Touchpanel (Optional)

- |                                           |                                              |
|-------------------------------------------|----------------------------------------------|
| 1. 12V DC power jack                      | 23. SOM current sense header                 |
| 2. Power source switch (DC/Batt)          | 24. Micro SD socket*                         |
| 3. Battery connector                      | 25. Open-Q™ LCD Touch Panel (optional)       |
| 4. USB 3.0 Type-A Connector               | 26. WLAN Channel 1 Antenna (PCB trace)       |
| 5. Power button                           | 27. Digital I/O connector                    |
| 6. Volume +                               | 28. SIM Card connector*                      |
| 7. Volume - / Reset button                | 29. Audio Output expansion header            |
| 8. General Purpose Button                 | 30. M.2 PCIe Socket (B-key) *                |
| 9. Audio Headset Jack                     | 31. Audio Input expansion header             |
| 10. USB 3.0 Type-C connector              | 32. WLAN Channel 1 U.FL Antenna Connector    |
| 11. USB debug UART Micro B                | 33. WLAN/BT Channel 0 U.FL Antenna Connector |
| 12. Debug UART Header                     | 34. SXR2130P CPU                             |
| 13. WLAN/BT Channel 0 Antenna (PCB trace) | 35. Open-Q 865XR System on Module (SOM)      |
| 14. Audio I/O expansion header            |                                              |
| 15. MIPI Camera 3 Connector               |                                              |
| 16. Coin Cell Battery Holder              |                                              |
| 17. Power Header                          |                                              |
| 18. MIPI Camera 2 Connector               |                                              |
| 19. VPH_PWR current sense header          |                                              |
| 20. MIPI Camera 1 Connector               |                                              |
| 21. Sensor expansion header               |                                              |
| 22. System configuration switches         |                                              |

\* On Bottom side

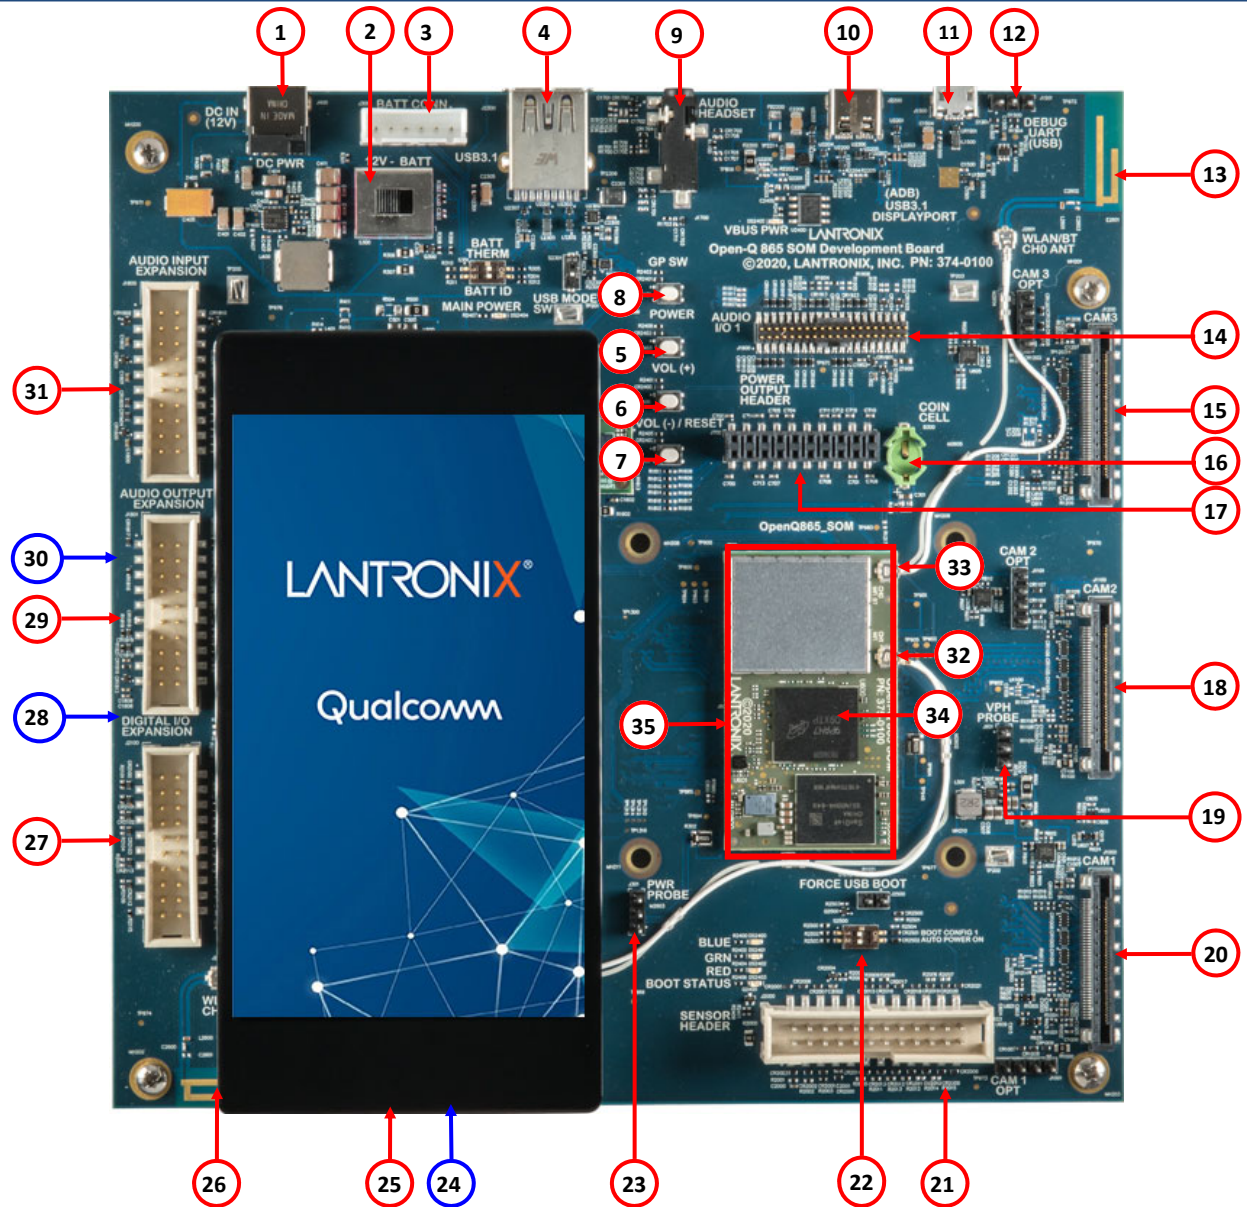

Specifications are subject to change - 895-0040-00 Rev. A

## Development Kit Setup

**1. At a static-safe workstation, remove the development kit board carefully from the anti static bag**

**2. Connect the Power Adapter to the 12V DC Jack (1) and then press and hold the ON/OFF button (5) until you see the boot indicator LED lights (~3 seconds)**

### **3. Documentation and software**

To access the documentation (schematics, user guides, datasheets, programming guides, tech notes...), platform BSP software and much more, please register at:

<http://tech.intrinsyc.com>



## Development Kit Support

Should you require more information or assistance, you can contact us at:

<https://www.intrinsyc.com/contact-support>

Lantronix also provides technical information and videos on Qualcomm processors at:

<https://www.intrinsyc.com/resources>

Should you require additional technical support for your Development Kit you can easily purchase a technical support package from the Lantronix store:

<http://shop.intrinsyc.com/collections/technical-support-packages>

Thank you for purchasing the Open-Q 865XR SOM Development Kit

The Lantronix Team