

ActiveLinx Product Shipment Contents

ActiveLinx™ Secure Console Servers and Terminal Servers are shipped with a variety of power supply, cable and adapter options depending on the product type and application space for which they were designed. This reference list details the contents of a standard shipment for each product. This information can also be found in the “What’s In the Box” section of the Quickstart Guide included with some products.

Secure Console Servers:

Model: SCS100	Contents Description (Part Number, If Applicable)
Part Number: SCS100-22 Secure Console Server, 1 port, 100-240 VAC, 50/60 Hz international adapter, RoHS	<ul style="list-style-type: none"> • Documentation CD-ROM • Quickstart Guide • Power cube with international adapters (520-062R) • Fastening Kit (083-010)

Model: SCS200	Contents Description (Part Number, If Applicable)
Part Number: SCS200 Secure Console Server, 2 ports, 100-240 VAC adapter	<ul style="list-style-type: none"> • Documentation CD-ROM • Quickstart Guide • Power cube with US and international adapters (520-061)

Model: SCS400	Contents Description (Part Number, If Applicable)
Part Number: SCS400-11 Secure Console Server, 4 ports, 100-240 VAC, 50/60 Hz adapter, US power cord	<ul style="list-style-type: none"> • Documentation CD-ROM • Quickstart Guide • Power supply (520-048) • US/Japan power cord (500-041)
Part Number: SCS400-12 Secure Console Server, 4 ports 100-240 VAC, 50/60 Hz, International power cords (UK, Euro, and US)	<ul style="list-style-type: none"> • Documentation CD-ROM • Quickstart Guide • Power supply (520-048) • US/Japan power cord (500-041) • European power cord (500-119) • UK power cord (500-120)

Secure Console Servers: (continued)

Model: SCS1600	Contents Description (Part Number, If Applicable)
Part Number: SCS1600 Secure Console Server, 16 ports	<ul style="list-style-type: none"> • Documentation CD-ROM • Quickstart Guide • Rack mount brackets with screws (083-000) • Cable: 6' RJ45 to DB9 Female (500-103) • US/Japan power cord (500-041) • European power cord (500-119) • UK power cord (500-120)

Model: SCS3200	Contents Description (Part Number, If Applicable)
Part Number: SCS3200 Secure Console Server, 32 ports	<ul style="list-style-type: none"> • Documentation CD-ROM • Quickstart Guide • Rack mount brackets with screws (083-007) • Cable: 6' RJ45 to DB9 Female (500-103) • US/Japan power cord (500-041) • European power cord (500-119) • UK power cord (500-120)

Ethernet Terminal Servers:

Model: ETS8PS	Contents Description (Part Number, If Applicable)
Part Number: ETS8PS 8 Port Terminal Server/Multi-port Device Server	<ul style="list-style-type: none"> • Documentation CD-ROM • US/Japan power cord (500-041)
	Note: Can be used with the following power cords, ordered separately - European power cord (500-119), UK power cord (500-120)

Model: ETS16PS	Contents Description (Part Number, If Applicable)
Part Number: ETS16PS 16 Port Terminal Server/Multi-port Device Server	<ul style="list-style-type: none"> • Documentation CD-ROM • US/Japan power cord (500-041)
	Note: Can be used with the following power cords, ordered separately - European power cord (500-119), UK power cord (500-120)

Model: ETS16PR	Contents Description (Part Number, If Applicable)
Part Number: ETS16PR 16 Port Terminal Server/Multi-port Device Server	<ul style="list-style-type: none"> • Documentation CD-ROM • Rack mount brackets with screws (083-000) • Cable: 6' RJ45 to DB9 Female (500-103) • US/Japan power cord (500-041) • European power cord (500-119) • UK power cord (500-120)

Model: ETS32PR	Contents Description (Part Number, If Applicable)
Part Number: ETS32PR 32 Port Terminal Server/Multi-port Device Server	<ul style="list-style-type: none"> • Documentation CD-ROM • Rack mount brackets with screws (083-007) • Cable: 6' RJ45 to DB9 Female (500-103) • US/Japan power cord (500-041) • European power cord (500-119) • UK power cord (500-120)