

Snapdragon 845 HDK Hardware Development Kit User Guide

Your use of this document is subject to and governed by those terms and conditions in the LICENSE AND PURCHASE TERMS AND CONDITIONS FOR INTRINSYC DEVELOPMENT PLATFORM KITS, which you or the legal entity you represent, as the case may be, accepted and agreed to when purchasing a Development Kit from Intrinsyc Technologies Corporation ("**Agreement**"). You may use this document, which shall be considered part of the defined term "Documentation" for purposes of the Agreement, solely in support of your permitted use of the Development Kit under the Agreement. Distribution of this document is strictly prohibited without the express written permission of Intrinsyc Technologies Corporation and its respective licensors, which they can withhold, condition or delay in its sole discretion.

Lantronix is a trademark of Lantronix, Inc., registered in the United States and other countries. Intrinsyc is a trademark of Intrinsyc Technologies Corporation, registered in Canada and other countries.

Qualcomm® is a trademark of Qualcomm® Incorporated, registered in the United States and other countries. Other product and brand names used herein may be trademarks or registered trademarks of their respective owners.

This document contains technical data that may be subject to U.S. and international export, re-export, or transfer ("export") laws. Diversion contrary to U.S. and international law is strictly prohibited.

© 2020 Lantronix, Inc. All rights reserved.

Contacts

Lantronix, Inc.

7535 Irvine Center Drive, Suite 100
Irvine, CA 92618, USA
Toll Free: 800-526-8766
Phone: 949-453-3990
Fax: 949-453-3995

IES Customer Support Portal

<https://helpdesk.intrinsyc.com>

Lantronix Technical Support

<http://www.lantronix.com/support>

Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at <http://www.lantronix.com/about-us/contact/>

Revision History

Date	Rev.	Comments
May 2018	1.0	Initial release. Intrinsyc document number: ITC-01IMP1335-UG-001
October 2020	A	Version information, installation instructions and package contents clarified

For the latest revision of this product document, please go to: <http://tech.intrinsyc.com>.

Contents

1	Introduction	7
1.1	Purpose	7
1.2	Scope	7
1.3	Intended Audience	7
2	Documents	8
2.1	Applicable Documents	8
2.2	Reference Documents	8
2.3	Terms and Acronyms	8
3	Snapdragon 845 Hardware Development Kit	10
3.1	Introduction	10
3.2	Development Platform Notice	10
3.3	Anti-Static Handling Procedures	10
3.4	Kit Contents	11
3.5	Hardware Identification Label	12
3.6	System Block Diagram	13
4	Processor Board	14
4.1	Processor Board Mechanical Properties	15
4.2	Hardware Specification	15
5	Carrier Board	18
5.1	Dip switch Configuration Options	19
5.2	HDK845 Carrier Board Expansion Connectors	21
5.2.1	Power Option	24
5.2.2	Debug Serial UART header J2103	24
5.2.3	Debug Serial UART over USB J2102	25
5.2.4	JTAG header J2101	25
5.2.5	Sensor IO Expansion Header J2501	27
5.2.6	NFC Expansion Header J2401	28
5.2.7	Headset Jack J1501	29
5.2.8	Audio Inputs Expansion Header J1601	30
5.2.9	Audio Outputs Expansion Header J1602	31
5.2.10	USB TYPE A Connector J1101	32
5.2.11	USB3.1 Type C Connector J1201	33
5.2.12	On Board PCB WLAN Antenna	33
5.2.13	On Board PCB GNSS Antenna	34
5.2.14	GNSS SMA Connector J3802	34
5.2.15	Camera connector	35
5.2.16	Vertigo Sensor connector	38
5.2.17	HDMI Connector	39

5.2.18	PCI Express 1X Slot (Reserve)	40
5.2.19	WiGig Antenna Module	40

6 Display Card 41

6.1	HDK845 Display Card Overview	41
6.2	Display Card Connector J0501	42
6.3	LCD panel	44

List of Figures

Figure 4-1	HDK Processor Board	14
Figure 5-1	HDK Carrier Board	18
Figure 5-2	J0701 12V DC Power Jack	24
Figure 5-3	J2103 3.3V TTL Debug UART	24
Figure 5-4	J2102 Debug UART over USB	25
Figure 5-5	J2101 JTAG header	25
Figure 5-6	J2501 Sensor Expansion Header	27
Figure 5-7	J2401 NFC Expansion Header	28
Figure 5-8	Headphone Jack	29
Figure 5-9	J1601 Audio Inputs Expansion Header	30
Figure 5-10	J1602 Audio Outputs Expansion Header	31
Figure 5-11	J1101 USB2.0 Type A Connector	32
Figure 5-12	On Board PCB WLAN Antennas	33
Figure 5-13	GNSS On Board PCB GNSS Antennas	34
Figure 5-14	GNSS SMA Connector	34
Figure 5-15	Camera Connector (J1701)	35
Figure 5-16	Vertigo Connector (J1701)	39
Figure 5-17	HDMI Connector (J1401)	39
Figure 5-18	Dip Switch S2301-8	39
Figure 5-19	PCIe 1X Slot (J2701)	40
Figure 5-20	WiGig Antenna Module	40
Figure 6-1	HDK Display Card	41
Figure 6-2	Display Card Default Configuration	43

List of Tables

Table 4-1	HDK845 Processor Board Mechanical Properties	15
Table 4-2	HDK845 Hardware Features	15
Table 5-1	HDK845 Carrier Board Mechanical Properties	18
Table 5-2	Dip Switch S2301 HW / SW Configuration	19
Table 5-3	Dip Switch S2302 HW / SW configuration	20
Table 5-4	Carrier Board Expansion options and their usage	21
Table 5-5	Debug UART Header J2103 Pin-out	25

Table 5-6 JTAG Header J2101 Pin out	26
Table 5-7 Sensor Expansion Header J2501 Pin out	27
Table 5-8 NFC Expansion Header J2401 pin out.....	29
Table 5-9 Audio Inputs Expansion Header J1601 Pin out.....	30
Table 5-10 Audio Outputs Expansion Header J1602 Pin out.....	31
Table 5-11 GNSS Antenna Option	34
Table 5-12 MIPI CSI Camera Connector Pinouts (J1701)	35
Table 5-13 MIPI CSI Camera Use Cases.....	38
Table 6-1 HDK845 Display Card Mechanical Properties	41
Table 6-2 Display Power Domains	43

1 Introduction

1.1 Purpose

The purpose of this user guide is to provide primary technical information on the Snapdragon 845 HDK Hardware Development Kit User Guide.

For more background information on this development kit, visit: www.lantronix.com

1.2 Scope

This document will cover the following items on the Snapdragon 845 Har:

- Block Diagram and Overview
- Hardware Features
- Configuration
- Processor board
- Carrier Board
- Display Board for LCD (Optional)

1.3 Intended Audience

This document is intended for users who would like to develop custom applications on the Snapdragon 845 Hardware Development Kit.

2 Documents

This section lists the supplementary documents for the Snapdragon Q 845 Hardware Development Kit.

2.1 Applicable Documents

Reference	Title
A-1	Intrinsyc Purchase and Software License Agreement for the Snapdragon Development Kit

2.2 Reference Documents

Reference	Title

2.3 Terms and Acronyms

Term and acronyms	Definition
AMIC	Analog Microphone
ANC	Audio Noise Cancellation
B2B	Board to Board
BLSP	Bus access manager Low Speed Peripheral (Serial interfaces like UART / SPI / I2C/ UIM)
BT LE	Bluetooth Low Energy
CSI	Camera Serial Interface
DSI	MIPI Display Serial Interface
EEPROM	Electrically Erasable Programmable Read only memory
eMMC	Embedded Multimedia Card
FCC	US Federal Communications Commission
FWVGA	Full Wide Video Graphics Array
GPS	Global Positioning system
HDMI	High Definition Media Interface
HSIC	High Speed Inter Connect Bus

Term and acronyms	Definition
JTAG	Joint Test Action Group
LNA	Low Noise Amplifier
MIPI	Mobile Industry processor interface
MPP	Multi-Purpose Pin
NFC	Near Field Communication
RF	Radio Frequency
SATA	Serial ATA
SLIMBUS	Serial Low-power Inter-chip Media Bus
SPMI	System Power Management Interface (Qualcomm® PMIC / baseband proprietary protocol)
SSBI	Single wire serial bus interface (Qualcomm® proprietary mostly PMIC / Companion chip and baseband processor protocol)
UART	Universal Asynchronous Receiver Transmitter
UFS	Universal Flash Storage
UIM	User Identity module
USB	Universal Serial Bus
USB HS	USB High Speed
USB SS	USB Super Speed

3 Snapdragon 845 Hardware Development Kit

3.1 Introduction

The Snapdragon 845 Hardware Development Kit provides a quick reference or evaluation platform for Qualcomm's Snapdragon 845 processor. This kit is suited for Android / Linux application developers, OEMs, consumer manufacturers, hardware component vendors, video surveillance, robotics, camera vendors, and flash chip vendors to evaluate, optimize, test and deploy applications that can utilize the Qualcomm® Snapdragon™ 845 technology.

3.2 Development Platform Notice

This development platform contains RF/digital hardware and software intended for engineering development, engineering evaluation, or demonstration purposes only and is meant for use in a controlled environment. This device is not being placed on the market, leased or sold for use in a residential environment or for use by the general public as an end user device.

This development platform is not intended to meet the requirements of a commercially available consumer device including those requirements specified in the European Union directives applicable for Radio devices being placed on the market, FCC equipment authorization rules or other regulations pertaining to consumer devices being placed on the market for use by the general public.

This development platform may only be used in a controlled user environment where operators have obtained the necessary regulatory approvals for experimentation using a radio device and have appropriate technical training. The device may not be used by members of the general population or other individuals that have not been instructed on methods for conducting controlled experiments and taking necessary precautions for preventing harmful interference and minimizing RF exposure risks. Additional RF exposure information can be found on the FCC website at <http://www.fcc.gov/oet/rfsafety/>

3.3 Anti-Static Handling Procedures

The Snapdragon 845 Hardware Development Kit has exposed electronics and chipsets. Proper anti-static precautions should be employed when handling the kit, including but not limited to:

- Using a grounded anti-static mat
- Using a grounded wrist or foot strap

3.4 Kit Contents

The Snapdragon 845 Hardware Development Kit includes the following:

- Snapdragon 845 processor board with the Snapdragon™ 845 (SDA845) processor main CPU board
- Mini-ITX form-factor carrier board for I/O and connecting with external peripherals
- 12V power adapter
- USB type-C cable and charger
- 5.7" (1440x2560) TFT Display card (Additional Accessory)
- Lithium ion battery 4.4V/3000mAh

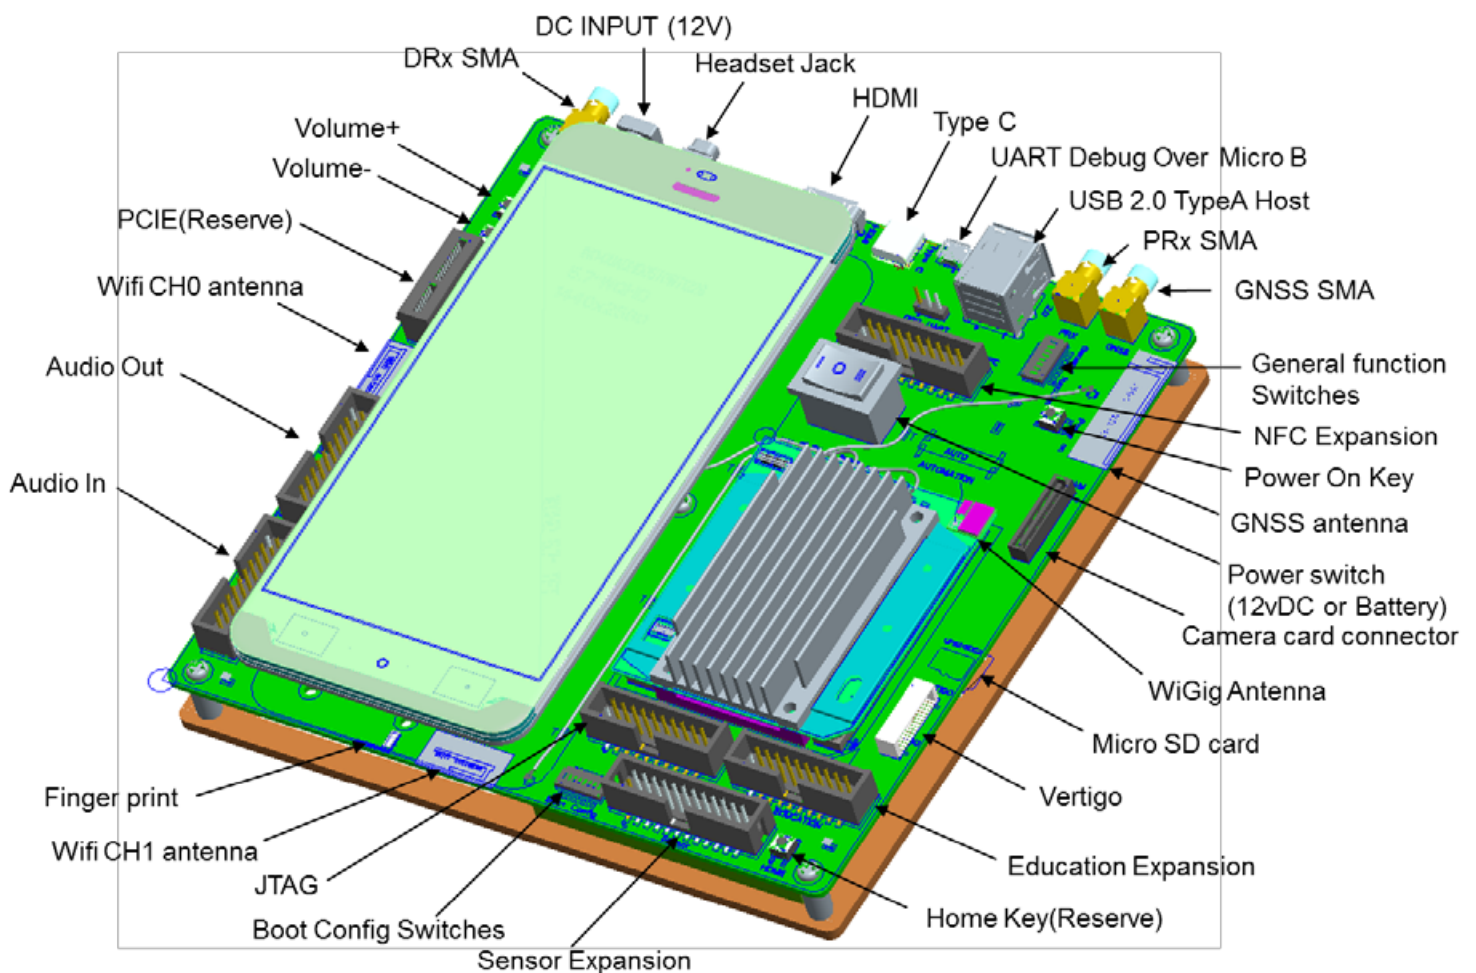


Figure 3-1 Assembled Snapdragon 845 Hardware Development Kit top

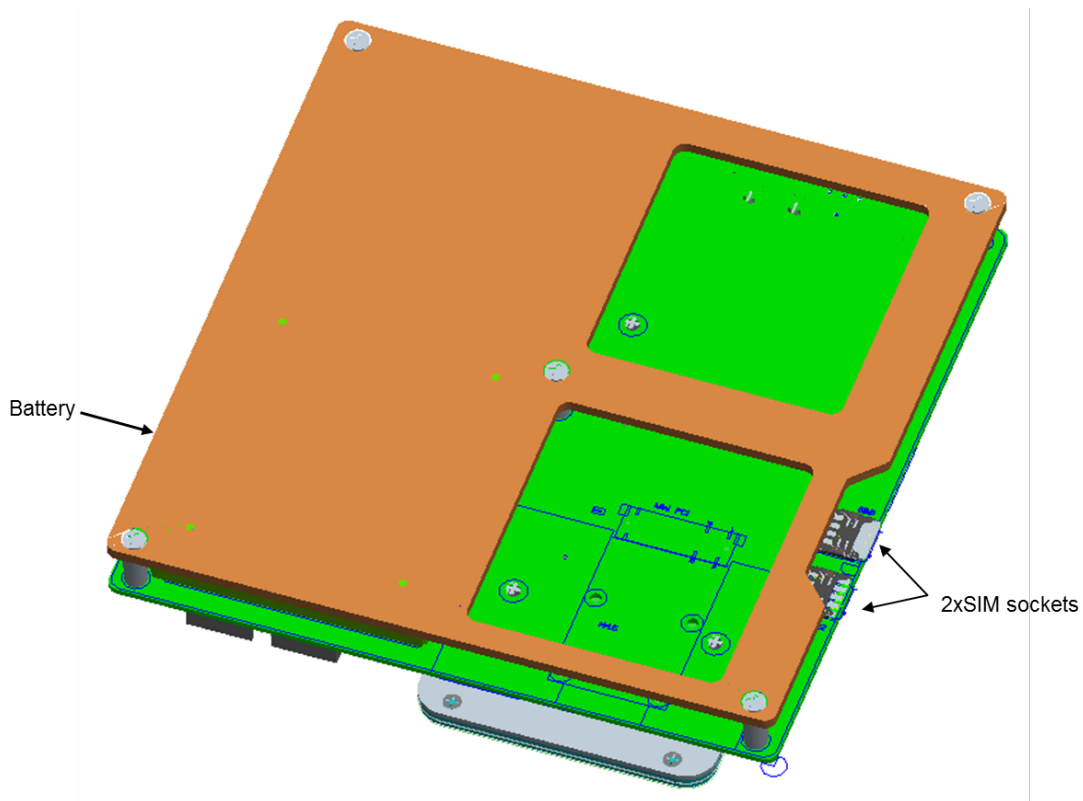


Figure 3-2 Assembled Snapdragon 845 Hardware Development Kit bottom

The development kit comes with Android software pre-programmed on the CPU board or processor board. Contact Lantronix for availability of camera modules, sensor boards, and other accessories:
sales@lantronix.com

3.5 Hardware Identification Label

Labels are present on the processor board. The following information is conveyed:

- Serial Number
- WIFI MAC address

Refer to <http://tech.intrinsyc.com/projects/serialnumber/wiki> for more details about locating the serial number, as this will be needed to register the development kit. To register a development kit, visit: <https://tech.intrinsyc.com/account/register>.

Note: keep the serial number for warranty purposes.

3.6 System Block Diagram

The following diagram explains the interconnectivity and peripherals on the development kit.

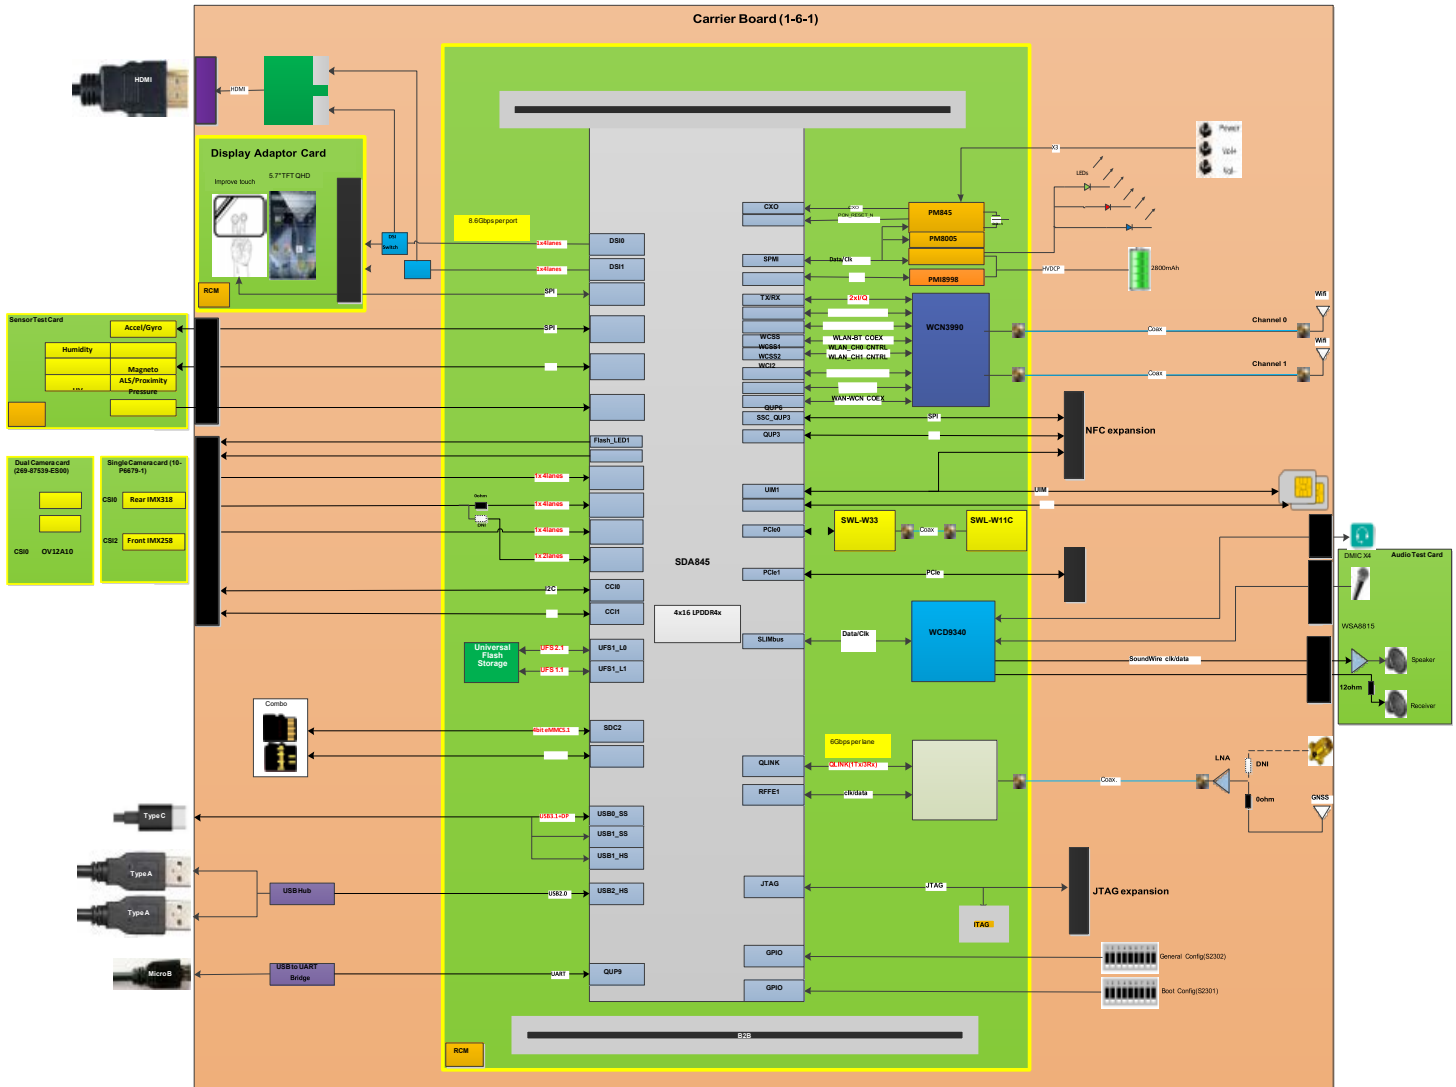


Figure 3-3 HDK845 Block Diagram

4 Processor Board

The CPU or processor board provides the basic common set of features with minimal integration efforts for end users. It contains the followings:

- Snapdragon™ 845 (SDA845) main application processor
- Memory: 128GB UFS 2.1 + LPDDR4x (PoP) up to 1866MHz 6GB RAM
- PMIC: PM845 + PM8005 + PMI8998
- SMB1355 Parallel charger
- WCN3990 Atheros Wi-Fi + BT +FM combo chip over SLIMbus, Analog IQ, UART, PCM
- WCD9340 Audio Code
- SDR845 GNSS support

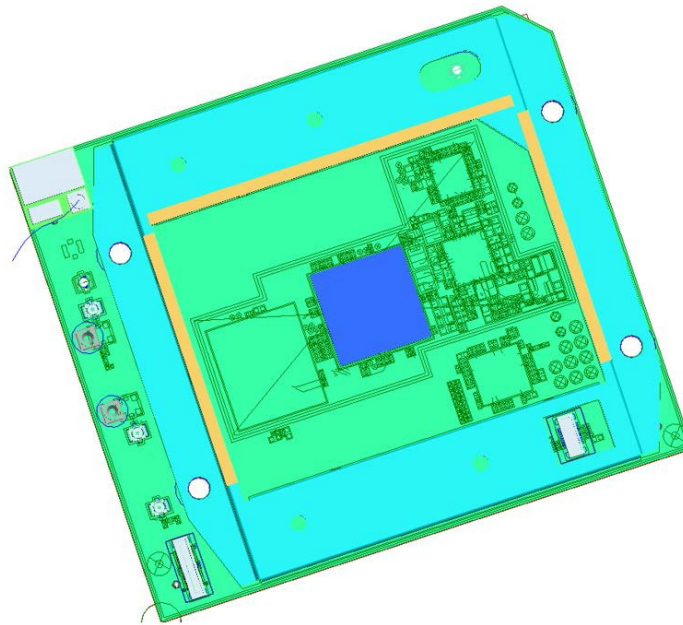


Figure 4-1 HDK Processor Board

The HDK845 processor board is where all the processing occurs. It is connected to the carrier board via two 240-pin high speed board-to-board connector. The purpose of the connectors is to bring out essential signals such that other peripherals can interface with the platform.

4.1 Processor Board Mechanical Properties

Table 4-1 HDK845 Processor Board Mechanical Properties

Dimension	42 cm ² (60 mm x 70 mm)
Interface	two 240-pin high speed board-to-board connector
Thermal	A top side heat sink and a bottom side heat conductive metal plate are installed by default.

4.2 Hardware Specification

Table 4-2 HDK845 Hardware Features

Subsystem / Connectors	Feature Set	Description	Specification
Chipset	SDA845	Qualcomm® 845 Snapdragon™ Processor	64-bit applications processor (Kryo 385) with 2 MB L3 cache Quad high-performance Kryo cores targeting up to 2.6 GHz – Gold cluster with 256 kB L2 cache per core Quad low-power Kryo cores targeting up to 1.7 GHz – Silver cluster with 128 kB L2 cache per core

Subsystem / Connectors	Feature Set	Description	Specification
	PMIC (PM845, PM8005 & PMI8998)	Qualcomm® PMIC, Companion PMIC for SDA845 processor	<p>PM845 -- Primary core PMIC. PON, POFF, and reset master. Generates system clocking and tightly coupled chipset power.</p> <p>PM8005 -- Secondary core PMIC. Delivers tightly coupled chipset power from opposite side of the MSM™ device to optimize power corridors on the PCB</p> <p>PMI8998 -- the interface PMIC. Most of the input power management functions (including charger) and user interfaces</p>
Memory	LPDDR4x	6GB LPDDR4X	LPDDR4x up to 1866MHz
	UFS	128GB UFS2.1	UFS 2.1
Connectivity	Wi-Fi 2.4 GHz/ 5GHz via WCN3990 – Analog IQ, WSI 2.0,	Wi-Fi Atheros WCN3990Wi-Fi + BT +FM Combo Chip	802.11a/b/g/n/ac 2.4/5.0 GHz via WCN3990 over analog IQ, WSI 2.0,
	BT 2.4 GHz via WCN3990 – UART / SLIMbus	Wi-Fi Atheros WCN3990 Wi-Fi + BT +FM Combo Chip	Support BT 5.0 + HS and backward compatible with BT 1.x, 2.x + EDR
	GNSS via SDR845 –Qlink Qualcomm Proprietary Protocol	GNSS Frontend	GPS/ GLONASS/ COMPASS/Galileo
	WiGig via SWL-W33 – PCIe Gen2	SWL-W33 BB/MAC and SWL-W11C RF based SiP modules	802.11ad-60 GHz
RF	2xWLAN / BT	Connect to antenna on carrier board via coax cable	2.4/ 5 GHz
	1x GNSS	Connect to antenna on carrier board via coax cable	GPS/ GLONASS/ COMPASS /Galileo

Subsystem / Connectors	Feature Set	Description	Specification
	1x WiGig	Connect to antenna on processor board via coax cable	802.11ad-60 GHz
Audio	1 x Headset Output	Headset/ headphone output	Analog differential output
	2 x Loud-speaker	2 x loud-speaker output	Digital output
	1 x Earpiece output	Earpiece output	Analog differential output
	3 x analog MICs	Analog MIC input	Analog differential input
	4 x digital MICs	Digital MIC input	Digital input
Camera	4 x MIPI CSI	1x 120pin Camera Connector for CSI0, CSI1, CSI2 and CSI3	MIPI Allie Specification v1.2
Display	2 x MIPI DSI (DSI0 & DSI1) + Touch 100-pin display Connector	100- pin display connector	MIPI Allie Specification v1.2. MIPI D-PHY Specification v0.65, v0.81, v0.90, v1.01 ,v1.2
USB	2 x Type-A USB 2.0 HOST 1 x Type-C USB 3.1	Type-A USB 2.0 HOST Type-C USB 3.1	USB2.0 Hub USB3.1
PCIe	2 x PCIe	PCIe0 for WiGig module PCIe1 for PCIe 1X Slot (Reserve)	PCIe0 is a Gen2 1-lane interface. PCIe1 is a Gen3 1-lane interface.
Connectors	2 x 240pin processor board connector	Connector for Processor board	2 x 240 pin B2B connector

5 Carrier Board

The HDK845 Carrier board is a Mini-ITX form factor board with various connectors used for connecting different peripherals. The following are the mechanical properties of the carrier board:

Table 5-1 HDK845 Carrier Board Mechanical Properties

Dimension	289 cm ² (170mm x 170mm)
Form Factor	Mini-ITX
Major Interfaces	Processor Board: 2x240 pin board to board connector Display: 100 pin board to board
Thermal	Thermal pad is placed between the Processor board and carrier board

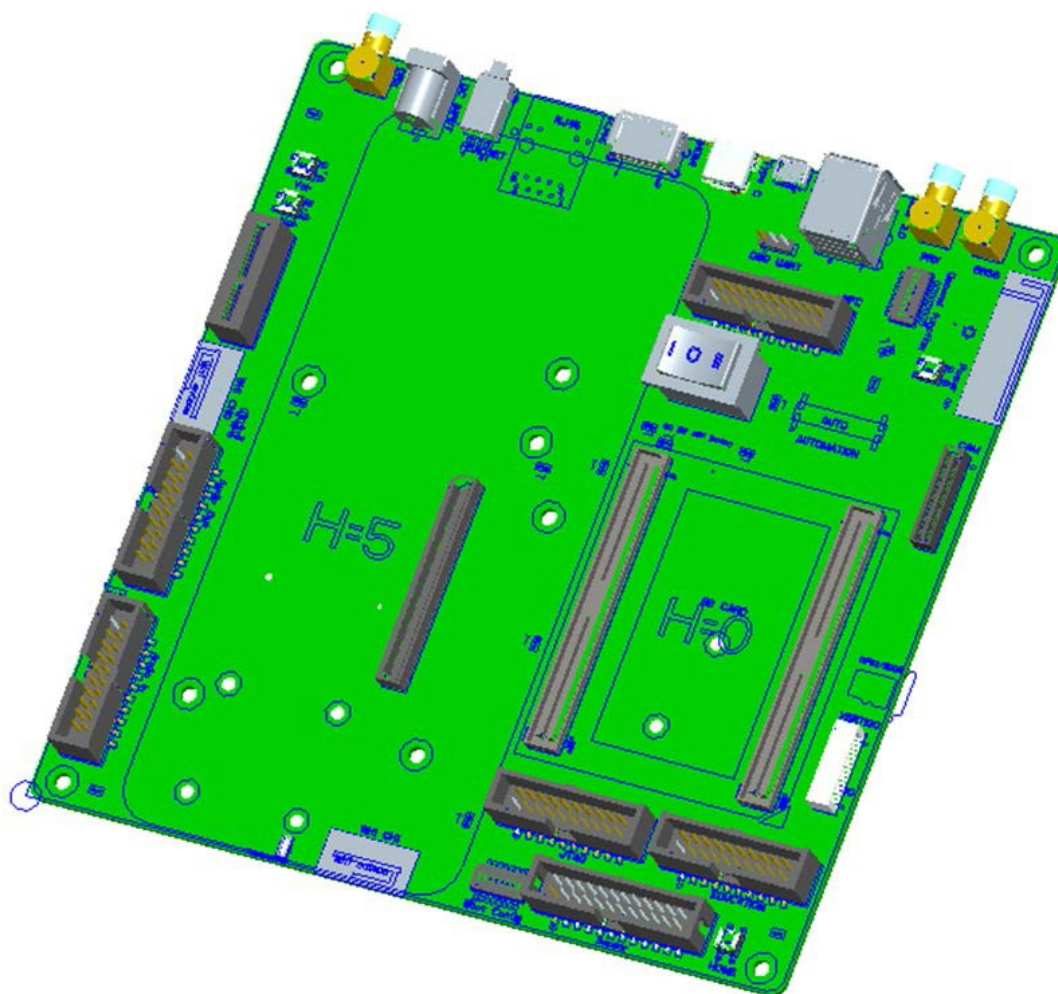


Figure 5-1 HDK Carrier Board

5.1 Dip switch Configuration Options

There is one DIP switch S2301 on the south top side of the HDK845 carrier board. The 8-bit switch allows the user to control the system configuration and boot options. Table below outlines

Table 5-2 Dip Switch S2301 HW / SW Configuration

Function	DIP Switch	Description	Notes
FORCED_USB_BOOT	S2301-1	Toggles between FORCE USB boot and EDL mode. Enables FORCE USB (GPIO 57) when DIP	Default out of the box configuration is OFF
WATCHDOG_DISABLE	S2301-2	Enables WATCHDOG_DISABLE when DIP switch turned on. Controlled by SDA-GPIO 101	Default out of the box configuration is OFF
BOOT_CONFIG[1]	S2301-3	Enables SDA boot configuration 1 when DIP switch turned on. Controlled by SDA-GPIO 99	Default out of the box configuration is OFF
BOOT_CONFIG[2]	S2301-4	Enables SDA boot configuration 2 when DIP switch turned on. Controlled by SDA-GPIO100	Default out of the box configuration is OFF
BOOT_CONFIG[3]	S2301-5	Enables SDA boot configuration 3 when DIP switch turned on. Controlled by SDA GPIO133	Default out of the box configuration is OFF
N/C	S2301-6	NA	NA
DSI0_SW_SEL(Reserve)	S2301-7	Select DSI0 data path between display card and HDMI Default route DSI0 to display card	Default out of the box configuration is OFF This DIP is default disabled. DSI0 data path is default simultaneously controlled by S2301-8. To separately control DSI0 path with this DIP needs HW change (DNI R3404, SMT R3403).

Function	DIP Switch	Description	Notes
DSI1_SW_SEL	S2301-8	Select DSI1 data path between display and HDMI Default route DSI1 to display card	Default out of the box configuration is OFF DSI1 will be routed to HDMI by turning on DIP

There is another DIP switch S2302 on the north top side of HDK845 carrier board. The 8-bit switch allows the user to control the system configuration and boot options.

Table 5-3 Dip Switch S2302 HW / SW configuration

Function	DIP Switch	Description	Notes
CHARGE_DISABLE	S2302-1	Disable charge when DIP switch turned on	Default out of the box configuration is OFF which enables system charge from USB Note: make sure turn on this switch when DC-12V input and USB are both present
N/C	S2302-2	NA	Not used in HDK845
HUB_RESET_SW	S2302-3	Enables hardware reset from general switch(J2204) when DIP switch turned on	Default out of the box configuration is OFF Note: Default HUB reset control is from s/w, hardware rework is needed to enable this function
MSM_PS_HOLD	S2302-4	Enables the JTAG_PS_HOLD mode when DIP switch turned on	Default out of the box configuration is OFF
AMOLED_LCD_SEL	S2302-5	Select power supplier configuration between AMOLED and LCD	Default out of the box configuration is OFF Note: LCD type display panel is supported by default
QUP0_SPI_SEL	S2302-6	Select QUP0 path between NFC(J2401) and Education(J2801)	Default out of the box configuration is OFF Note: QUP0 is default
QUP15_SPI_SEL	S2302-7	Select QUP15 path between display card (J1301) and onboard fingerprint(J3102)	Default out of the box configuration is OFF. Note: QUP15 is default routed to onboard fingerprint

Function	DIP Switch	Description	Notes
QUP_TP_CONFIG	S2302-8	Config the signals connected to QUP_TP	Default out of the box configuration is OFF Note: SSC SPI2 is routed

WARNING: Before making any changes to the dip switch, make sure to note down the previous configuration.

5.2 HDK845 Carrier Board Expansion Connectors

The table below lists the connectors, expansions and their usages on the carrier board:

Table 5-4 Carrier Board Expansion options and their usage

Domain	Description	Specification	Usage
Power	AC / Barrel charger	12 V DC Power Supply 5 A	Power Supply
	Battery connector	8 pin header	For providing power from 4.4V/2850mAh battery
Debug Serial via USB	Debug Serial UART console over USB for development	USB Micro B connector	Development Serial Connector for debug output via USB
JTAG	OS / Firmware /QFROM Programming / Debugging JTAG	Standard 20-pin connector, ARM and Open DSP – Lauterbach	QFROM / eMMC / Platform EEPROM programming ARM / Open DSP debugging
Buttons	Power	SMD Button	Power Button for Suspend / Resume and Power off
	Volume +	SMD Button	Volume +Key
	Volume –	SMD Button	Volume – Key
	Home	SMD Button	Reserved button for Home or general purpose
NFC Board Header	20 pin NFC expansion connectors	NA	NA
UFS/Micro SD Combo	UFS/Micro SD card	UFS card/4bit Micro SD card support	External Storage
Audio Jack	Audio Jack Supported by WCD9340	Nomal Open, support US Standard CTIA headset by default	Audio headset support

Domain	Description	Specification	Usage
3-Digital Microphone via audio input expansion header	Audio expansion Supported by WCD9340	Digital Audio header	For Digital audio input for Digital MIC, I2S codec, Slim bus interface.
3-Analog Microphone via audio input expansion header	Audio expansion Supported by WCD9340	Analog Audio header	For Analog audio input for Analog MIC (differential signal)
2-Loud Speaker via audio output expansion header	Audio expansion Supported by WCD9340	Analog Audio header	For loud speaker output after signal has been processed
Earpiece via audio output expansion header	Audio expansion Supported by WCD9340	Analog Audio header	For earpiece output after signal has been processed
	PCIe1 for PCIe 1X Slot (Reserve)	Gen3 1-lane interface.	General-purpose peripherals, such as Gigabit Ethernet, Gigabit Wi-Fi, or PCIe based audio / video processors
USB 2.0 Host	USB 2.0 Host	Type-A dual port header	For Mouse and Keyboard
USB 3.1	USB 3.1	Type-C header	Transfer data to and from CPU
WLAN Antenna	2X PCB Antenna	2.4 – 5 GHz	Antenna to Processor board
Domain	Description	Specification	Usage
GNSS Antenna	PCB Antenna	GPS: 1574.42 MHz – 1576.42 MHz GLONASS: 1587 MHz – 1606 MHz COMPASS: 1559.05 to 1563.14MHz Galileo: 4.092MHz BW (centered on 1575.42MHz)	Antenna to Processor board
LED	3xLED	Red: PMIC Driven Green: PMIC Driven Blue: PMIC Driven	Red: General purpose Green: General purpose Blue: General purpose

Domain	Description	Specification	Usage
LCD Display and Touch connector	100 pin for LCD signals from B2B boards for display	4-lane MIPI DSI0 , DSI1 I2C/SPI/GPIO Backlight MIPI Allie Specification v1.2 MIPI D-PHY Specification v0.65,v0.81, v0.90, v1.01, V1.2 MIPI C-PHY Specification v1.0	Can work as one dual DSI or both independent display
Sensor header	24 pin sensor header	24 pin sensor header	Header to connect sensor board.
SIM Card	WWAN SIM card connector (optional)	2x 4bit Micro SIM card support	For WWAN mini PCI express cards (for internal use only – not supported)
CSI Camera connectors	1 x 120pin connector with MCLK, GPIOs, CCI 1 x 120pin connector with MCLK, GPIOs, CCI	Supports CSI0, CSI1 and CSI2 via one 120pin connector 3 x MIPI-CSI each 4 lane External flash driver control Support for 3D camera configuration Separate MCLK / CCI control Supports CSI3 via one 23pin connector on Processor board 1 x MIPI-CSI 2 lane Separate MCLK / CCI control MIPI Allie Specification v1.2 for Camera Serial Interface	Single Rear, Front camera Dual Camera Iris Camera

The following sections will provide in depth information on each expansion headers and connectors on the carrier board. The information listed below is of particular use for those who want to interface other external hardware devices with the HDK845. **Before connecting anything to the development kit, ensure the device meets the specific hardware requirements of the processor.**

5.2.1 Power Option

The HDK development kit power source connects to the 12V DC power supply jack J0701. Starting from the power jack, the 12V power supply branches off into different voltage rails via step down converters on the carrier board and PMIC on the Processor board. The processor board is powered by 3.9V via Silergy step down converter U0703 on the carrier board.

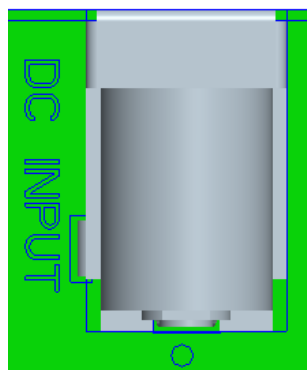


Figure 5-2 J0701 12V DC Power Jack

The processor board includes three PMIC modules. The functionalities of the three modules are outlined below.

PM845 and PM8005 core PMICs are used for:

- Source various regulated power rails
- Source system clock

PMI8998 Interface PMIC is used for:

- Source various regulated power rails
- Support for battery charging on the PM845 is configurable on the platform. The carrier board uses a 3.9V constant power input and battery to the processor board. A DIP switch is used to enable/disable charge function. Make sure turn off battery charging when 12V DC in is used and USB charger is inserted.

5.2.2 Debug Serial UART header J2103



Figure 5-3 J2103 3.3V TTL Debug UART


The header consists of TX, RX and GND pins. It is a 3.3V TTL UART header. To get the serial terminal working with a PC, the following cable (or similar) is needed

<http://www.digikey.ca/product-detail/en/TTL-232R-RPI/768-1204-ND/4382044>

Table 5-5 Debug UART Header J2103 Pin-out


Description	Signal	pin	FTDI RPI cable connection
SDA UART RX (GPIO5)	QUP9_UART_RX	J2103[1]	Orange
SDA UART TX (GPIO4)	QUP9_UART_TX	J2103[2]	Yellow
GND	GND	J2103[3]	Black

5.2.3 Debug Serial UART over USB J2102

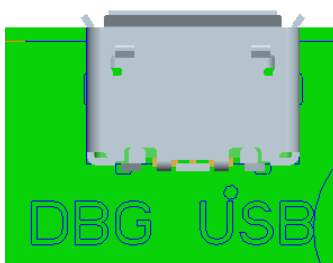**Figure 5-4 J2102 Debug UART over USB**

The UART connection used on the HDK845 is a USB micro B connector (J2102). This debug UART is available over USB via the FTDI FT232RQ chip on the carrier board. To get the serial terminal working with a PC, user needs to ensure that the appropriate FTDI drivers are installed.

5.2.4 JTAG header J2101

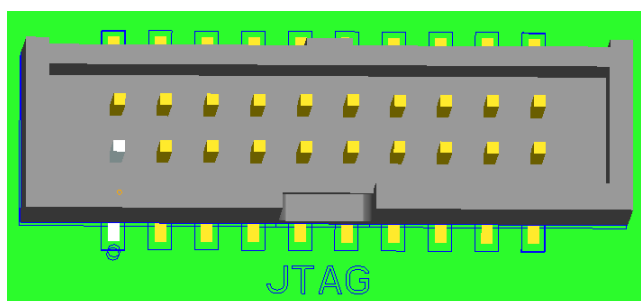**Figure 5-5 J2101 JTAG header**

This connector provides a JTAG interface to the main processor by which users can connect a JTAG (Lauterbach / USB Wiggler) 20 pin ARM JTAG.

NOTE: It does not provide software support for JTAG

Table 5-6 JTAG Header J2101 Pin out

Description	Signal	Pin NO	Description	Signal	Pin NO
GND	GND	J2101[2]	JTAG Power detect	JTAG_PWR	J2101[1]
GND	GND	J2101[4]	Target RESET_N signal	TRST_N	J2101[3]
GND	GND	J2101[6]	TDI Signal (Target DATA IN)	TDI	J2101[5]
GND	GND	J2101[8]	TMS Signal	TMS	J2101[7]
GND	GND	J2101[10]	TCK Signal	TCK	J2101[9]
GND	GND	J2101[12]	JTAG_RTCK signal	JTAG_RTCK	J2101[11]
GND	GND	J2101[14]	TDO Signal (Target Data Out)	TDO	J2101[13]
GND via 4.7K Ω pull down	GND	J2101[16]	Source RESET_N signal	SRST_N	J2101[15]
GND	GND	J2101[18]	NC	NC	J2101[17]
JTAG detect N signal	DET_N	J2101[20]	GND via 4.7K Ω pull down	GND	J2101[19]

5.2.5 Sensor IO Expansion Header J2501

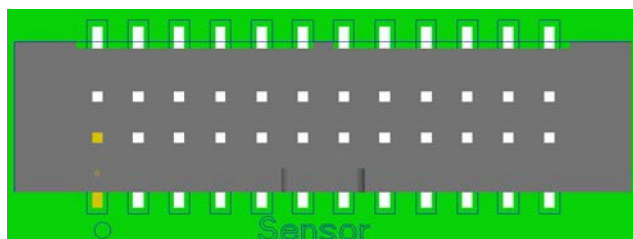


Figure 5-6 J2501 Sensor Expansion Header

The sensor expansion header J2501 allows for a 24-pin connection to an optional sensor board. If user application does not require a sensor, then this header can be used for other applications that require I2C or GPIO input and output connections.

Table 5-7 Sensor Expansion Header J2501 Pin out

Description	Signal	Pin NO	Description	Signal	Pin NO
SSC I2C1 serial data	SSC_I2C1_SD A	J2501[1]	Accelerometer interrupt input to processor via GPIO117	ACCEL_INT	J2501[2]
SSC I2C1 serial clock	SSC_I2C1_SC L	J2501[3]	Cap interrupt input to processor via GPIO123	PRESS_INT_ N	J2501[4]
Sensor reset signal from processor to sensor via GPIO63	MEMS_RESE T_N	J2501[5]	Gyroscope interrupt input to processor via GPIO118	GYRO_INT	J2501[6]
Sensor IO PWR 1.8 V VREG_LVS2 A	SENS_IO_PW R	J2501[7]	Sensor Analog power supply from VREG_L19A 2.85V or 3.3V	SENS_ANA_P WR	J2501[8]
GND	GND	J2501[9]	GND	GND	J2501[10]
HRM interrupt/ configurable GPIO73	HRM_INT	J2501[11]	Touch screen interrupt input from processor via GPIO125	TS_INT_N	J2501[12]

Description	Signal	Pin NO	Description	Signal	Pin NO
SSC SPI-1 chip select 2	SSC_SPI1_CS 1_N	J2501[13]	Alternate sensor interrupt input to processor via GPIO120	ALSP_INT_N	J2501[14]
MISC GPIO for sensor via GPIO62	SDA_GPIO62	J2501[15]	Digital Compass interrupt input to processor via GPIO119	MAG_DRDY_I NT	J2501[16]
NC	NC	J2501[17]	Hall sensor interrupt input to processor via GPIO124	HALL_INT_N	J2501[18]
SSC SPI-1 chip select 1	SSC_SPI1_CS 0_N	J2501[19]	SSC SPI-1 data master out/ slave in	SSC_SPI_1_M OSI	J2501[20]
SSC SPI-1 clock	SSC_SPI1_CL K	J2501[21]	SSC SPI-1 data master in/ slave out	SSC_SPI_1_M ISO	J2501[22]
NC	NC	J2501[23]	SSC SPI-1 chip select 3	SSC_SPI1_CS 2_N	J2501[24]

In summary, if sensor application is not needed, this expansion header can provide SSC SPI1 and I2C. Refer to the schematic for more details and consider the power before connecting anything to this header.

5.2.6 NFC Expansion Header J2401

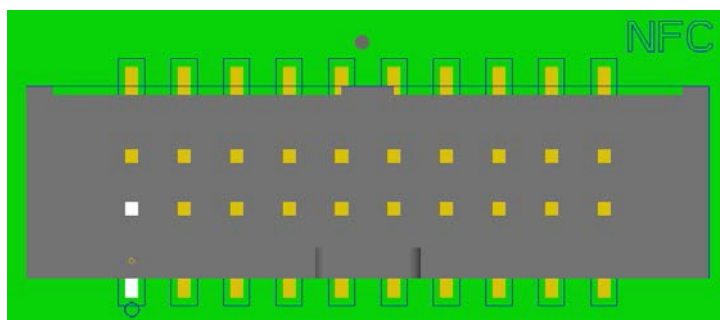


Figure 5-7 J2401 NFC Expansion Header

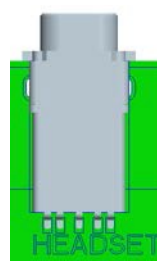
The NFC expansion header provides a 20-pin connector for attaching an optional NFC board. This header also allows user to connect to the free GPIOs and I2C lines when NFC is not used; therefore, enabling other use cases. Refer to the table below for detailed information regarding the signals that are being brought out by this connector.

Table 5-8 NFC Expansion Header J2401 pin out

Description	Signal	Pin NO	Description	Signal	Pin NO
QUP0	NFC_SPI_CLK	J2401[1]	QUP0	NFC_SPI_MISO	J2401[2]
NFC power request via GPIO116	NFC_ESE_PWR_REQ	J2401[3]	SIM present GPIO via SDA GPIO112	UMI1_DET_N	J2401[4]
SIM Card DATA line (UIM1) via	UIM1_DATA	J2401[5]	3.9V PROCESSOR BOARD	VPH_PWR	J2401[6]
SIM Card Reset line (UIM1) via SDA GPIO111	UIM1_RESET	J2401[7]	NFC interrupt IRQ pin via SDA GPIO63	NFC_IRQ	J2401[8]
SIM CLK line (SIM1) via SDA GPIO110	UIM1_CLK	J2401[9]	NFC Disable signal via SDA GPIO12	NFC_ENABLE	J2401[10]
1.8V Voltage regulator supply max 150mA via PM845	VREG_L9A_1 P8	J2401[11]	QUP3 I2C SDA line	NFC_I2C3_SDA	J2401[12]
1.8V Voltage regulator supply via PM845	VREG_S4A_1 P8	J2401[13]	QUP3 I2C CLK line	NFC_I2C3_SCL	J2401[14]
GND	GND	J2401[15]	NFC clock request signal via PM GPIO21	NFC_LNBBCLK3_EN	J2401[16]
PM845 free running clock via buffer	LN_BB_CLK3_NFC	J2401[17]	NFC download request via SDA GPIO62	NFC_DWL_REQ	J2401[18]
QUP0 via SDA GPIO3	NFC_SPI_CS_N	J2401[19]	QUP0 via SDA GPIO1	NFC_SPI_MOSI	J2401[20]

In general, if there is no need for NFC application, this expansion header can provide two GPIOs, I2C, free running clocks, and enable voltage/ power source to external peripherals.

5.2.7 Headset Jack J1501

**Figure 5-8 Headphone Jack**

The headset jack (J1501) is standard 3.5mm, Normal Open style. The hardware supports US Standard CTIA headset by default.

5.2.8 Audio Inputs Expansion Header J1601

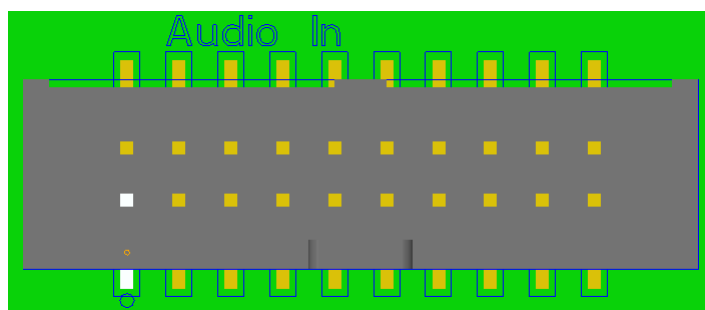


Figure 5-9 J1601 Audio Inputs Expansion Header

This header expansion provides the following audio inputs:

- 3 digital mics
- 3 analog mics
- Voltage rails to support analog and digital mics

The table below outlines the pin out information of the audio inputs expansion header J1601:

Table 5-9 Audio Inputs Expansion Header J1601 Pin out

Description	Signal	Pin NO	Description	Signal	Pin NO
Analog MIC1 positive differential input	CDC_IN1_P	J1601[1]	Analog MIC1 negative differential input	CDC_IN1_N	J1601[2]
Analog MIC2 positive differential input	CDC_IN3_P	J1601[3]	Analog MIC2 negative differential input	CDC_IN3_N	J1601[4]
MIC bias output voltage 1	MIC_BIAS1	J1601[5]	MIC bias output voltage 3	MIC_BIAS3	J1601[6]
Analog MIC3 positive differential input	CDC_IN4_P	J1601[7]	Analog MIC3 negative differential input	CDC_IN4_N	J1601[8]
MIC bias output voltage 4	MIC_BIAS4	J1601[9]	3.3V power supply max 500mA	MB_VREG_3P3	J1601[10]
GND	GND	J1601[11]	GND	GND	J1601[12]
Clock for digital MIC3	CDC_DMIC_C LK1	J1601[13]	Clock for digital MIC1	CDC_DMIC_C LK2	J1601[14]
Digital MIC3 data line	CDC_DMIC_D ATA1	J1601[15]	Digital MIC1 data line	CDC_DMIC_D ATA2	J1601[16]
1.8V power supply max 300mA	VREG_S4A_1 P8	J1601[17]	Clock for digital MIC2	CDC_DMIC_C LK3	J1601[18]
GND	GND	J1601[19]	Digital MIC2 data line	CDC_DMIC_D ATA3	J1601[20]

5.2.9 Audio Outputs Expansion Header J1602

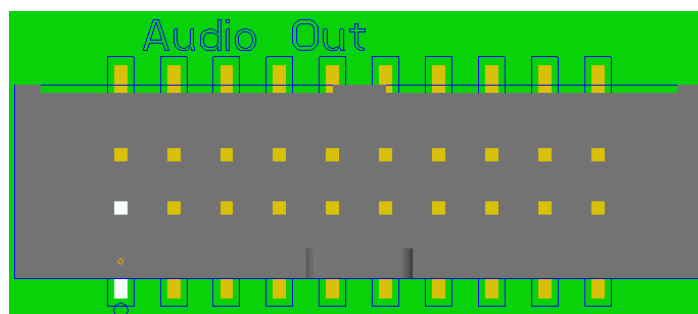


Figure 5-10 J1602 Audio Outputs Expansion Header

This header expansion provides the following audio outputs:

- 2 differential analog audio line out
- 2 single ended analog audio line out
- 1 differential analog earpiece amplifier output (no external amp needed)
- 2 speaker amplifiers enable control
- Voltage rails to support analog and digital mics

Table 5-10 Audio Outputs Expansion Header J1602 Pin out

Description	Signal	Pin NO	Description	Signal	Pin NO
Analog audio line out 1, positive differential output	LINE_OUT1_P	J1602[1]	Analog audio line out 1, negative differential output	LINE_OUT1_N	J1602[2]
Analog audio line out 2, positive differential output	LINE_OUT2_P	J1602[3]	Analog audio line out 2, negative differential output	LINE_OUT2_N	J1602[4]
Audio line single end outputs GND reference (connect to ground)	LINE_REF	J1602[5]	3.3V output power supply	MB_VREG_3P3	J1602[6]
Analog audio line out 1, single ended output	LINE_OUT1_P	J1602[7]	Analog audio line out 2, single ended output	LINE_OUT2_P	J1602[8]

Description	Signal	Pin NO	Description	Signal	Pin NO
Analog earpiece amplifier out, positive differential output	CDC_EAR_P	J1602[9]	Analog earpiece amplifier out, negative differential output	CDC_EAR_M	J1602[10]
GND	GND	J1602[11]	3.8V output power supply	VPH_PWR	J1602[12]
Digital sound wire data for WSA8810/ WSA8815 smart speaker amplifier	CDC_SWR_C LK	J1602[13]	Digital sound wire data for WSA8810/ WSA8815 smart speaker amplifier	CDC_SWR_D ATA	J1602[14]
Speaker amplifier enable 1	WSA_EN	J1602[15]	Speaker amplifier enable 2	SPKR_AMP_EN2	J1602[16]
1.8V output power supply	VREG_S4A_1 P8	J1602[17]	12V output power supply	DC_IN_12V	J1602[18]
5.0V output power supply	MB_VREG_5 P 0	J1602[19]	GND	GND	J1602[20]

5.2.10 USB TYPE A Connector J1101


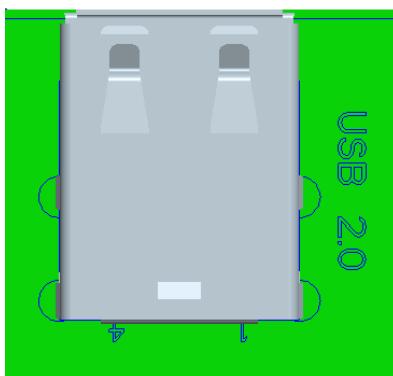


Figure 5-11 J1101 USB2.0 Type A Connector

The on-board USB type A connector supports 2x USB 2.0 host interface.

5.2.11 USB3.1 Type C Connector J1201

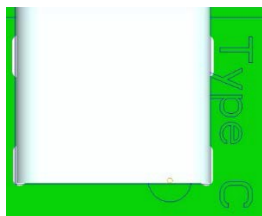

The on-board Type-C connector supports USB 3.1 Gen1, which also supports Type-C with DisplayPort V1.3

5.2.12 On Board PCB WLAN Antenna

The HDK845 carrier board has two on-board PCB antennas that connects to the WCN3990 WiFi module on the processor board via coaxial cables that attaches to MH4L receptacles. These antennas connect to the processor board in the following configuration:

- WIFI CH0 on the carrier board connects to ANT0 on the WCN3990 WiFi module
- WIFI CH1 on the carrier board connects to ANT1 on the WCN3990 WiFi module

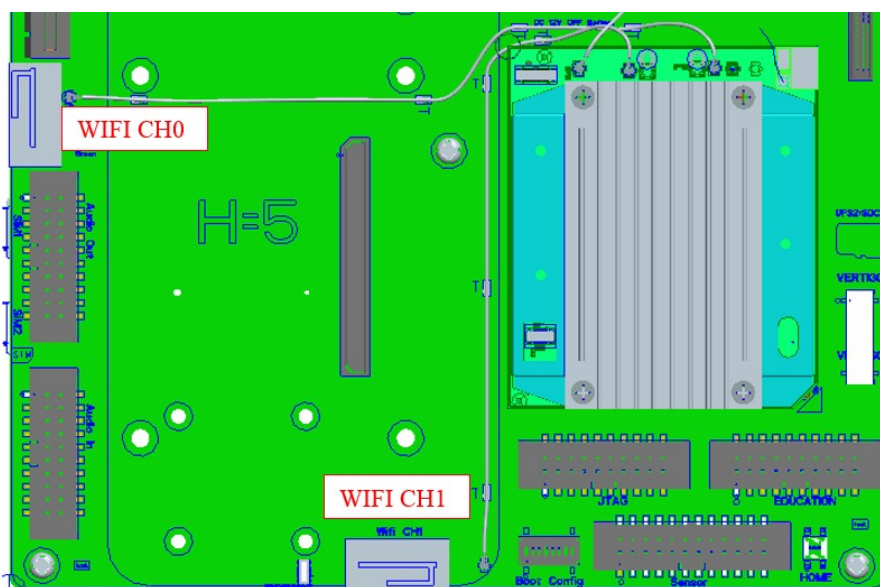


Figure 5-12 On Board PCB WLAN Antennas

5.2.13 On Board PCB GNSS Antenna

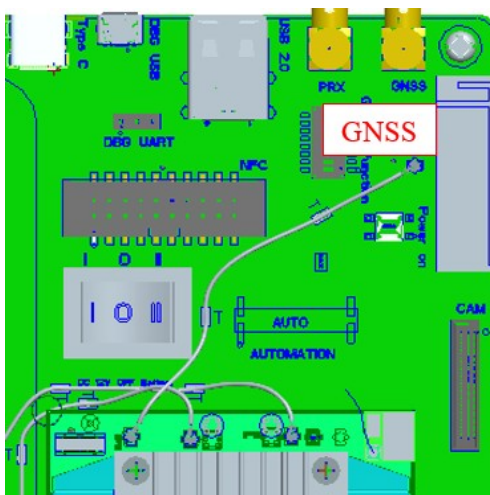


Figure 5-13 GNSS On Board PCB GNSS Antennas

The HDK845 carrier board has one on-board PCB antennas on the bottom side that connects to the Processor board via coaxial cable that attaches to MH4L receptacles. The on-board antenna is connected to the Processor board by default, meanwhile, there are 0-ohm jumpers for user to use an external GNSS antenna via the SMA connector. The option pads are between the antenna and the eLNA input.

Table 5-11 GNSS Antenna Option

Option	R3804	R3805
On-Board	DNI	Stuff
SMA connector	Stuff	DNI

5.2.14 GNSS SMA Connector J3802

The GNSS SMA connector is reserved for an external antenna. Refer to Table 5-11 GNSS Antenna Option, stuff R3804 and remove R3805 to make the path active.



Figure 5-14 GNSS SMA Connector

5.2.15 Camera connector

The HDK845 development kit supports three 4-lane MIPI camera interfaces via a 120pin connector, it also supports one 2-lane MIPI camera interface via a 23-pin connector on the Processor board.

The following are some features of the camera connectors:

- 3 x 4 lane MIPI CSI signals, CSI0, CSI1 and CSI2
- 1 x 2 lane MIPI CSI signals, CSI3 reserved on Processor board
- Support for 3D camera configuration
 - Separate I2C control (CCI0, CCI1)
- Self-regulated camera modules can be powered with 3.3V power (MB_VREG_3P3)
- Uses Amphenol 11826-ACA connector for exposing MIPI, MCLK, CCI, GPIOs and Power rails.
- Use Amphenol 11828-1CA mating connector to access these signals.

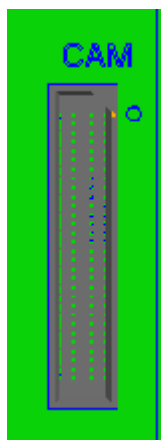


Figure 5-15 Camera Connector (J1701)

Table 5-12 MIPI CSI Camera Connector Pinouts (J1701)

Pin#	Signal	Description	Pin#	Signal	Description
A1	CAM_VREG_3P3	3.3V power supplier	B1	DGND	
A2	CAM_VREG_3P3	3.3V power supplier	B2	CCI_I2C_SDA0	SDA GPIO17
A3	CAM_VREG_3P3	3.3V power supplier	B3	CCI_I2C_SCL0	SDA GPIO18
A4	DGND		B4	DGND	
A5	CAM_S5A	2.04V power supplier	B5	CCI_I2C_SDA1	SDA GPIO19
A6	P1V8_CAM_IOVDD	1.8V power supplier	B6	CCI_I2C_SCL1	SDA GPIO20
A7	DGND		B7	DGND	
A8	FLASH_LED1	FLASHLED1	B8	CAM_S3A	1.35V power supplier
A9	FLASH_LED1	FLASHLED1	B9	CAM_S3A	1.35V power supplier
A10	DGND		B10	DGND	

Pin#	Signal	Description	Pin#	Signal	Description
A11	FLASH_LED2	FLASHLED2	B11	CAM_ELDO4_EN	PM845 GPIO9
A12	FLASH_LED2	FLASHLED2	B12	CAM_ELDO1_EN	PM845 GPIO12
A13	DGND		B13	DGND	
A14	FLASH_LED3	FLASHLED3	B14	NC	
A15	FLASH_LED3	FLASHLED3	B15	FLASH_R3LED_EN	PMI8998 GPIO3
A16	DGND		B16	DGND	
A17	MIPI_CSI2_LANE3_N	CSI2 data	B17	FLASH_FRONT_EN	SDA GPIO21
A18	MIPI_CSI2_LANE3_P	CSI2 data	B18	FL_STROBE_TRIG	SDA GPIO22
A19	DGND		B19	DGND	
A20	MIPI_CSI2_LANE2_N	CSI2 data	B20	P1V8_CAM_IOVDD	1.8V power supplier

Pin#	Signal	Description	Pin#	Signal	Description
A21	MIPI_CSI2_LANE2_P	CSI2 data	B21	P1V2_DVDD_CAM1_2	1.2V power supplier
A22	DGND		B22	DGND	
A23	MIPI_CSI2_LANE1_N	CSI2 data	B23	P2V85_AVDD_CAM1_2	2.85V power supplier
A24	MIPI_CSI2_LANE1_P	CSI2 data	B24	P2V85_AVDD_CAM1_2	2.85V power supplier
A25	DGND		B25	DGND	
A26	MIPI_CSI2_LANE0_N	CSI2 data	B26	P2V8_VCM_LASER_RF	2.8V power supplier
A27	MIPI_CSI2_LANE0_P	CSI2 data	B27	P2V8_VCM_LASER_RF	2.8V power supplier
A28	DGND		B28	DGND	
A29	MIPI_CSI2_CLK_N	CSI2 clock	B29	P1V2_DVDD_CAM1_2	1.2V power supplier
A30	MIPI_CSI2_CLK_P	CSI2 clock	B30	P1V2_DVDD_CAM1_2	1.2V power supplier

Pin#	Signal	Description	Pin#	Signal	Description
C1	CAM_MCLK0_BUF	SDA GPIO13	D1	DGND	
C2	CAM0_RSTN	SDA GPIO80	D2	MIPI_CSI0_LANE3_N	CSI0 data
C3	CAM_ELDO9_EN	SDA GPIO79	D3	MIPI_CSI0_LANE3_P	CSI0 data
C4	DGND		D4	DGND	
C5	CAM1_RSTN	SDA GPIO28	D5	MIPI_CSI0_LANE2_N	CSI0 data
C6	CAM_ELDO3_EN	SDA GPIO27	D6	MIPI_CSI0_LANE2_P	CSI0 data
C7	CAM_MCLK1_BUF	SDA GPIO14	D7	DGND	
C8	DGND		D8	MIPI_CSI0_LANE1_N	CSI0 data
C9	CAM2_RSTN	SDA GPIO9	D9	MIPI_CSI0_LANE1_P	CSI0 data
C10	CAM_MCLK2_BUF	SDA GPIO15	D10	DGND	
C11	CAM_ELDO2_EN	SDA GPIO8	D11	MIPI_CSI0_LANE0_N	CSI0 data
C12	DGND		D12	MIPI_CSI0_LANE0_P	CSI0 data
C13	CAM_MCLK3_BUF	SDA GPIO16	D13	DGND	
C14	CAM3_RSTN	SDA GPIO23	D14	MIPI_CSI0_CLK_N	CSI0 clock
C15	OIS_SYNC	SDA GPIO25	D15	MIPI_CSI0_CLK_P	CSI0 clock
C16	DGND		D16	DGND	
C17	LASER_IRQ	SDA GPIO26	D17	MIPI_CSI1_LANE3_N	CSI1 data
C18	LASER_CE	SDA GPIO100	D18	MIPI_CSI1_LANE3_P	CSI1 data
C19	DGND		D19	DGND	

Pin#	Signal	Description	Pin#	Signal	Description
C20	P2V8_CAMA3	NC	D20	MIPI_CSI1_LANE2_N	CSI1 data
C21	P2V8_VCM_LASER_RF	2.8V power supplier	D21	MIPI_CSI1_LANE2_P	CSI1 data
C22	DGND		D22	DGND	
C23	CAM_IRQ	SDA GPIO24	D23	MIPI_CSI1_LANE1_N	CSI1 data
C24	NC		D24	MIPI_CSI1_LANE1_P	CSI1 data
C25	DGND		D25	DGND	
C26	P2V85_CAM0_AVDD	2.85V power supplier	D26	MIPI_CSI1_LANE0_N	CSI1 data
C27	NC		D27	MIPI_CSI1_LANE0_P	CSI1 data
C28	DGND		D28	DGND	
C29	P1V05_DVDD_CAM0	1.05V power supplier	D29	MIPI_CSI1_CLK_N	CSI1 clock
C30	P1V05_DVDD_CAM0	1.05V power supplier	D30	MIPI_CSI1_CLK_P	CSI1 clock

The table below shows the combinations of camera usage for different use cases.

Table 5-13 MIPI CSI Camera Use Cases

CSI PHY	Use case	Comment
CSI0	Up to 4 lane	One Camera of 4 lane or One camera of 3 lane One Camera of 2 lane One Camera of 1 lane
CSI 1	Up to 4 lane	One Camera of 4 lane or One camera of 3 lane One Camera of 2 lane One Camera of 1 lane
CSI 2	Up to 4 lane	One Camera of 4 lane or 2 x Camera of 1 lane each
CSI 3	Up to 2 lane	Iris Camera
CSI0 + CSI1	Up to 4 lane 3D	4 lane 3D use case / Dual 4 lane configuration
CSI 2	Up to 1 lane 3D	1 lane 3D use case / Dual 1 lane configuration
CSI0 + CSI1 + CSI2	Up to 4 lane	Three 4-lane CSI (4+4+4 or 4+4+2+1)
CPHY		Three 3-trio CPHY1.0

5.2.16 Vertigo Sensor connector

The HDK845 development kit supports a 30-pin connector (449-53935-0030) to support Vertigo 10 or follow on card, same as CDP845.

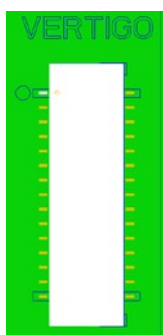


Figure 5-16 Vertigo Connector (J1701)

5.2.17 HDMI Connector

The HDMI type A connector enables the HDK845 development platform to connect to an external HDMI monitor/ television via an HDMI cable. The LT9611 MIPI DSI to HDMI1.4 bridge IC features a resolution up to 4K30Hz.

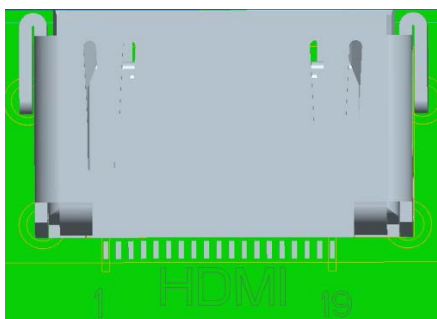


Figure 5-17 HDMI Connector (J1401)

A dip switch, which is DS11_SW_SEL(S2301-8), provides an option to boot with on-board display or external HDMI monitor/television. The switch should be settled before device power on and the default setting is for display. (off = display; on=HDMI)

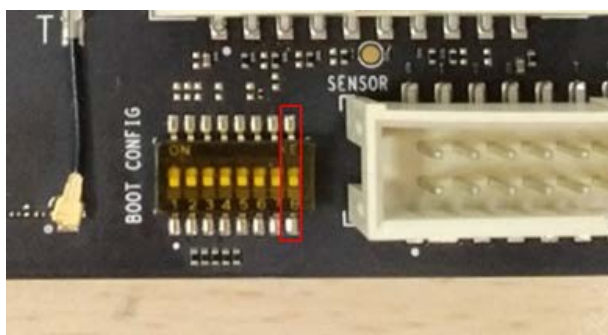


Figure 5-18 Dip Switch S2301-8

See Table 5-2 Dip Switch S2301 HW / SW Configuration for detailed explanation.

5.2.18 PCI Express 1X Slot (Reserve)

The PCI Express slot (J2701) used on the HDK845 development kit is a standard PC style half-height card slot. It allows for external peripheral connectivity such as Gigabit Ethernet, Gigabit Wi-Fi, or PCIe based audio / video processors. Since there is no native Ethernet connectivity on the HDK platform, an off-the shelf PCIe based Ethernet card can be used here. Check the software compatibility before connecting the PCIe Ethernet card. In addition to being able to establish external connectivity, the connector provides access to the PCIe1 interface, which is routed from the Processor board.

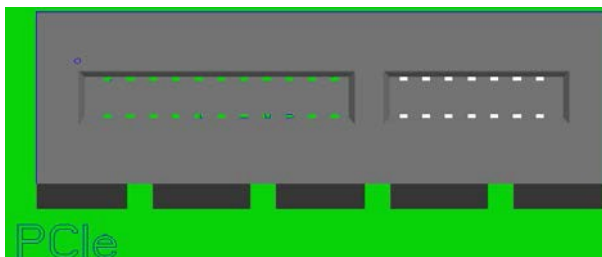


Figure 5-19 PCIe 1X Slot (J2701)

5.2.19 WiGig Antenna Module

The SWL-W11C WiGig Antenna Module is placed on the top right corner of the Processor board and connected via a coaxial cable that attaches to the MH4L receptacles. SWL-W11C is the RF module complying with Wireless Gigabit Alliance (WiGig) and IEEE 802.11ad for embedded and mobile applications. It implements directional beamforming at 60GHz by 32 phase array antenna elements. Its supported frequency range is 57~64GHz (Channel 1,2,3).

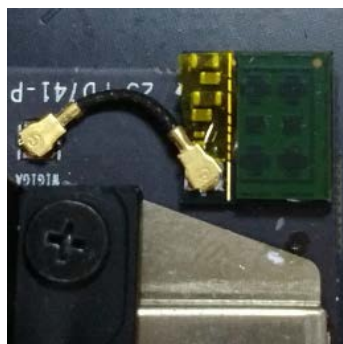


Figure 5-20 WiGig Antenna Module

6 Display Card

Table 6-1 HDK845 Display Card Mechanical Properties

Dimension	61.48cm ² (106mm x 62 mm)
Major Interfaces	one 100-pin high speed board-to-board connector

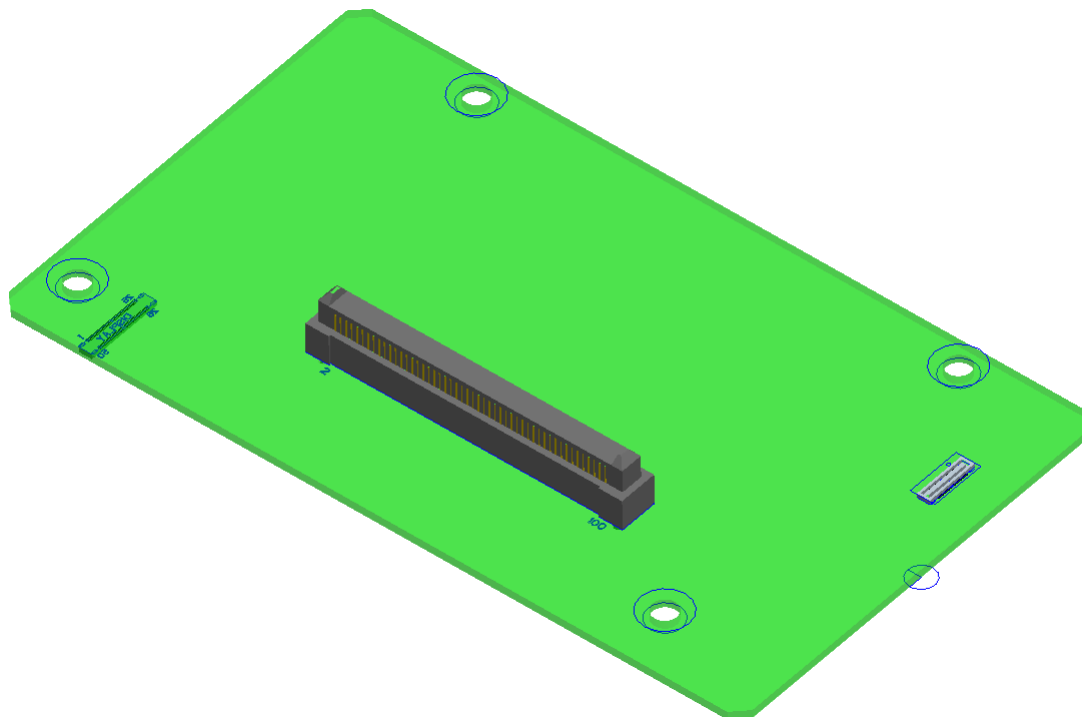


Figure 6-1 HDK Display Card

6.1 HDK845 Display Card Overview

The display output options for the HDK845 Development Kit consists of A 100-pin display connector J0501 that supports:

- Dual DSI DPHY 1.2
- Touch screen capacitive panels via I2C, SPI, and interrupts (up to two devices)
- Backlight LED
 - Can support external backlight driver control and power
 - PM845 Triple supply topology for TFT display panels

The HDK845 development platform can support the following display combinations:

MIPI DSI	1 x 4-lane DSI0 + 1 x 4-lane DSI1 2 x 4-lane DSI DPHY 1.2
----------	--

6.2 Display Card Connector J0501

The 100-pin display card connector provides the following features/ pin-outs that enables the development kit to connect to a MIPI DSI panel/ device:

NOTE: Refer to the carrier schematic and display card tech notes when designing a custom display card.

- DSI
 - 2 x 4 lane DSI
- Backlight
 - Dual synchronous SMPS topology: boost (LAB module) and inverting buckboost (IBB module) and gamma bias (OLEDB) module
 - Input voltage range: 2.5 V to 4.6 V
 - Programmable output voltage:
 - LCD display: +5 V to +6.1 V and -1.4 V to -6.0 V
 - AMOLED display: +4.6 V to +5 V and -1.4 V to -5.4 V
- Display connector
 - TFT with integrated backlight
 - TFT with external backlight
- Additional GPIOs for general purposes available
- Touch Panel
 - Supports up to two touch screen controllers
 - Supports I2C or SPI via QUP and SSC_SPI_2
 - Can chose between I2C or SPI signals via MUX

The display card connector supports the following power domains:

Table 6-2 Display Power Domains


Display Signal	Power Domain
PM845 VREG_S4A_1P8 (1.8V)	up to 300 mA
PM845 VREG_L28A_3P0 (3.0V)	up to 150 mA
PM845 VREG_L14A_1P8 (1.8V)	up to 300 mA
PM845 VREG_L6A_1P85 (1.8V)	up to 50 mA
Carrier 3.3V	up to 0.5A
Carrier 5 V	up to 1.5A
Carrier 12 V	up to 0.5A

HDK845 display card (part number: 20-PB892-H10) is an additional PCBA that mates with the display connector J1301 on the carrier board. This board allows users to interface with the development kit via the LCD (see below for details) that comes preinstalled on the display card. Figure 6-2 Display Card Default Configuration, illustrates the interfacing connectors on the display card.

The display card comes as an additional add-on to the HDK845 development kit.

Connecting the Display Card to the Development Kit

This configuration allows the user to use the preinstalled LCD display that comes with the display board. As shown in the block diagram below, the MIPI DSI0 lines, which come from the 100-pin ERM8 connector, directly connects to the QHD TFT panel. See the section below for more details on this LCD panel. It is important to note that connector J0501 of the display card needs to connect to J1301 of the carrier board for this configuration to work.

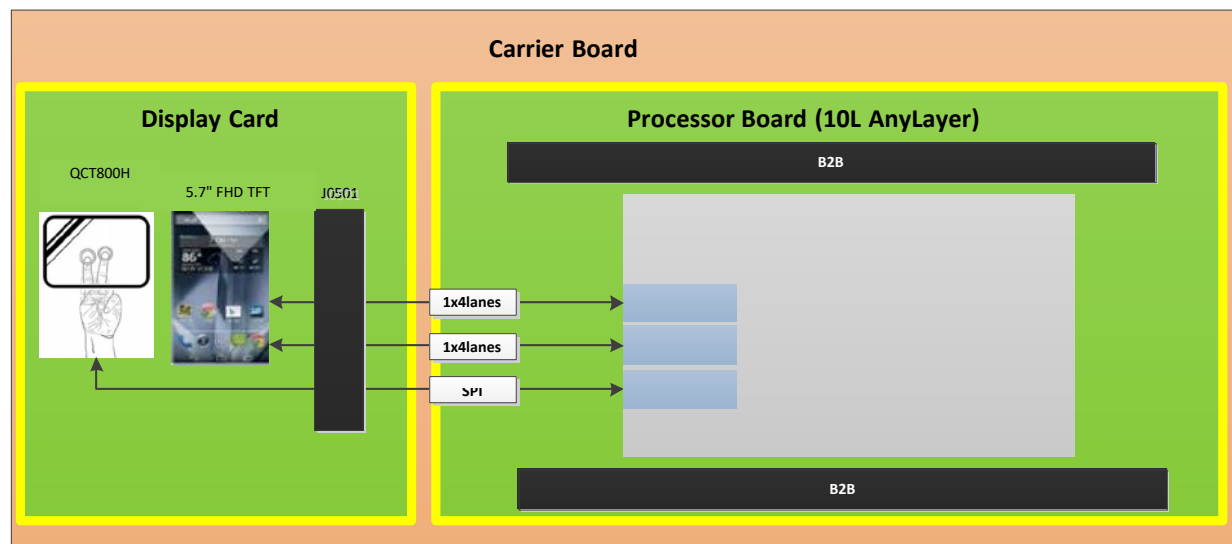**Figure 6-2 Display Card Default Configuration**

6.3 LCD panel

The LCD panel comes preinstalled on the HDK845 display card Below are the Panel specifications:

- Resolution: QHD 2560x1440
- LCD Type: TFT
- PCAP touch panel
- No of Lanes: 2 x 4 lane MIPI DSI interface via Display Card
- Diagonal Length: 5.7