

Installation — Continued

Power the device


Note: The external power supply provided with this product is UL listed by the power supply's manufacturer.

1. Install the power adapter into the power barrel connector on back of the Device.
2. Connect the power adapter AC plug into AC power wall outlet.
3. Verify that the Device is powered by observing the green lit LED power indicator light.

Operation


After installation, the Device should function without operator intervention. Use the status LEDs to monitor Device operation in the network.

SDC (<i>Signal Detect/Copper</i>) LED	ON = the twisted-pair copper link is up. Blinking = port is in loop back mode enabled by front panel switch.
SDF (<i>Signal Detect/Fiber</i>) LED	ON = the fiber link is up. Blinking = port is in loop back mode enabled by front panel switch. Blinking = in-band loop back codes on fiber port, DIP SW 8 Down.
PWR (<i>Power</i>) LED	ON = the Device is connected to external power.

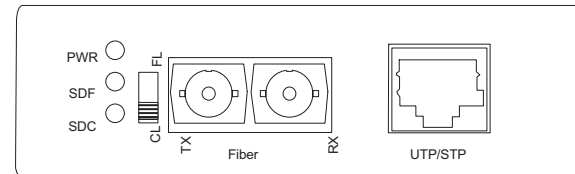

Dry-contact relay

The RJ-45 copper port has a dry-contact relay that closes if the power signal detect/copper, or signal detect/fiber is lost. The operational rating on pins 3 and 6 is 0 – 30 VDC, 100 mA (*maximum*).

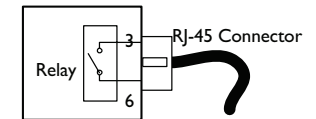

Remote management function

A remote, stand-alone Device (*revision SSDTF10xx-120 or higher*) can be managed when connected to a local CSDTF10xx-120 Device. Please note that in a managed network, both the local and remote Devices must be set to “software” mode. For more information, see the SNMP section in the CSDTF10xx-12x manual online at:

<http://www.transition.com/TransitionNetworks/Products2/Static/focalpoint2.aspx>

Cable Specifications

Fiber cable

Single mode fiber (<i>recommended</i>):	9 μm
Multimode fiber (<i>recommended</i>):	62.5/125 μm
Multimode fiber (<i>optional</i>):	100/140, 85/140, 50/125 μm
SSDTF1011-120	850 nm multimode
Fiber Optic Transmitter Power:	min: -19.0 dBm max: -14.0 dBm
Fiber Optic Receiver Sensitivity:	min: -32.5 dBm max: -14.0 dBm
Link Budget:	13.5 dB
SSDTF1012-120	1310 nm single mode
Fiber-optic Transmitter Power:	min: -27.0 dBm max: -10.0 dBm
Fiber-optic Receiver Sensitivity:	min: -34.0 dBm max: -14.0 dBm
Link Budget:	7.0 dB
SSDTF1013-120	850 nm multimode
Fiber Optic Transmitter Power:	min: -19.0 dBm max: -14.0 dBm
Fiber Optic Receiver Sensitivity:	min: -32.5 dBm max: -14.0 dBm
Link Budget:	13.5 dB
SSDTF1014-120	1310 nm single mode
Fiber-optic Transmitter Power:	min: -19.0 dBm max: -14.0 dBm
Fiber-optic Receiver Sensitivity:	min: -34.0 dBm max: -3.0 dBm
Link Budget:	15.0 dB
SSDTF1015-120	1310 nm single mode
Fiber Optic Transmitter Power:	min: -8.0 dBm max: -2.0 dBm
Fiber Optic Receiver Sensitivity:	min: -38.0 dBm max: -8.0 dBm
Link Budget:	30.0 dB
SSDTF1016-120	1310 nm single mode
Fiber-optic Transmitter Power:	min: -5.0 dBm max: 0.0 dBm
Fiber-optic Receiver Sensitivity:	min: -38.0 dBm max: -8.0 dBm
Link Budget:	33.0 dB
SSDTF1017-120	1550 nm single mode
Fiber-optic Transmitter Power:	min: -5.0 dBm max: 0.0 dBm
Fiber-optic Receiver Sensitivity:	min: -34.0 dBm max: -7.0 dBm
Link Budget:	29.0 dB
SSDTF1022-120	1310 nm single mode
Fiber Optic Transmitter Power:	min: -15.0 dBm max: -5.0 dBm
Fiber Optic Receiver Sensitivity:	min: -25.0 dBm max: -14.0 dBm
Link Budget:	10.0 dB
SSDTF1027-120	1300 nm multimode
Fiber Optic Transmitter Power:	min: -19.0 dBm max: -10.0 dBm
Fiber Optic Receiver Sensitivity:	min: -32.5 dBm max: -14.0 dBm
Link Budget:	13.5 dB

Cable Specifications — Continued


Fiber cable

SSDTF1029-120	1310 nm (TX)/1550 nm (RX) simplex
SSDTF1029-121	1550 nm (TX)/1310 nm (RX) simplex
Fiber-optic Transmitter Power:	min: -13.0 dBm max: -6.0 dBm
Fiber-optic Receiver Sensitivity:	min: -32.0 dBm max: -3.0 dBm
Link Budget:	19.0 dB
SSDTF1029-122	1310 nm (TX)/1550 nm (RX) simplex
SSDTF1029-123	1550 nm (TX)/1310 nm (RX) simplex
Fiber-optic Transmitter Power:	min: -8.0 dBm max: -3.0 dBm
Fiber-optic Receiver Sensitivity:	min: -33.0 dBm max: -3.0 dBm
Link Budget:	25.0 dB

The fiber optic transmitters on this Device meet Class I Laser safety requirements per IEC-825/CDRH standards and comply with 21 CFR1040.10 and 21CFR1040.11.

Copper cable

Connector:	RJ-45
Elec. network connection:	Single 4-wire (<i>Tip/Ring – Tip1/Ring1</i>)
Mechanical arrangement:	8-position miniature modular jack
Usage:	1.544 Mb/s or 2.0478 Mb/s access lines
Interface codes:	04DU9 (<i>any applicable</i>)
Cable type:	
Long Haul T1:	0db, -7.5db, -15db, -22db
E1 (<i>120 ohm</i>):	E1 3.0V, 120
J1 (<i>110 ohm</i>):	0-655', 110
DSX-1 (<i>100 ohm</i>):	0-133', 133-266', 266-399', 399-533', 533-655'

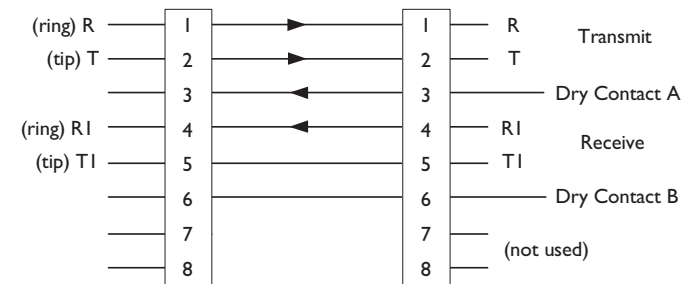

Technical Specifications

For use with Transition Networks Model SSDTF10xx-12x or equivalent.

Dimensions:	3.25" x 4.7" x 1" (83 mm x 119 mm x 25 mm)
Shipping Weight:	1 lb. (454 g) approximately
Power consumption:	3.7 Watts
Power supply:	12VDC, 0.8A (North America, Europe, UK) 12VDC, 1.25A (NZ, Australia, S Africa, JP, Latin Am) (The external power supply provided with this product is UL listed by the power supply's manufacturer.)
MTBF:	Greater than 41,660 MIL-HDBK-217F hours Greater than 114,580 Bellcore hours
Environment:	0°C to 50°C (32°F to 122°F)
Storage Temp:	-15°C to 65°C (5°F to 149°F)
Warranty:	Lifetime

The information in this user's guide is subject to change. For the most up-to-date information on the SSDTF10xx-12x Device, view the user's guide on-line at: www.transition.com.

Product is certified by the manufacturer to comply with DHHS Rule 21/CFR, Subchapter J applicable at the date of manufacture.

CAUTION: Visible and invisible laser radiation when open. Do not stare into the beam or view directly with optical instruments.


CAUTION: Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

NOTICE: Copper based media ports, e.g., Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are intended to be connected to intra-building (inside plant) link segments that are not subject to lightning transients or power faults. Copper based media ports, e.g., Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are NOT to be connected to inter-building (outside plant) link segments that are subject to lightning transients or power faults.

Troubleshooting


If the Device fails, isolate and correct the failure by determining the answers to the following questions and then take the indicated action:

- Is the PWR (*Power*) LED illuminated?
 - NO
 - Is the power adapter the proper type for the AC outlet? See Technical Specifications.
 - Is the power adapter properly installed in the Device and in the outlet?
 - Does the grounded AC outlet provide power?
 - Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.
 - YES
 - Proceed to step 2.
- Is the SDC (*Signal Detect/Copper*) LED illuminated?
 - NO
 - Check the twisted-pair copper cable for the proper connection.
 - Check the MDI/MDI-X switch for the correct twisted-pair copper cable configuration.
 - Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.
 - YES
 - Proceed to step 3.
- Is the SDF (*Signal Detect/Fiber*) LED illuminated?
 - NO
 - Check the fiber cables for proper connection.
 - Verify that the TX and RX cables on the local Device are connected to the RX and TX ports, respectively, on the remote Device.
 - Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.
 - YES
 - Proceed to step 4.
- Is data transfer failing?
 - YES
 - Verify the local copper connection by starting a local copper loop-back test (*hardware mode: set the loop-back switch on the local Device to "CL", software mode: enter the local copper loop-back command*) and then use a bit error test unit to run a bit error test.

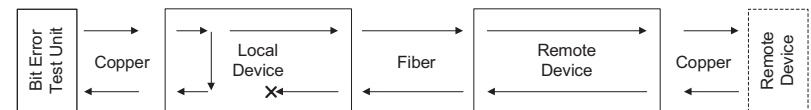


Troubleshooting — continued


- Verify the local fiber connection by starting a remote fiber loop-back test (*hardware mode: set the loop-back switch on the remote Device to “FL”, software mode: enter the remote fiber loop-back command*) and then use a bit error test unit to run a bit error test.

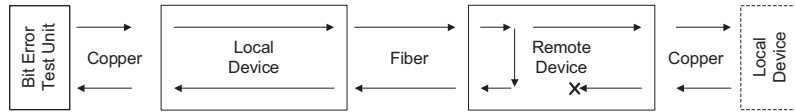

- Verify the remote copper connection by starting a remote copper loop-back test (*hardware mode: set the loop-back switch on the remote Device to “CL”, software mode: enter the remote copper loop-back command*) and then use a bit error test unit to run a bit error test.

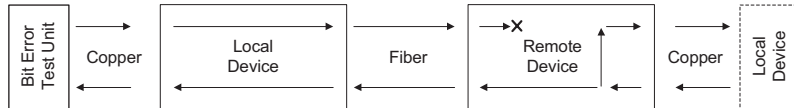

- Verify the remote fiber connection by starting a local copper loop-back test (*hardware mode: set the loop-back switch on the local Device to “FL”, software mode: enter the local fiber loop-back command*) and then use a bit error test unit to run a bit error test.

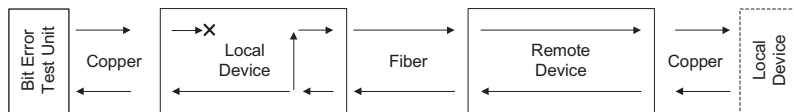

- Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.

NO

- Contact Tech Support: 1-800-260-1312, Int'l: 00-1-952-941-7600.

Contact Us

Technical support

Technical support is available 24 hours a day:

U.S.A. and Canada: 1-800-260-1312

International: 00-1-952-941-7600

Transition now

Chat live via the Web with Transition Networks Technical Support.

Log onto www.transition.com and click the Tech Support/Transition Now link.

Web-based seminars

Transition Networks provides seminars via live web-based training.

Log onto www.transition.com and click the Learning Center link.

E-Mail

Ask a question anytime by sending an e-mail to our technical support staff.

<http://www.transition.com/TransitionNetworks/TechSupport/Contact.aspx>

Address

Transition Networks

10900 Red Circle Drive


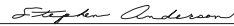
Minnetonka, MN 55343, U.S.A.

Telephone: 952-941-7600

Toll free: 800-526-9267

Fax: 952-941-2322

Declaration of Conformity

 Declaration of Conformity	
Name of Mfg:	Transition Networks 10900 Red Circle Drive, Minnetonka MN 55343 U.S.A.
Model Number:	SSDTF1011-120, SSDTF1012-120, SSDTF1013-120, SSDTF1014-120, SSDTF1015-120, SSDTF1016-120, SSDTF1017-120, SSDTF1022-120, SSDTF1027-120, SSDTF1029-120, SSDTF1029-121, SSDTF1029-122, SSDTF1029-123
Purpose: To declare that the SSDTF10xx-12x to which this declaration refers is in compliance with the following directive(s) and standard(s):	
EMC Directive 2004/108/EC; EN 55022:2006+A1:2007 Class A; EN55024:1998+A1:2001+A2:2003; EN6100-2-3; EN6100-3-3; CFR Title 47 Part 15 Subpart B Class A. Low Voltage Directive: 2006/95/EC; IEC 60950-1:2005; CFR Title 21 Section 1040.10 Class I.	
I, the undersigned, hereby declare that the model number(s) listed in this declaration of conformity are in compliance with the directive(s) and standard(s) herein.	
 Stephen Anderson, Vice-President of Engineering	April 2012 Date

Compliance Information

FCC regulations

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at the user's own expense.

Canadian regulations

This digital apparatus does not exceed the Class A limits for radio noise for digital apparatus set out on the radio interference regulations of the Canadian Department of Communications. Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

European regulations

Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Achtung !

Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten. In diesem Fall ist der Benutzer für Gegenmaßnahmen verantwortlich.

Attention !

Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.



In accordance with European Union Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003, Transition Networks will accept post usage returns of this product for proper disposal. The contact information for this activity can be found in the 'Contact Us' portion of this document.



CAUTION: RJ connectors are NOT INTENDED FOR CONNECTION TO THE PUBLIC TELEPHONE NETWORK. Failure to observe this caution could result in damage to the public telephone network.

Der Anschluss dieses Gerätes an ein öffentliches Telekommunikationsnetz in den EG-Mitgliedstaaten verstösst gegen die jeweiligen einzelstaatlichen Gesetze zur Anwendung der Richtlinie 91/263/EWG zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über Telekommunikationsendeinrichtungen einschliesslich der gegenseitigen Anerkennung ihrer Konformität.

Trademark notice

All trademarks and registered trademarks are the property of their respective owners.

Copyright restrictions

© 2010 Transition Networks.

All rights reserved. No part of this work may be reproduced or used in any form or by any means—graphic, electronic, or mechanical—without written permission from Transition Networks.