
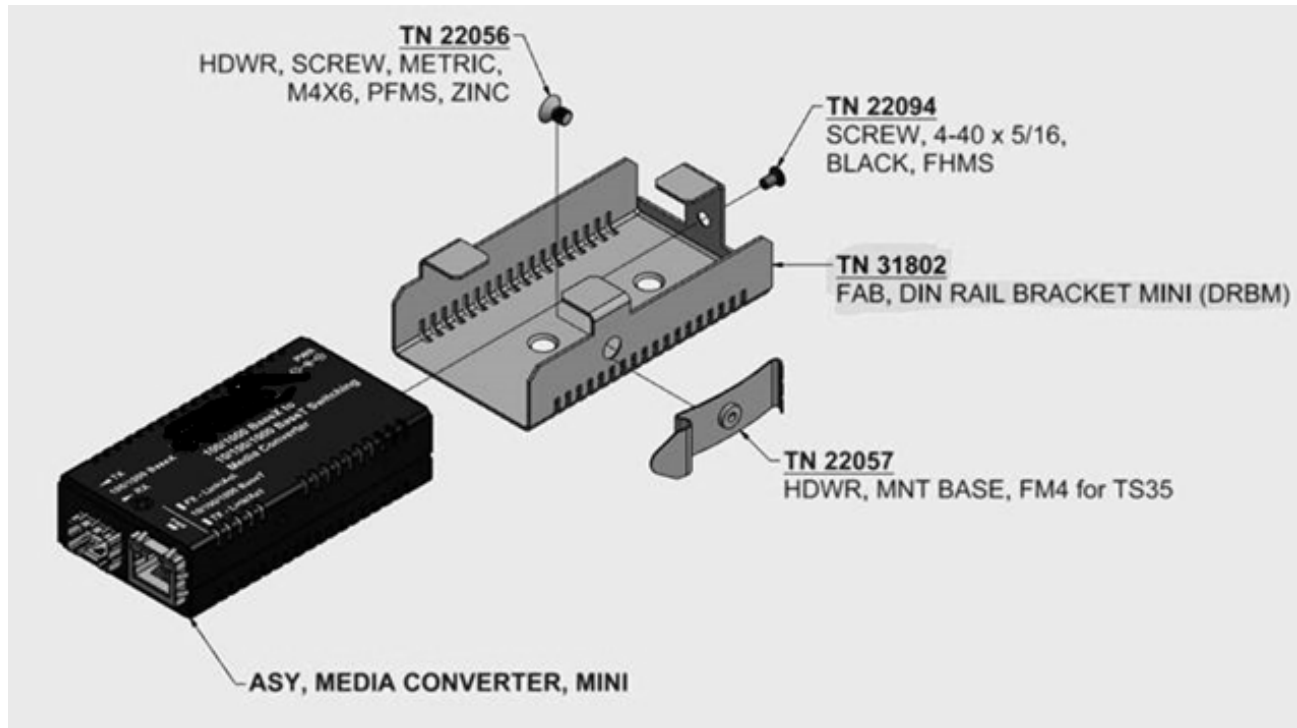


## DRBM Install Guide

### Din Rail Bracket for Mini Converters

These instructions are for mounting the DRBM bracket to a Lantronix mini media converter and then to a DIN rail.

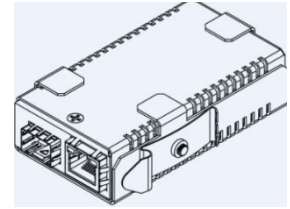

### Parts

- 22056 Screw, Metric, M4X6, PFMS, Zinc (Qty 1)
- 22057 Mounting Base, FM4 for TS35
- 22094 Screw, 4-40 x 5/16, PFMS, U/C, Blk Zinc (Qty 1)
- 31802 DIN Rail Bracket Mini (DRBM) (Qty 1)
- 33610 DRBM Install Guide (Qty 1)

### Procedure

1. Remove the screw from the back of the Mini Converter and save the screw.
2. Attach the TN 22057 Mounting Base to the 31802 DRBM with the 22056 screw, in one of three positions:
  - side mount position (shown above)
  - high back position
  - low back position
3. Slide the Mini Converter into the DIN Rail Bracket Mini (DRBM).
4. Insert the TN 22094 Screw through the DRBM and into the Mini Converter and tighten the screw.
5. Connect the TN 22057 Mounting Base to the DIN rail assembly.

Lantronix Corporate Headquarters: 48 Discovery, Suite 250, Irvine, CA 92618. Toll Free: 800-526-8766; Phone: 949-453-3990; Fax: 949-453-3995; Technical Support [E-mail](#).