


OCA-PMK-26 Quick Install Guide

33820 Rev. B

The OCA-PMK-26 is an optional Universal Pole Mount Kit for mounting the OCA-P181610 onto 2-6" diameter poles. The kit is ordered and packaged separately. See the OCA-P181610 Install Guide for more information.

OCA-PMK-26 Option Part List

- A Strut Rails – QTY (2)
- B Fender Washer, 1/4" – QTY (8)
- C Pan Head Screws, 1/4-20 X 1/2" Long – QTY (8)
- D Nylok Nut, 1/4-20 – QTY (4)
- E Band Clamp Bracket LRG- QTY (2)
- F Band Clamp Bracket SM- QTY (2)
- G Hose Clamp 3-1/2" – QTY (2)
- H Hose Clamp 6-1/2" – QTY (2)
- I Hose Clamp 3" – QTY (2)

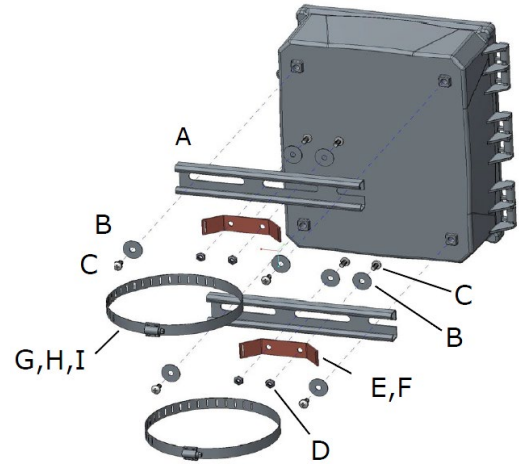

OCA-PMK-26 Option Install Procedure

1. Attach Band Clamp Brackets (E) or (F) (x2) to inside of Strut Rails (A) (x2) and secure with Pan Head Screws x 1/2" Long (D), Fender Washers (C), & Nylok Nuts (E) (x4). Torque to 32 in-lbs Max.
2. Attach Strut Rails to the Enclosure mounting bosses and secure with Pan Head Screws x 1/2" Long (D), and Fender Washers (C) (x4). Torque to 32 in-lbs Max.
3. Feed Hose Clamp (G) or (H) or (I) (x2) through slots in Band Clamp (E) or (F) (x2), typical.
4. Wrap Hose Clamps around Pole and tighten.

Lantronix: Toll Free: 800-526-8766. Phone: 949-453-3990. [Technical Support](#). [Email](#). [Sales Offices](#).


OCA-PMK-26 Quick Install Guide

33820 Rev. B

The OCA-PMK-26 is an optional Universal Pole Mount Kit for mounting the OCA-P181610 onto 2-6" diameter poles. The kit is ordered and packaged separately. See the OCA-P181610 Install Guide for more information.

OCA-PMK-26 Option Part List

- A Strut Rails – QTY (2)
- B Fender Washer, 1/4" – QTY (8)
- C Pan Head Screws, 1/4-20 X 1/2" Long – QTY (8)
- D Nylok Nut, 1/4-20 – QTY (4)
- E Band Clamp Bracket LRG- QTY (2)
- F Band Clamp Bracket SM- QTY (2)
- G Hose Clamp 3-1/2" – QTY (2)
- H Hose Clamp 6-1/2" – QTY (2)
- I Hose Clamp 3" – QTY (2)

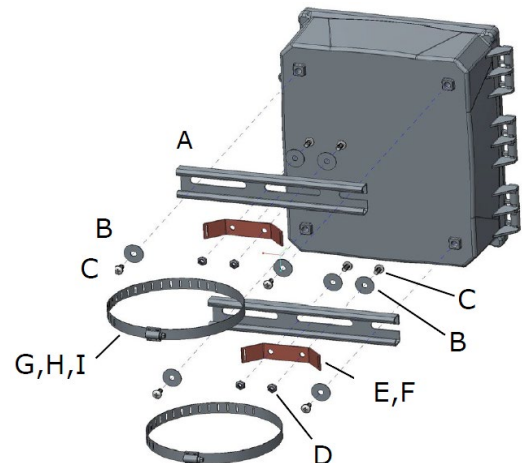

OCA-PMK-26 Option Install Procedure

1. Attach Band Clamp Brackets (E) or (F) (x2) to inside of Strut Rails (A) (x2) and secure with Pan Head Screws x 1/2" Long (D), Fender Washers (C), & Nylok Nuts (E) (x4). Torque to 32 in-lbs Max.
2. Attach Strut Rails to the Enclosure mounting bosses and secure with Pan Head Screws x 1/2" Long (D), and Fender Washers (C) (x4). Torque to 32 in-lbs Max.
3. Feed Hose Clamp (G) or (H) or (I) (x2) through slots in Band Clamp (E) or (F) (x2), typical.
4. Wrap Hose Clamps around Pole and tighten.

Lantronix: Toll Free: 800-526-8766. Phone: 949-453-3990. [Technical Support](#). [Email](#). [Sales Offices](#).