



LIB-306 Carrier Ethernet (CE) Network Interface Device (NID)



Install Guide

Rev. D

Safety Warnings and Cautions

These products are not intended for use in life support products where failure of a product could reasonably be expected to result in death or personal injury. Anyone using this product in such an application without express written consent of an officer of Net2Edge does so at their own risk, and agrees to fully indemnify Net2Edge for any damages that may result from such use or sale.



Attention: this product, like all electronic products, uses semiconductors that can be damaged by ESD (electrostatic discharge). Always observe appropriate precautions when handling.



Warning: Potential for damage to equipment or personal injury.



Warning: Risk of Electrical Shock



Functional grounding point



Protective grounding point



Special considerations

LIB-306 Install Guide -

Record of Revisions

Rev	Date	Description of Changes
A	12 th December 2014	Initial release for LIB-306 software v 2.0.x.
B	1 st May 2015	Updated to v 2.1.3 which adds DDMI, HQoS, JSON, LLDP-MED, MEP BFD, MPLS-TP, PFC, Traffic Test Loop, UDLD, and Y.1564 support.
C	25 th September 2015	Update the Rack Mount Installation information.
D	26 th January 2017	Re-Branded Manual

Trademark notice

All trademarks and registered trademarks are the property of their respective owners. All other products or service names used in this publication are for identification purposes only, and may be trademarks or registered trademarks of their respective companies. All other trademarks or registered trademarks mentioned herein are the property of their respective holders.

Copyright restrictions

© 2017, Net2Edge Ltd. All rights reserved. No part of this work may be reproduced or used in any form or by any means (graphic, electronic, or mechanical) without written permission from Net2Edge.

Address comments on this product or manual to:

Net2Edge

Kulite House, Stroudley Road,

Basingstoke, RG24 8UG, UK.

Tel: +44 345 0130030

E-Mail: support@net2edge.com

Table of Contents

- Safety Warnings and Cautions.....2**
- 1. Introduction.....4**
 - Product Description.....4
 - Models.....4
 - Applications.....4
 - Features.....6
 - Specifications.....7
 - Related Manuals and Help.....7
- 2. Installation.....8**
 - Unpacking / Package Contents.....8
 - Install Cautions and Warnings.....8
 - Installation Location.....8
 - Rack Mount Installation.....8
 - Grounding and Wiring Recommendations.....9
 - Back Panel.....9
 - Front Panel.....10
 - Connecting Power.....12
 - Installing SFP Modules and Fiber Cables.....13
 - Installing SFPs.....13
 - Installing Copper Cables.....14
 - Copper Cable Configuration.....14
 - Connecting Ethernet Cables.....14
 - Connecting Via the Serial CONSOLE / CLI.....15
 - Connecting Via the MGMT Port / Web GUI.....15
 - Factory Defaults.....16
 - Login using PuTTY Terminal Emulator Software.....16
 - Login Using Telnet.....17
 - Login Using the Web Interface.....17
 - Re-Access the Web GUI via CLI Commands.....17
 - Switching MGMT / PORT 1 Modes.....18
 - Configure the Default Management Port as a Data Port.....18
 - Product Registration.....19
- 3. Troubleshooting.....19**
- 4. Service, Warranty and Tech Support.....22**
 - Contact Us.....22
 - Warranty.....22
 - One-Year Limited Hardware Warranty.....22**
 - Return Authorization.....22**
 - Return Instructions.....22**

European Regulations24
 Electrical Safety Warnings25

1. Introduction

Product Description

Net2Edge’s managed LIB-306 NID provides advanced packet performance metering and service creation aimed directly at customer premises and cell sites. The LIB-306 is optimized for business Ethernet and mobile backhaul deployments.

The LIB-306 is a multi-service NID that provides SLA assurance and advanced fault management that is MEF CE2.0 compliant. IEEE 802.1ag Service OAM, ITU Y.1731 Performance Monitoring and IEEE 802.3ah Link OAM are standard features.

The LIB-306 supports advanced features such as IPv6 and IPv4, VLANs, QoS, bandwidth allocation, ring protection, jumbo frames and numerous security features. The LIB-306 can be managed and provisioned with Net2Edge Converge™ EMS or via Web, CLI and SNMP (v1, v2c & v3). The LIB-306 supports SSL/SSH, RADIUS, TACACS+, Management VLAN and ACL rules.

The LIB-306 offers AC or DC power inputs for operation in a variety of environments. The SFP ports are triple speed and support 100Mbps, 1000Mbps or SGMII SFPs. CWDM and Bi-Di SFPs are also supported, allowing for flexible network architectures.

Models

The LIB-306 models are described below.


Model	Description
LIB-306-24	2xTTP 4xSFP NID: Two 10/100/1000Mbps RJ45 ports with four 100/1000Mbps SFP ports. Includes IEEE 1588v2 with RFC 2544 Traffic Generation.
LIB-306-42	4xTTP 2xSFP NID: Four 10/100/1000Mbps RJ45 ports with two 100/1000Mbps SFP ports. Includes IEEE 1588v2 with RFC 2544 Traffic Generation.

Applications

The LIB-306 is designed to support a wide range of MEF-based Carrier Ethernet services to include:

- MEF CE 2.0 Certified Services (E-LINE, E-LAN, E-ACCESS, E-TREE)
- Mobile Backhaul
- Business Ethernet
- Fiber to the Premise (FTTP)
- SLA Enforcement Performance Statistics
- Migration to Packet Networks
- QoS for Differentiated Services

Several LIB-306 application examples are provided below.

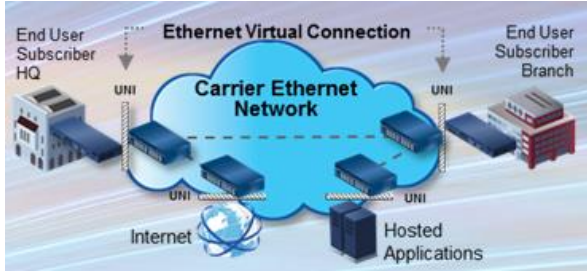


CE Services Example




Cloud Services Example

Carrier Ethernet 2.0 EP-LAN Service

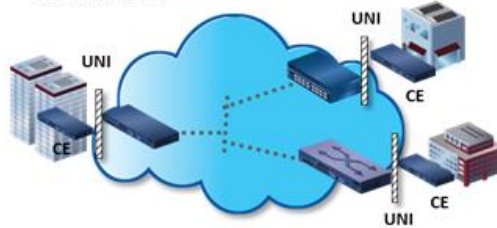

Carrier Ethernet 2.0 EVP-LAN Service

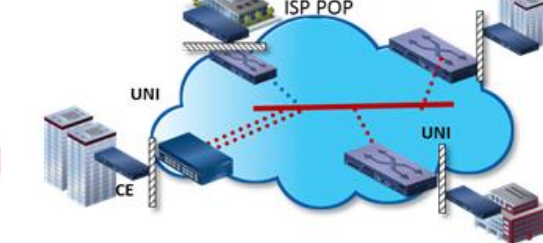

E-LAN Services Example

Carrier Ethernet 2.0 EPL Service



Carrier Ethernet 2.0 EVPL Services



E-Line Services Example

Features

- Two/four 10/100/1000Mbps Base-T ports. Four/two 100/1000Mbps SFP ports. Any port can be network (NNI) or client (UNI).
- Two of the SFP ports support a proprietary 2.5Gbps mode.
- TP ports support IEEE 802.3az Energy Efficient Ethernet for power saving.
- Full bandwidth 1000Mbps switching, non blocking.
- SNMP v1, v2c, and v3.
- IPv6 and IPv4 support.
- VLAN (802.1Q) Q-in-Q (C-Tag / S-Tag).
- RMON and Syslog.
- OAM Support: IEEE 802.3ah Link OAM, IEEE 802.1ag Service OAM, ITU-T Y.1731 Performance Monitoring, and MEF E-LMI.
- Loop Protection: ITU G.8032 and IEEE RSTP, MSTP.
- G.8031 Linear Protection switching
- IEEE 1588v2 PTP (Precision Time Protocol).
- DC or AC power input (12VDC Barrel connector or 2-Pin, 21-60VDC Terminal block).
- Jumbo Frame Support (10240 bytes maximum).
- Wire speed loopbacks.
- RFC 2544 Traffic Generation and Reports.
- Last Gasp/Dying Gasp notification via SNMP trap. Monitor Rx and Tx Dying Gasp for each port.
- SNMP traps configurable: System (Warm Start, Cold Start); Interface (Link Up, Link Down, LLDP); AAA (Authentication Fail); Switch (STP, RMON).
- Alarm inputs/outputs: RJ-45 connector with 2-IN and 2-OUT, 10-30VDC, 40mA maximum; optically isolated from main board. Alarm indications via Syslog and SNMP.
- E-LINE (EPL and EVPL) / E-LAN (EP-LAN and EVP-LAN) / E-ACCESS (ACCESS EPL and EVPL) / E-TREE (EP-TREE and EVP-TREE).
- UNI or NNI configuration.
- TOS (Type of Service) and Diffserv (Differentiated services).
- QoS (802.1p Quality of Service): 8 queues; strict priority and DWRR, shaping, policing, P-bit and DSCP.
- Management via Industry standard CLI, Web, SSH/SSL & SNMP (v1, v2c, v3).
- Port configuration, status, statistics, and monitoring.
- RADIUS, TACACS+ and ACL.
- Remote backup / restore configuration / firmware upgrades.
- L2CP (Layer 2 Control Protocol).
- LLDP (Link Layer Discovery Protocol).
- Port Mirroring and Remote Mirroring.
- Link Aggregation Control Protocol (LACP).
- DDMI (Digital Diagnostics Monitoring Interface).
- HQoS (Hierarchical Quality of Service) with Guaranteed Bandwidth Rate.
- JSON (JavaScript Object Notation) RPC.
- LLDP-MED per TIA-1057.
- MEP BFDs (Bidirection Forwarding Detections).
- MEP Route Trace.
- MPLS-TP (Multiprotocol Label Switching).
- PFC (802.1Qbb Priority Flow Control)
- Traffic Test Loop (Y.1564, RFC2544, and TT-Loop functions).
- UDLD (Uni Directional Link Detection) protocol support (RFC 5171).
- Y.1564 Tests and Reports.

Specifications

Standards: IEEE 802.3 for 10Base-T, IEEE 802.3u for 100Base-TX IEEE 802.3z for 1000Base-X, IEEE 802.3ab for 1000Base-T, IEEE 802.3x for Flow control, IEEE 802.3ad for LACP, (Link Aggregation Control Protocol) IEEE 802.1p for COS (Class of Service), IEEE 802.1Q for VLAN Tagging, IEEE 802.1w for RSTP (Rapid Spanning Tree Protocol), IEEE 802.1s for MSTP (Multiple Spanning Tree Protocol), IEEE 802.1x for Authentication, IEEE 802.1AB for LLDP (Link Layer Discovery Protocol), IEEE 802.3ah Link OAM, IEEE 802.1ag SOAM FM, IEEE 1588-2008 (v2) Precision Time Protocol (PTP), ITU Y.1731 PM.

Maximum MAC Addresses: 8K

Maximum VLANs: 4K VLANs

Maximum Frame Size: 1518-10240 bytes including FCS.

Memory: 8Mbit shared buffer memory

Data Rate *Copper ports:* (RJ-45): 10/100/1000 Mbps. ***SFP ports*** (empty): 100/1000 Mbps or SGMII.

Status LEDs: Power, Port Activity and Port Duplex

Dimensions *Width:* Width: 190mm, Depth: 217mm, Height: 43.5mm

Weight: (excluding packaging) 1Kg

- **Input Power AC:** 1 x 100-240 VAC; 47-63Hz Auto-sensing PSU
DC: 1 x -18VDC to -75VDC PSU

Power Consumption: nominal power measurements with all interfaces connected and active, using standard 1G MM SFP modules:

- Maximum power consumption 10 watts

Environment: Operating Temperature -20°C to +55°C, Storage Temperature -40°C to +70°C, Humidity 5-85% non-condensing

Warranty: 1 Year Hardware warranty, 90 days Software warranty.

Support: Support packages available for Technical Support, Hardware Support, Training, and Consulting.

Related Manuals and Help

The LIB-306 ships with a printed documentation postcard that points you to the online product documentation. The LIB-306 documentation set includes:

- LIB-306 Install Guide (this manual)
- LIB-306 Web User Guide
- LIB-306 CLI Reference

2. Installation

Unpacking / Package Contents

Carefully unpack the contents and verify that you have received these items in the packaging:

- One LIB-306 NID
- One country specific AC power cord (specific country variant chosen at time of order)

Save the packaging for future use.

Install Cautions and Warnings



Warning: Risk of Electrical Shock. Disconnect power before installing the LIB-306. Failure to observe this warning could result in an electrical shock.



CAUTION Only qualified persons should install the LIB-306. Failure to observe this caution could result in poor performance or damage to the equipment.



CAUTION Install the LIB-306 in an operating environment where the temperature range is from -20°C to $+55^{\circ}\text{C}$, with relative humidity of 5% to 85% non-condensing. Failure to observe this caution could result in poor equipment performance.



CAUTION DO NOT install the LIB-306 in areas where strong electromagnetic fields (EMF) exist. Failure to observe this caution could result in poor equipment performance and data corruption.



WARNING Disconnect power before installing and wiring the LIB-306 for power. Failure to observe this warning could result in an electrical shock.



Attention: this product, like all electronic products, uses semiconductors that can be damaged by ESD (electrostatic discharge). Always observe appropriate precautions when handling.

Installation Location

Deciding where to install the LIB-306 can greatly affect its performance. When selecting an installation location, consider the following:

- Install the LIB-306 in a fairly cool and dry place. See the “[Specifications](#)” section (page 7) and the cautions below for the acceptable temperature and humidity ranges.
- Install the LIB-306 where it will not be exposed to liquid.
- Install the LIB-306 in a location free from strong electromagnetic field generators (such as motors).
- Do not expose or subject the LIB-306 to excessive vibration, dust, or direct exposure to sunlight.
- Leave at least 5 cm (1.97 in) of space around the LIB-306 for ventilation purposes.

Rack Mount Installation

The LIB-306 can be rack mounted in a 19” rack via optional rack mount Kit.

Grounding and Wiring Recommendations

⚠ The LIB-306 can eliminate the effects of noise due to EMI via proper grounding. Always run the ground connection from the ground screw to the grounded surface before connecting power.

The following wiring considerations are recommended:

- Use separate paths to route wiring for power and device data cables. If power wiring and device data cables must cross, make sure that the wires are perpendicular at the intersection points.
- DO NOT run signal or communications wiring and power wiring in the same conduit. To avoid interference, wire with different signal characteristics should be wired separately.
- Keep input and output wires separated.
- Label the wiring to all devices in the system for clarity.

No power ON/OFF Switch: The LIB-306 does not include a power ON/OFF switch; therefore, when power is applied to the switch, it immediately powers Up.

Back Panel

The LIB-306 back panel is shown and described below.



RESET: The RESET button functions include:

- 1) Press and immediately release the RESET button to :
 - a. Restart the device.
- 2) Press and hold the RESET button for more than 5 seconds to:
 - a. Load the factory default configuration,
 - b. copy the running-configuration to the startup-configuration,
 - c. restart the device in factory default config.
 - d. Note that this resets the unit IP address.

The RESET button can be disabled (ignored) via the CLI. Refer to the *LIB-306 CLI Reference* manual.


Note: Restoring factory default can also be performed by making a physical loopback between port 1 and port 2 within the first minute after switch reboot. In the first minute after boot, 'loopback' packets will be transmitted at port 1. If a 'loopback' packet is received at port 2, then the switch will do a restore to defaults. Press the Enter key to display the logon sequence, and then enter your User Name and Password.

DC INPUT: -18VDC to -75VDC PSU.


AC Input: 1 x 100-240 VAC; 47-63Hz Auto-sensing PSU

Front Panel

The LIB-306 front panels are shown and described below.

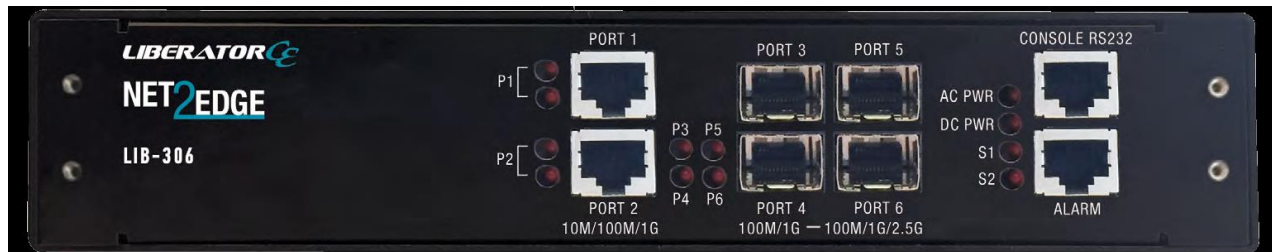

MGMT / PORT 1: Port1 (MGMT) is a normal data port, but by default it will be in a separate private VLAN (PVLAN 1) that you can remove. You can enable or disable out-of-band management on PORT 1. PORT 1 can be optionally configured to support either out-of-band management or it can be used as a normal data UNI/NNI port.

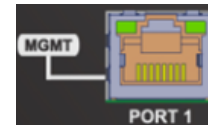

See Connecting Via the MGMT Port / Web GUI on page 15. By default, PORT 1 is enabled as a Management port with a default IP and subnet mask. See Factory Defaults on page 16. Full instructions for disabling the management function and how to use the port as a normal data port are provided in the CLI Reference and Web User Guide manuals. See also Switching MGMT / PORT 1 Modes on page 18.

GigabitEthernet 1/1 (Port 1) is configured by default to act as a management port. This is achieved by placing Port 1 in Private VLAN 6 which isolated traffic at layer 2 on this port from other front ports which are by default placed into Private VLAN 1.


PORT 2 - PORT 4 (or PORT 1 & 2): Ethernet RJ-45 (10M/100M/1 Gbps) twisted pair ports (IEEE 10/100/1000Base-T interfaces). The Port 1 and Port 2 (or PORT 1-4) LEDs are shown and described below:

LED1: Link/Activity/Duplex: ON = Link, OFF= No link

BLINK = Activity

Green = Full duplex, Yellow = Half duplex

LED2: Speed: Green = 1000Mbs, Yellow = 100Mbs, OFF = 10Mbs

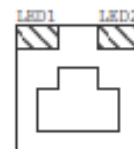

PORT 5 & 6 (or PORT 3 - PORT 6 on the LIB-306-42): Two (or four) SGMII interfaces. The Serial Gigabit Media-independent Interface (SGMII) interfaces can operate at multiple speeds of 100M/1G/2.5G bps.

P3 - P6 LED (P5 - P6 on the LIB-306-42): fiber link status. When lit in green, indicates a 1G fiber link / activity. When lit in amber, indicates a 100M fiber link / activity. When off indicates no fiber link established.



PWR LED: Green Power LED: On = power applied to the PC board. Flashes Green during LIB-306 boot up.



S1 LED: System Status LED (Bi-color Green and Amber):

During boot up – Amber

Normal operation – Green

Firmware upgrade – Flashes Green

Fatal condition logged – Flashes Amber



S2 LED: S2 is used for alarms. You can set the alarm severity to Info, Warning, or Error.

The severity is included in the alarm message and also sets the S2 LED color when the alarm is triggered. The S2 LED is amber for an Info alarm, red for a Warning alarm, and blinking red for an Error alarm. If not set, the default alarm severity is Info. See the back panel ALARMS port



description on page 13.

S2 LED is **green** when at least one alarm source is being monitored (enabled) if the severity level is *Info*.
 S2 LED is **amber** when at least one event source has triggered if the severity level is *Warning*.
 S2 LED is flashing **amber** when at least one event source has triggered if the severity level is *Error*.
 S2 LED is off when all event sources are disabled if the severity level is *Error*.


CONSOLE: RJ-45 serial port 115200 baud CLI port. The LIB-306 RJ-45 console port allows root access to its CLI (Command Line Interface) via a computer, regardless of the state of the switch (unless it is completely dead). By connecting to the console port, out-of-band remote access to the CLI of the switch is possible. This creates a secondary path to the switch outside the bandwidth of the network, which needs to be secured without relying on the primary network.

ALARMS: Alarm inputs and outputs are RJ-45 connector with 2-IN and 2-OUT; 10-30VDC, 40mA maximum; optically isolated from main board. You can connect up to two alarm inputs from external devices in your environment (e.g., a fire alarm, a door, a temperature gauge) to the alarm input port on the switch front panel. The figure below shows the location of the alarm pinouts. For each alarm input, you can configure an open or closed circuit to trigger an alarm and configure the severity of the alarm. A triggered alarm generates a system message. If you enter a descriptive name for the alarm, that name is included in the system message. A triggered alarm also turns on the LED display. The LED is normally off, meaning no alarm condition exists.

You can set the alarm severity to *Info*, *Warning*, or *Error*. The severity is included in the alarm message and also sets the S2 LED color when the alarm is triggered. The S2 LED is **amber** for an *Info* alarm, **red** for a *Warning* alarm, and blinking **red** for an *Error* alarm. If not set, the default alarm severity is *Info*.

You can use the LIB-306 web GUI or CLI to configure alarm contacts; see the related manual for details.

The ALARMS port pinning and basic block diagram are shown below.

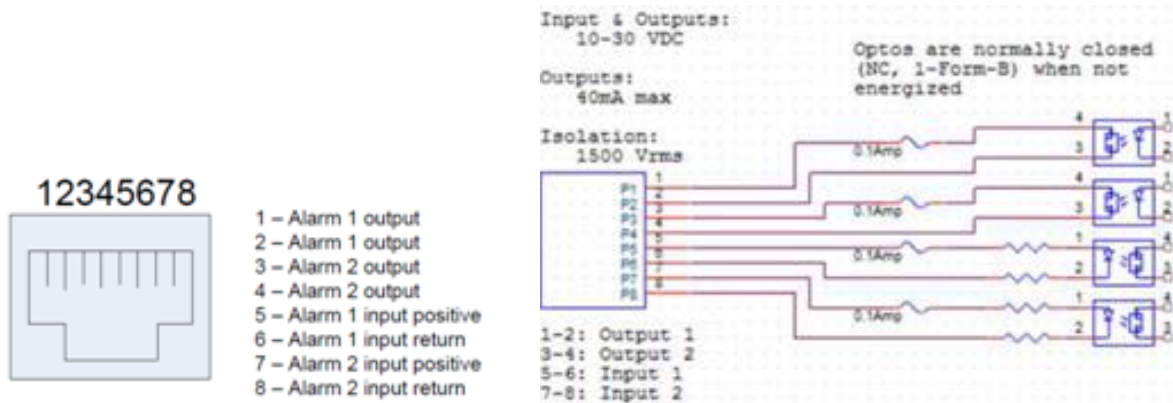

The Alarm Input and Output truth tables are provided below.

Alarm Outputs		
Alarm State & LED behavior	Trigger setting	Alarm relay out state
Asserted & Active	Close	relay closed
De-asserted & Not active	Close	relay open
Asserted & Active	Open	Relay open
De-asserted & Not active	Open	Relay closed

Alarm Inputs		
Wire state	Trigger setting	Alarm state & LED behavior
Energized	Close	<i>Asserted & Active</i>
De-energized	Close	<i>De-asserted & Not active</i>
Energized	Open	<i>De-asserted & Not active</i>
De-energized	Open	<i>Asserted & Active</i>

Connecting Power

You can connect LIB-306 power can be powered either via a DC or AC Source – or both.

Note that when power is initially applied (or when power is recycled) the LIB-306 front panel LEDs all light for approximately 10 seconds. Some LEDs will remain lit, depending on the LIB-306 operating status and port connections.

Notes:

- The range of suitable wire for the DC power terminal screws is 12 to 26 AWG.
- The DC power source must be safety certified.

Connecting Power Wires to the DC power connectors

1. Strip the wires to the proper length.
2. Insert the positive and negative power wires into the two outer screws on the DC power supply input (the DC power supply is polarity insensitive, so there is no designated V+ or V- screw connector). Make sure the wires are secure.
3. Insert the power wires from the LIB-306 into V+ and V- contacts in the power source—make sure the wires are secure.
4. Turn the power source ON and observe that the green front panel PWR (power) LED is lit, indicating that power is applied to the LIB-306.

Installing SFP Modules and Fiber Cables

Warning

Visible and invisible laser radiation when open: DO NOT stare into the beam or view the beam directly with optical instruments. Failure to observe this warning could result in an eye injury or blindness.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.


Avoid bending fiber-optic cable beyond its minimum bend radius—any arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

Installing SFPs

1. Attach an ESD-preventive wrist strap to your wrist and to a bare-metal grounded surface.
2. Have a replacement SFP or a transceiver-cage plug ready, as well as an antistatic mat and a rubber safety cap for the SFP.
3. Locate the proper fiber cable.
4. Position the cable at the SFP as shown below.

Caution: Disconnect all cables before removing or installing an SFP module to prevent damage to the fiber cable.

5. Insert the fiber cable ends completely into the SFP as shown below.
6. Insert the SFP fully into the cage as shown below.

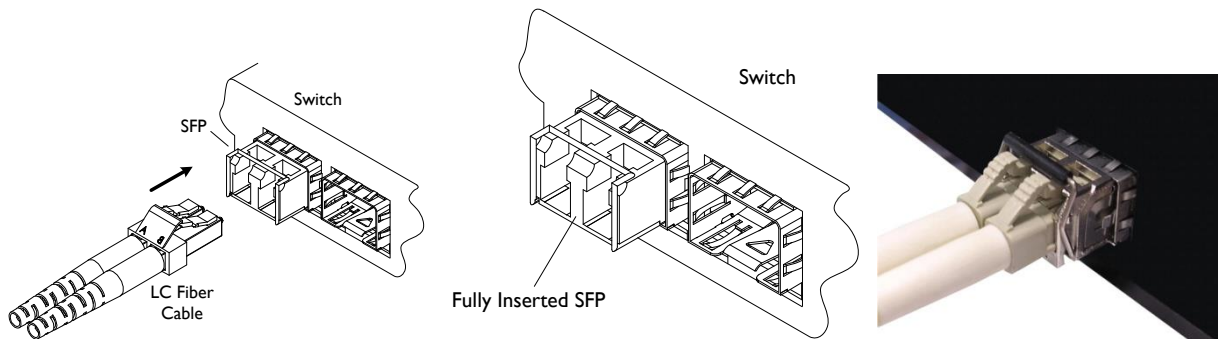


Removing SFPs

7. Attach an ESD-preventive wrist strap to your wrist and to a bare-metal grounded surface.
8. Have a replacement SFP or a transceiver-cage plug ready, as well as an antistatic mat and a rubber safety cap for the SFP.
9. Disconnect the LC cable for the SFP.
10. Pull the bale clasp handle out from the SFP to unlock the SFP.
11. Grasp the SFP bale clasp and pull the SFP approximately 0.5 inches (1.3 cm) out of the cage.
12. Using your fingers, grasp the body of the SFP and pull it completely from the cage.
13. Insert the rubber protector into the SFP module to protect it.
14. Place the SFP module in an antistatic bag or other protective environment.

Installing Copper Cables


Copper Cable Configuration

Depending on the equipment type, data terminal equipment (DTE) or data communication equipment (DCE), use a crossover or straight-through cable. See figure below.

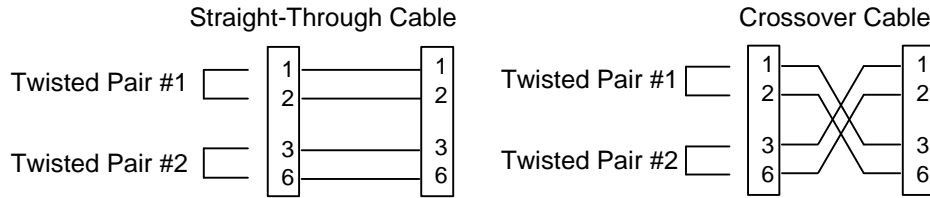


Connecting Ethernet Cables

1. Locate or build an IEEE 802.3 compliant cable with male RJ-45 connectors installed at both ends as shown below.

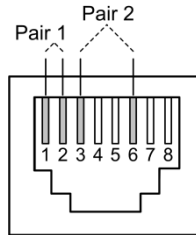

Pin	Out Jack Pin Assignments
1	Outgoing Data 1 (+)
2	Outgoing Data 2 (-)
3	Incoming Data 1 (+)
4	Not Connected
5	Not Connected
6	Incoming Data 2 (-)
7	Not Connected
8	Not Connected

2. Connect the RJ-45 connector at one end of the cable to the LIB-306 RJ-45 port.
3. Connect the RJ-45 connector at the other end of the cable to the RJ-45 Ethernet network port.

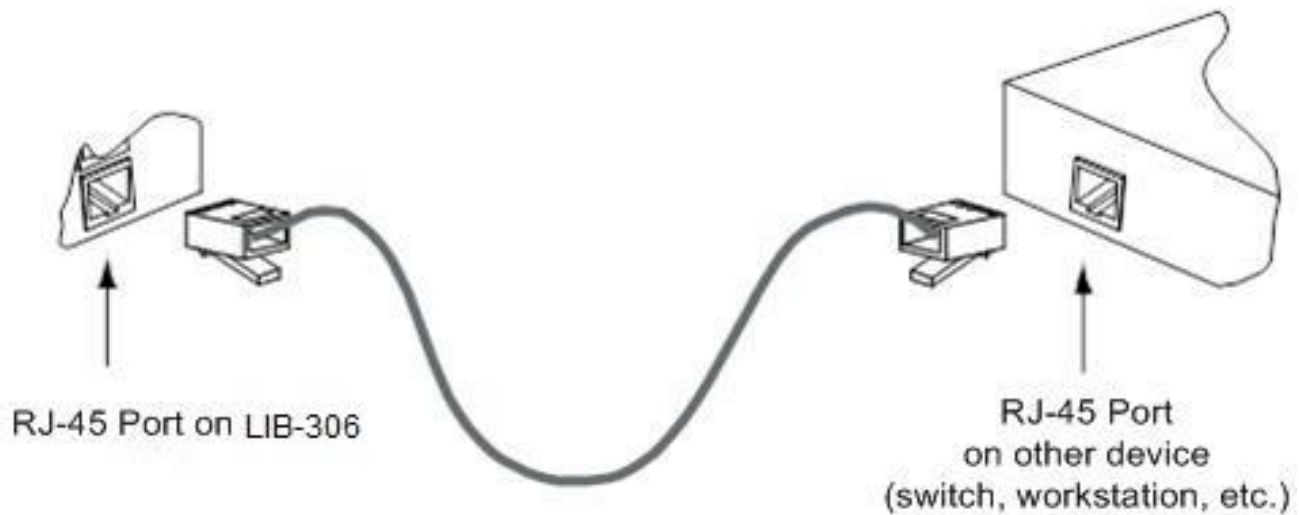

Connecting Via the Serial CONSOLE / CLI

The LIB-306 CLI interface is an Industry standard CLI and consists of different configuration commands structure with ability to configure and view the configuration using the Serial Console, Telnet, or SSH.

Connecting Via the MGMT Port / Web GUI

The LIB-306 supports these Web browsers:

- Internet Explorer
- Firefox
- Google Chrome

See the *LIB-306 Web User Guide* or the *LIB-306 CLI Reference* manual for details on configuration and management methods.

To login using the serial interface (e.g., HyperTerminal) use the setup 115200, 8, none, 1, none.

See the *LIB-306 CLI Reference* manual for details.

Type **help**, **?**, or press the Enter key to display the commands as shown below.

The screenshot shows a HyperTerminal window titled 'S3790-24 - HyperTerminal'. The window displays the following text:

```

Press ENTER to get started

Username: admin
Password:
# help
Help may be requested at any point in a command by entering
a question mark '?'. If nothing matches, the help list will
be empty and you must backup until entering a '?' shows the
available options.
Two styles of help are provided:
1. Full help is available when you are ready to enter a
command argument (e.g. 'show ?') and describes each possible
argument.
2. Partial help is provided when an abbreviated argument is entered
and you want to know what arguments match the input
(e.g. 'show pr?'.)

# ?
clear          Reset functions
configure      Enter configuration mode
copy           Copy from source to destination
delete        Delete one file in flash: file system
dir           Directory of all files in flash: file system
disable       Turn off privileged commands
do            To run exec commands in config mode
dot1x         IEEE Standard for port-based Network Access Control
enable       Turn on privileged commands
erps          Ethernet Ring Protection Switching
exit          Exit from EXEC mode
firmware      Firmware upgrade/swap
help          Description of the interactive help system
ip            IPv4 commands
ipv6          IPv6 configuration commands
link-oam      Link OAM configuration
logout        Exit from EXEC mode
more          Display file
no            Negate a command or set its defaults
ping          Send ICMP echo messages
ptp           Misc non persistent 1588 settings
reload        Reload system.
-- more --, next page: Space, continue: g, quit: ^C_

```

The status bar at the bottom of the window shows: Connected 4:34:37, ANSIW, 115200 8-N-1, SCROLL, CAPS, NUM, Capture, Print echo.

Factory Defaults

The LIB-306 comes with the following defaults:

DHCP	Ipv4 Address	Ipv6 Address
Enabled	192.168.0.1	::192.0.2.1

Note: after power up, the LIB-306 has DHCP enabled. If a DHCP server is available, the LIB-306 will obtain an IP address from the DHCP server. If no DHCP server is available, after 70 seconds, the LIB-306 will fall back to the default IP address of 192.168.0.1/24.

Static IP configuration

You can change the defaults via the CLI. **Note:** you may want to save the existing config to startup config first by using the **copy running-config** command. See the CLI Reference manual for details. To manually configure the IP address:

1. At the command prompt type # **configure terminal** and press the Enter key to enter config mode.
2. Enter the command (config)# **interface vlan 1** and press the Enter key to enter the interface config mode.
3. Set the IP to 192.168.1.110 and subnet to 255.255.255.0 (substitute what you would like the static IP and subnet to be). You can change the current IP address using the following command:

```
(config-if-vlan)# ip address 192.168.1.110 255.255.255.0
```


See the *LIB-306 CLI Reference* manual for CLI command information for CLI details.

4. To verify the change, you can log in to the LIB-306 Web GUI using IP address **192.168.1.110**. See the *LIB-306 Web User Guide* for more information.

Login using PuTTY Terminal Emulator Software

1. Start a PuTTY session. In the PuTTY dialog box in the “Host Name {or IP Address}” field, enter the IP address of the switch (e.g., 192.168.1.110). In the Port field, enter 22.
2. Name the session in the “Saved Sessions” field (e.g., as *LIB-306 SW*).
3. Click the **Save** button and the dialog box displays.
4. Click the **Open** button to launch the login screen.


Note: If a Security Alert displays, click YES, if you trust the host and the key will be added to the PuTTY cache. Click NO if you do not want to register the key for this session.
5. At the login prompt, type “**admin**” (default/lowercase).
6. Press the Enter key twice to bring up the Root (top) level commands as shown below.

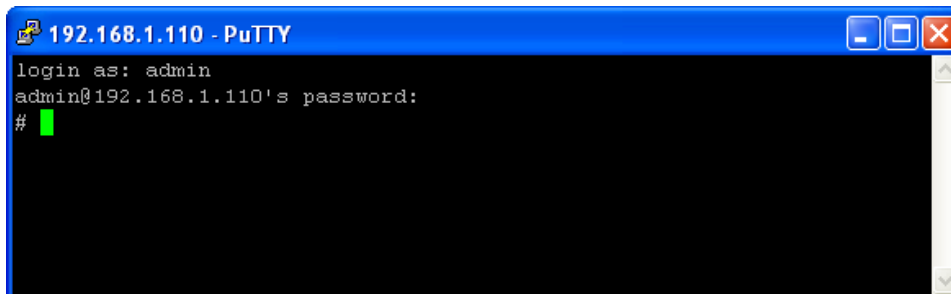

See the *LIB-306 CLI Reference* manual for CLI command information for CLI details.

Login Using Telnet

1. Use the Windows Start > Command Prompt menu path to display the command.
2. At the command prompt type **Telnet** and then 192.168.1.110 and press the Enter key
3. At the Username prompt, enter admin (lower case) and press the Enter key.
4. At the Password prompt press the Enter key to display the # prompt.
5. At the # prompt enter CLI commands as desired.

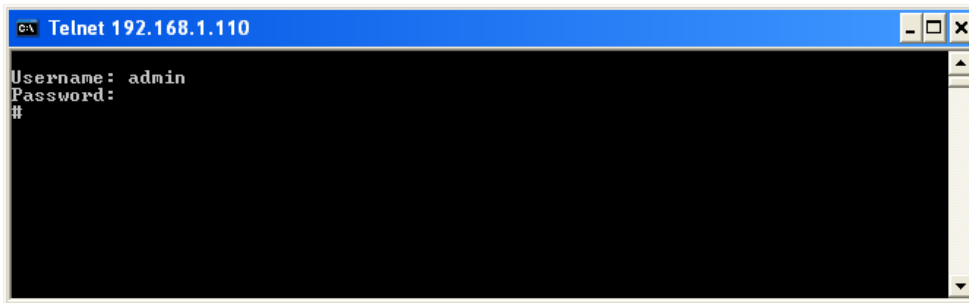

See the *LIB-306 CLI Reference* manual for CLI command information for CLI details.

Login Using the Web Interface

1. Launch a web browser (Internet Explorer/FireFox).
2. Enter the LIB-306 IP address (e.g., 192.168.0.1) in the browser URL field.
3. Press the Enter key to launch the login dialog box.
4. In the user name field type “**admin**” (lowercase) and leave the password field empty (no password).
5. Press the Enter key to launch the LIB-306 web GUI.
6. See the *LIB-306 Web User Guide* manual for web GUI configuration, monitoring, diagnostics, and maintainance.

Re-Access the Web GUI via CLI Commands

You can use the following CLI commands to regain web GUI access (e.g., after a Software Upload).

```
# show ip int brief
Vlan Address Method Status
-----
# conf term
(config)# int vlan 1
(config-if-vlan)# ip addr 192.168.1.110 255.255.255.0
(config-if-vlan)# end
# show ip int brief
Vlan Address Method Status
-----
1 192.168.1.110/24 Manual UP
#
```

You can then access the web GUI via the IP address and netmask entered (e.g., 192.168.1.110 and 255.255.255.0 in the example above). See the *LIB-306 CLI Reference* manual for details.

Switching MGMT / PORT 1 Modes

The LIB-306 MGMT / PORT 1 is a normal data port, but by default it will be in a separate private VLAN that you can remove. You can enable or disable out-of-band management on Port 1. Port 1 can be optionally configured to support either out-of-band management or it can be used as a normal data UNI/NNI port. By default, Port 1 is enabled as a management port with a default IP (192.168.0.1/24) and subnet mask. By default, all ports are VLAN unaware and members of VLAN 1 and Private VLAN 1.

To configure Port 1 as a normal front panel data port, use the settings below.

Normal front port:


```
interface GigabitEthernet 1/1
!
```

Management Port:

```
interface GigabitEthernet 1/1
no pvlan 1
pvlan 6
no ip dhcp forwarding
no spanning-tree
!
```

Configure the Default Management Port as a Data Port

The GigabitEthernet 1/1 (**MGMT / PORT 1**) is configured as a Management Port by default:

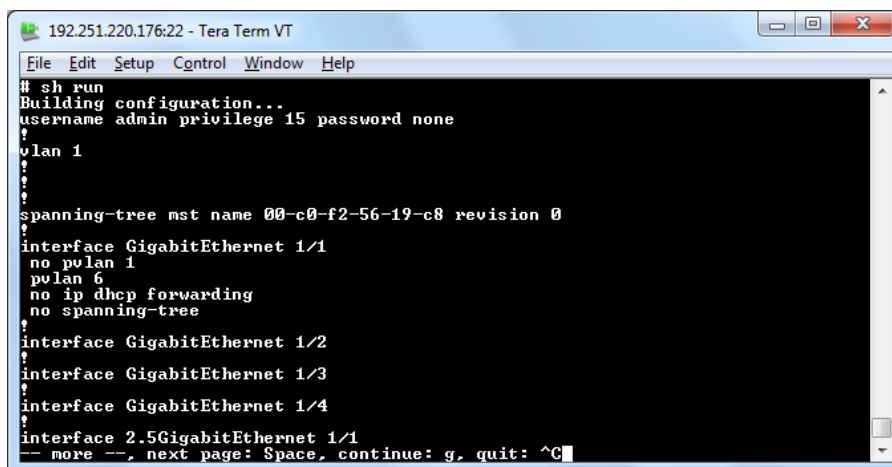

```
192.251.220.176:22 - Tera Term VT
File Edit Setup Control Window Help
# sh run
Building configuration...
username admin privilege 15 password none
!
vlan 1
!
spanning-tree mst name 00-c0-f2-56-19-c8 revision 0
!
interface GigabitEthernet 1/1
no pvlan 1
pvlan 6
no ip dhcp forwarding
no spanning-tree
!
interface GigabitEthernet 1/2
!
interface GigabitEthernet 1/3
!
interface GigabitEthernet 1/4
!
interface 2.5GigabitEthernet 1/1
-- more --, next page: Space, continue: g, quit: ^C
```

Alternatively, any port can be designated as a Management port. To change GigabitEthernet 1/1 to act as a data port:

1. Disable spanning-tree on the port designated for Management. Remove pvlan 1 from the new interface and disable dhcp forwarding, and add pvlan6:

```
(config)# int Gi 1/2
(config-if)# no spanning-tree
(config-if)# no pvlan 1
(config-if)# no ip dhcp forwarding
(config-if)# pvlan 6
```

2. Physically connect to the newly designated Management port.
3. Enable pvlan 1 for the new port designated as a data port.
4. If necessary enable spanning-tree on the new data port.

Additional instructions for disabling management are provided in CLI and Web manuals.

Product Registration

It is important to register the product for the following reasons:

- Software/Firmware/Driver updates.
- Have access to all of our training tools, videos, content and downloads.
- Technical documentation and information about support assistance.
- Receive email alerts of new products according to personal interest.

3. Troubleshooting

This section provides basic LIB-306 troubleshooting procedures.

1. Verify the Product Description, Models, Applications, Features, and Specifications in the “[Introduction](#)” section starting on page 4 of this manual.
2. Verify the procedures in section 2. [Installation](#) starting on page 8 of this manual.
3. Make sure your particular model supports the function attempted.
4. Verify the Installation. Check the Operating System, Web Browser, Telnet Client, and/or Terminal Emulation package support.
5. Respond to any LIB-306 error messages (see the Error Messages section of the *LIB-306 CLI Reference* or the *LIB-306 Web User Guide*).
6. Run the LIB-306 Diagnostics tests and verification functions (e.g., Ping, VeriPHY). See the “Diagnostics” section of the *LIB-306 Web User Guide* manual.
7. Check the LIB-306 operating parameters (e.g., Information, CPU Load, Log, Detailed Log). See the “Operation” section of the *LIB-306 Web User Guide* manual.
8. If you can access the LIB-306 via PuTTY or HyperTerminal but not via the web interface, in config mode, enter the **default keep_ip** CLI command and try accessing the LIB-306 web interface again.
9. If you have problems displaying the LIB-306 web interface in IE, try displaying in Compatibility View from the IE Tools > Compatibility View menu path.
10. Record the error condition. See “[Recording Model and System Information](#)” below.
11. Contact Net2Edge Tech Support. See section “[4. Service, Warranty and Tech Support](#)” on page 22.

Recording Model and System Information

After performing the troubleshooting procedures, and before calling or emailing Technical Support, please record as much information as possible in order to help the Net2Edge Tech Support Specialist.

1. Select the LIB-306 **Configuration > System > Information** menu path. (From the CLI, use the **show** commands needed to gather the information below or as requested by the Net2Edge Support Specialist).

2. Record LIB-306 **Model Information**:

Serial #: _____ MAC Address: _____

System Uptime: _____ Software Version: _____

3. Record the **Monitor** menu information:

Monitor > System > Information: _____

Monitor > System > IP Status: _____

LED Status: _____

4. Provide additional Model and System information to your Technical Support Specialist. See the [“Troubleshooting”](#) section above.

Your Net2Edge service contract number: _____

A description of the failure: _____

A description of any action(s) already taken to resolve the problem (e.g., changing mode, rebooting, etc.): _____

The serial and revision numbers of all involved Net2Edge products in the network:

A description of your network environment (layout, cable type, etc.): _____

Network load and frame size at the time of trouble (if known): _____

The device history (i.e., have you returned the device before, is this a recurring problem, etc.):

Any previous Return Material Authorization (RMA) numbers: _____



Serial Label on LIB-306-24 Bottom

4. Service, Warranty and Tech Support

Contact Us

Technical Support

+44-345-0130030, xtn 6810

E-Mail

To ask a question anytime, send an e-mail to our technical support staff at support@net2edge.com

Address

Net2Edge Ltd.
Kulite House,
Stroudley Road,
Basingstoke
RG24 8UG, UK.
Tel: +44 345 0130030

Warranty

One-Year Limited Hardware Warranty

Net2Edge warrants to the original consumer or purchaser that each of its Liberator products and all components thereof, will be free from defects in material and/or workmanship for a period of one year from the original factory shipment date. Any warranty hereunder is extended to the original consumer or purchaser and is not assignable. Net2Edge makes no express or implied warranties including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose, except as expressly set forth in this warranty. In no event shall Net2Edge be liable for incidental or consequential damages, costs, or expenses arising out of or in connection with the performance of the product delivered hereunder. Net2Edge will in no case cover damages arising out of the product being used in a negligent fashion or manner.

Return Authorization

To return a defective product for warranty coverage, contact Net2Edge's technical support department for a return authorization number. Net2Edge's technical support department can be reached through any of the following means:

Return Instructions

Send the defective product postage and insurance prepaid to the following address:

Net2Edge Ltd.
Kulite House,
Stroudley Road,
Basingstoke, RG24 8UG, UK.

Attn: RETURNS DEPT: CRA/RMA # _____

Failure to properly protect the product during shipping may void this warranty. The return authorization number must be written on the outside of the carton to ensure its acceptance. We cannot accept delivery of any equipment that is sent to us without a CRA or RMA number.

CRA's are valid for 60 days from the date of issuance. An invoice will be generated for payment on any unit(s) not returned within 60 days.

Upon completion of a demo/ evaluation test period, units must be returned or purchased within 30 days. An invoice will be generated for payment on any unit(s) not returned within 30 days after the demo/ evaluation period has expired.

The customer must pay for the non-compliant product(s) return transportation costs to Net2Edge for evaluation of said product(s) for repair or replacement. Net2Edge will pay for the shipping of the repaired or replaced in-warranty product(s) back to the customer (any and all customs charges, tariffs, or/and taxes are the customer's responsibility).

Before making any non-warranty repair, Net2Edge requires a \$200.00 charge plus actual shipping costs to and from the customer. If the repair is greater than \$200.00, an estimate is issued to the customer for authorization of repair. If no authorization is obtained, or the product is deemed non-repairable, Net2Edge will retain the \$200.00 service charge and return the product to the customer not repaired. Non-warranted products that are repaired by Net2Edge for a fee will carry a 180-day limited warranty. All warranty claims are subject to the restrictions and conventions set forth by this document.

Net2Edge reserves the right to charge for all testing and shipping incurred, if after testing, a return is classified as "No Problem Found."

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. NET2EDGE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE OR THEORY. AUTHORIZED RESELLERS ARE NOT AUTHORIZED TO EXTEND ANY DIFFERENT WARRANTY ON NET2EDGE'S BEHALF.

European Regulations

WARNING: This is a Class A product. In a domestic environment, this product could cause radio interference in which case the user may be required to take adequate measures.

Achtung ! Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten. In diesem Fall ist der Benutzer für Gegenmaßnahmen verantwortlich.

Attention ! Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.



In accordance with European Union Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003, Net2Edge will accept post usage returns of this product for proper disposal. The contact information for this activity can be found in the 'Contact Us' portion of this document.



CAUTION: RJ connectors are NOT INTENDED FOR CONNECTION TO THE PUBLIC TELEPHONE NETWORK. Failure to observe this caution could result in damage to the public telephone network.

Der Anschluss dieses Gerätes an ein öffentliches Telekommunikationsnetz in den EG-Mitgliedstaaten verstößt gegen die jeweiligen einzelstaatlichen Gesetze zur Anwendung der Richtlinie 91/263/EWG zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über Telekommunikationsendeinrichtungen einschliesslich der gegenseitigen Anerkennung ihrer Konformität.

Electrical Safety Warnings

Electrical Safety

IMPORTANT: This equipment must be installed in accordance with safety precautions.

Elektrische Sicherheit

WICHTIG: Für die Installation dieses Gerätes ist die Einhaltung von Sicherheitsvorkehrungen erforderlich.

Elektrisk sikkerhed

VIGTIGT: Dette udstyr skal 25nstillers I overensstemmelse med sikkerhedsadvarslerne.

Elektrische veiligheid

BELANGRIJK: Dit apparaat moet in overeenstemming met de veiligheidsvoorschriften worden geïnstalleerd.

Sécurité électrique

IMPORTANT : Cet équipement doit être utilisé conformément aux instructions de sécurité.

Sähköturvallisuus

TÄRKEÄÄ : Tämä laite on asennettava turvaohjeiden mukaisesti.

Sicurezza elettrica

IMPORTANTE: questa apparecchiatura deve essere installata rispettando le norme di sicurezza.

Elektrisk sikkerhet

VIKTIG: Dette utstyret skal 25nstillers I samsvar med sikkerhetsregler.

Segurança eléctrica

IMPORTANTE: Este equipamento tem que ser instalado segundo as medidas de precaução de segurança.

Seguridad eléctrica

IMPORTANTE: La instalación de este equipo deberá llevarse a cabo cumpliendo con las precauciones de seguridad.

Elsäkerhet

OBS! Alla nödvändiga försiktighetsåtgärder måste vidtas när denna utrustning används.