

## User's Guide CETTF10xx-200

### Slide-in-Module Media Converter

- **Ethernet**
- **Copper to Fiber**
- **10Base-T to 10Base-FL**

Transition Networks CETTF10xx-200 series Ethernet 10Base-T to 10Base-FL media converters (designed to be installed in a *PointSystem™* chassis) connect 10Base-T twisted-pair copper cable to multimode or single mode 10Base-FL fiber-optic cable.

| Part Number          | Port One - Copper<br>10Base-T | Port Two - Fiber-Optic<br>10Base-FL            |
|----------------------|-------------------------------|--|
| <b>CETTF1011-200</b> | RJ-45<br>100 m (328 m)*       | ST, 850 nm multimode<br>2 km (1.2 miles)*      |
| <b>CETTF1012-200</b> | RJ-45<br>100 m (328 m)*       | ST, 1310 nm single mode<br>20 km (12.4 miles)* |
| <b>CETTF1013-200</b> | RJ-45<br>100 m (328 m)*       | SC, 850 nm multimode<br>2 km (1.2 miles)*      |
| <b>CETTF1014-200</b> | RJ-45<br>100 m (328 m)*       | SC, 1310 nm single mode<br>20 km (12.4 miles)* |
| <b>CETTF1022-200</b> | RJ-45<br>100 m (328 m)*       | ST, 1310 nm single mode<br>40 km (24.9 miles)* |
| <b>CETTF1027-200</b> | RJ-45<br>100 m (328 m)*       | ST, 1300 nm multimode<br>5 km (3.1 miles)*     |

\* Typical maximum cable distance. Actual distance is dependent upon the physical characteristics of the network installation.


|                                    |    |
|------------------------------------|----|
| Installation . . . . .             | 2  |
| Operation . . . . .                | 5  |
| Cable Specifications . . . . .     | 7  |
| Technical Specifications . . . . . | 9  |
| Troubleshooting . . . . .          | 10 |
| Contact Us . . . . .               | 11 |
| Compliance Information . . . . .   | 12 |

## Installation

**CAUTION:** Wear a grounding device and observe electrostatic discharge precautions when setting the 4-position switch and the jumper. **Failure to observe this caution could result in damage to, and subsequent failure of, the media converter.**

### Set the 4-Position Switch

- The 4-position switch is located on the media converter circuit board.
- Use a small flat-blade screwdriver to set the switches (see the drawing).

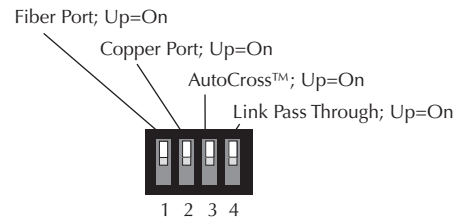

**NOTE:** When the fiber port or the copper port is disabled (switches 1 and 2), network traffic coming into the media converter is ignored and no traffic flows out. In this mode, the media converter is disconnected from the network.

#### 1. Fiber Port (10Base-FL)

- Up Enables network traffic on the fiber port.
- Down Disables network traffic on the fiber port.

#### 2. Copper Port (10Base-T)

- Up Enables network traffic on the copper port.
- Down Disables network traffic on the copper port.

#### 3. AutoCross

- Up Enables AutoCross (see page 6).
- Down Disables AutoCross.  
(When AutoCross is disabled, the 10Base-T (copper) port is in MDI-X (crossover) mode.)

#### 4. Link Pass-Through

- Up Enables Link Pass-Through (see page 6).
- Down Disables Link Pass-Through.  
(When Link Pass-Through is disabled, remote faults are not passed along to any downstream equipment.)

### Set the Jumper

The jumper is located on the media converter circuit board. Use small needle-nosed pliers or a similar device to set the jumper.

**Hardware** The media converter mode is determined by the 4-position switch settings.



**Software** The media converter mode is determined by the most-recently saved, on-board microprocessor settings.




## Installation -- Continued

### Install the Slide-in-Module

**CAUTION:** Wear a grounding device and observe electrostatic discharge precautions when installing the CETTF10xx-200 slide-in-module media converter. **Failure to observe this caution could result in damage to, and subsequent failure of, the media converter.**


To install the CETTF10xx-200 slide-in-module media converter.

- Carefully slide the slide-in-module into the installation slot, aligning the module with the installation guides.
- Ensure that the module is firmly seated inside the chassis.
- Push in and rotate the attached panel fastener screw clockwise to secure the module to the chassis front.

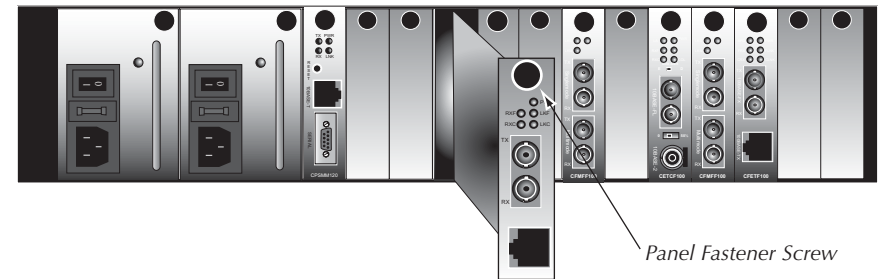

### Connect the Twisted-Pair Copper Cable


- Locate or build IEEE 803.2™ compliant 10Base-T cables, with straight-through RJ-45 cable, and with straight-through RJ-45 connectors installed at both ends.
- Connect the RJ-45 connector at one end of the cable to the RJ-45 port on the CETTF10xx-200 media converter.
- Connect the RJ-45 connector at the other end of the cable to the RJ-45 port on the other device (switch, workstation, etc.).

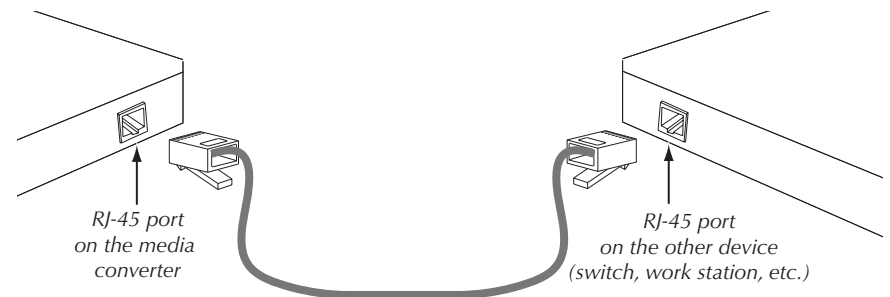

## Installation -- Continued

### Connect the Fiber Cable

1. Locate or build IEEE 803.2™ compliant 10Base-FL fiber cable with male, two-stranded TX to RX connectors installed at both ends.
2. Connect the fiber cables to the CETTF10xx-200 media converter as described:
  - Connect the male **TX** cable connector to the female **TX** port.
  - Connect the male **RX** cable connector to the female **RX** port.
3. Connect the fiber cables to the other device (another media converter, hub, etc.) as described:
  - Connect the male **TX** cable connector to the female **RX** port.
  - Connect the male **RX** cable connector to the female **TX** port.

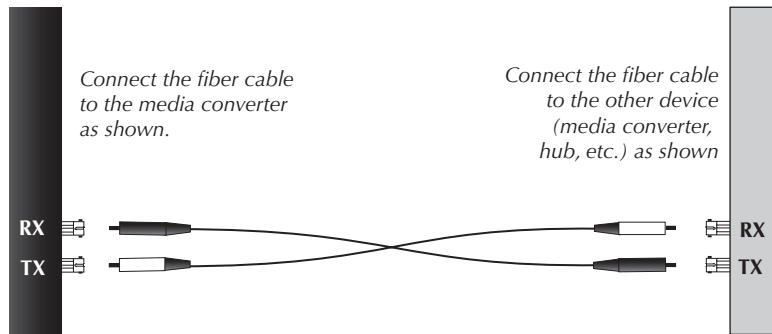

### Power the Media Converter

The slide-in-module media converter is powered through the Transition Networks *PointSystem*™ chassis.

## Operation

### Status LEDs

Use the status LEDs to monitor the media converter operation in the network


**PWR** (**Power**) On = Connection to external AC power.

**LKF** (**Link - fiber**) On = The fiber link is up.  
Off = A lack of power or a broken fiber link.

**RXF** (**Receive - fiber**) Flashing = Data reception on the fiber link.

**LKC** (**Link - copper**) On = The copper link is up.  
Off = A lack of power or a broken copper link.

**RXC** (**Receive - copper**) Flashing = Data reception on the copper link.

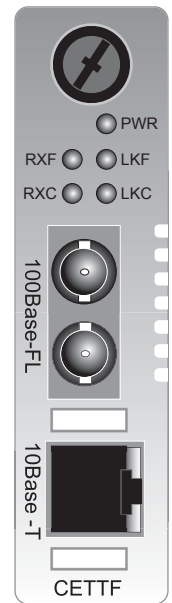

### SNMP

Use SNMP at an attached terminal or at a remote location to monitor the media converter by monitoring:

- Media converter power.
- Copper link and fiber link status.
- Copper receive and fiber receive status.
- Hardware switch settings.
- Fault Condition.

Also, use SNMP to enter network commands that:

- Enable/disable the copper port .
- Enable/disable the fiber port.
- Enable/disable AutoCross.
- Enable/disable Link Pass-Through.
- Power down the Media Converter.

See the on-line documentation that comes with Transition Networks *FocalPoint*™ software for applicable commands and usage at [www.transition.com](http://www.transition.com).

## Operation -- Continued

### Product Features


#### AutoCross™

The AutoCross feature detects and configures the twisted-pair copper port on the CETTF10xx-200 media converter to the correct straight-through (MDI) or crossover (MDI-X) configuration. This feature allows either MDI or MDI-X cable to connect the media converter to devices such as hubs, transceivers, or network interface cards (NICs).

**NOTE:** When AutoCross is disabled, the 10Base-T (copper) port is in MDI-X (crossover) mode.

#### Link Pass-Through

The Link Pass-Through feature allows the media converter to monitor both the fiber and copper RX (receive) ports for loss of signal. In the event of a loss of an RX signal (1), the media converter will automatically disable the TX (transmit) signal (2), thus, “passing through” the link loss (3). The far-end device is automatically notified of the link loss (4), which prevents the loss of valuable data unknowingly transmitted over an invalid link.

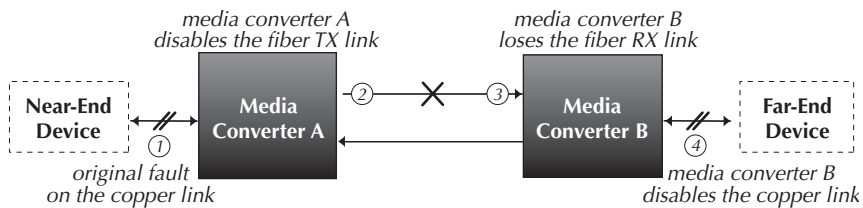

**NOTE:** An enable/disable switch allows the Link Pass-Through feature to be disabled. Link Pass-Through may interfere with the Auto-Negotiation feature of other devices in networks where there are two media converters installed in series.

## Cable Specifications

The physical characteristics must meet or exceed IEEE 802.3™ specifications.

### Fiber Cable

|                                  |                            |
|----------------------------------|----------------------------|
| Bit Error Rate:                  | <10 <sup>-9</sup>          |
| Single mode fiber (recommended): | 9 μm                       |
| Multimode fiber (recommended):   | 62.5/125 μm                |
| Multimode fiber (optional):      | 100/140, 85/140, 50/125 μm |

|                                   |                               |
|-----------------------------------|-------------------------------|
| <b>CETTF1011-200</b>              | 850 nm multimode              |
| Fiber Optic Transmitter Power:    | min: -19.0 dBm max: -14.0 dBm |
| Fiber Optic Receiver Sensitivity: | min: -32.5 dBm max: -14.0 dBm |
| Link Budget:                      | 13.5 dB                       |

|                                   |                               |
|-----------------------------------|-------------------------------|
| <b>CETTF1012-200</b>              | 1310 nm single mode           |
| Fiber Optic Transmitter Power:    | min: -27.0 dBm max: -10.0 dBm |
| Fiber Optic Receiver Sensitivity: | min: -34.0 dBm max: -14.0 dBm |
| Link Budget:                      | 7.0 dB                        |

|                                   |                               |
|-----------------------------------|-------------------------------|
| <b>CETTF1013-200</b>              | 850 nm multimode              |
| Fiber Optic Transmitter Power:    | min: -19.0 dBm max: -14.0 dBm |
| Fiber Optic Receiver Sensitivity: | min: -32.5 dBm max: -14.0 dBm |
| Link Budget:                      | 13.5 dB                       |

|                                   |                               |
|-----------------------------------|-------------------------------|
| <b>CETTF1014-200</b>              | 1310 nm single mode           |
| Fiber Optic Transmitter Power:    | min: -27.0 dBm max: -10.0 dBm |
| Fiber Optic Receiver Sensitivity: | min: -34.0 dBm max: -14.0 dBm |
| Link Budget:                      | 7.0 dB                        |

|                                   |                               |
|-----------------------------------|-------------------------------|
| <b>CETTF1022-200</b>              | 1310 nm single mode           |
| Fiber-optic Transmitter Power:    | min: -15.0 dBm max: -5.0 dBm  |
| Fiber-optic Receiver Sensitivity: | min: -34.0 dBm max: -14.0 dBm |
| Link Budget:                      | 19.0 dB                       |

|                                   |                               |
|-----------------------------------|-------------------------------|
| <b>CETTF1027-200</b>              | 1300 nm multimode             |
| Fiber-optic Transmitter Power:    | min: -19.0 dBm max: -15.0 dBm |
| Fiber-optic Receiver Sensitivity: | min: -32.5 dBm max: -14.0 dBm |
| Link Budget:                      | 13.5 dB                       |

Product is certified by the manufacturer to comply with DHHS Rule 21/CFR, Subchapter J applicable at the date of manufacture.

**The fiber optic transmitters on this device meets Class I Laser safety requirements per IEC-825/CDRH standards and complies with 21 CFR1040.10 and 21CFR1040.11.**

**CAUTION:** Visible and Invisible Laser Radiation When Open. Do Not Stare Into Beam Or View Directly With Optical Instruments.

**CAUTION:** Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

## Cable Specifications -- Continued

### Copper Cable


#### Category 3: (minimum requirement)

|                        |                         |
|------------------------|-------------------------|
| Gauge                  | 24 to 22 AWG            |
| Attenuation            | 11.5 dB/100m @ 5-10 MHz |
| Maximum Cable Distance | 100 meters              |

#### Category 5: (recommended)

|                        |                         |
|------------------------|-------------------------|
| Gauge                  | 24 to 22 AWG            |
| Attenuation            | 22.0 dB /100m @ 100 MHz |
| Maximum Cable Distance | 100 meters              |

- Straight-through **OR** twisted-pair cable may be used.
- Shielded twisted-pair **OR** unshielded twisted-pair may be used.
- Pins 1&2 and 3&6 are the two active pairs in an Ethernet network.
- Use only dedicated wire pairs for the active pins:  
(e.g., blue/white & white/blue, orange/white & white/orange, etc.)
- Do not use flat or silver satin wire.

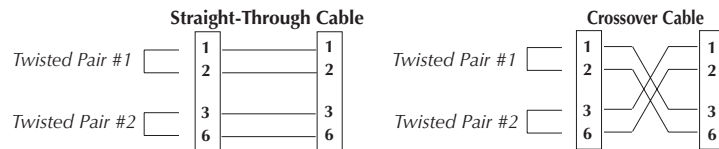

## Technical Specifications

For use with Transition Networks Model CETTF10xx-200 or equivalent.

|                          |  |
|--------------------------|--|
| <b>Standards</b>         | IEEE 802.3™  |
| <b>Data Rate</b>         | 10 Mb/s  |
| <b>Dimensions</b>        | 3.4" x 0.86" x 5.0" (86 x 22 x 127 mm)   |
| <b>Weight</b>            | 3 oz (91 g) (approximate)  |
| <b>Power Consumption</b> | 2.3 watts  |
| <b>MTBF</b>              | 408,231 hours (MIL217F2 V5.0) (MIL-HDBK-217F)<br>1,412,845 hours (Bellcore7 V5.0)  |
| <b>Environment</b>       | Tmra*: 0 to 60°C (32 to 140°F)<br>Storage Temp: -20 to 85°C (-4 to 185°F)<br>Humidity: 10 to 90%, non condensing<br>Altitude: 0 to 10,000 feet |
| <b>Warranty</b>          | Lifetime   |

\*Manufacturer's rated ambient temperature: Tmra range for this media converter depends on the physical characteristics and the installation configuration of the Transition Networks *PointSystem*™ chassis in which this media converter will be installed.

The information contained in this user's guide is subject to change. For the most up-to-date version, see the user's guide on line at: [www.transition.com](http://www.transition.com).

## Troubleshooting

If the media converter fails, isolate and correct the failure by determining the answers to the following questions and then taking the indicated action:

1. **Is the PWR LED illuminated?**  
**NO**
  - Is the media converter slide-in-module installed properly in the chassis?
  - Is the power cord properly installed in the chassis and at the external power source?
  - Does the external power source provide power?
  - Contact Tech Support: (800) 260-1312, Int'l: 00-1-952-941-7600.**YES**
  - Proceed to step 2.
2. **Is the LKC LED illuminated?**  
**NO**
  - Check twisted-pair cables for proper connection.
  - Contact Tech Support: (800) 260-1312, Int'l: 00-1-952-941-7600.**YES**
  - Proceed to step 3.
3. **Is the LKF LED illuminated?**  
**NO**
  - Check fiber cables for proper connection.
  - Verify that TX and RX cables on media converter are connected to RX and TX ports, respectively, on other device.
  - Contact Tech Support: (800) 260-1312, Int'l: 00-1-952-941-7600.**YES**
  - Proceed to step 4.
4. **Is the RXC LED flashing?**  
**NO**
  - If there is no activity on the 10Base-T port, proceed to step 5.
  - If there is activity on the 10Base-T port, disconnect and reconnect the 10Base-T cable to restart the initialization process.
  - Restart the workstation to restart the initialization process.
  - Contact Tech Support: (800) 260-1312, Int'l: 00-1-952-941-7600.**YES**
  - Proceed to step 5.
5. **Is the RXF LED flashing?**  
**NO**
  - If there is no activity on the 10Base-FL port, continue below
  - If there is activity on the 10Base-FL port, disconnect and reconnect the 10Base-FL cable to restart the initialization process.
  - Verify that TX and RX cables on media converter are connected to RX and TX ports, respectively, on other device.
  - Restart the workstation to restart the initialization process.
  - Contact Tech Support: (800) 260-1312, Int'l: 00-1-952-941-7600.**YES**
  - Contact Tech Support: (800) 260-1312, Int'l: 00-1-952-941-7600.

## Contact Us

### Technical Support

Technical support is available 24 hours a day.

US and Canada: **1-800-260-1312**  
 International: **00-1-952-941-7600**

### Transition Now

Chat live via the Web with Transition Networks Technical Support. Log onto **www.transition.com** and click the **Transition Now** link.

### Web-Based Seminars



Transition Networks provides seminars via live web-based training. Log onto **www.transition.com** and click the **Learning Center** link.

### E-Mail

Ask a question anytime by sending an e-mail to our technical support staff. **techsupport@transition.com**

### Address

Transition Networks  
 6475 City West Parkway  
 Minneapolis, MN 55344, USA  
 telephone: 952-941-7600  
 toll free: 800-526-9267  
 fax: 952-941-2322

|  <b>Declaration of Conformity</b>                   |   |
|--|---|
| Name of Mfg:   | <b>Transition Networks</b><br>6475 City West Parkway, Minneapolis MN 55344 USA  |
| Model:   | <b>CETTF10xx-200 Series Media Converters</b>  |
| Part Number(s):  | <b>CETTF1011-200, CETTF1012-200, CETTF1013-200, CETTF1014-200,<br/>CETTF1022-200, CETTF1027-200</b>   |
| Regulation:  | <b>EMC Directive 89/336/EEC</b>   |
| Purpose:   | To declare that the <b>CETTF10xx-200</b> to which this declaration refers is in conformity with the following standards.<br>CISPR 22 :1993; EN 55022:1994+A1:1995+A2:1997; EN 55024:1998 Class A & B;<br>FCC Part 15 Subpart B; EN 61000-3-2:1995; EN61000-3-3:1995 |
| <i>I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).</i>         |   |
| <br>Stephen Anderson, Vice-President of Engineering | October 7, 2001<br>Date   |

---

# Compliance Information

CISPR22/EN55022 Class A & B + EN55204  
CE Mark

## FCC Regulations

This equipment has been tested and found to comply with the limits for a Class A & B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at the user's own expense.

## Canadian Regulations

This digital apparatus does not exceed the Class A & B limits for radio noise for digital apparatus set out on the radio interference regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Class A & B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



**CAUTION: RJ connectors are NOT INTENDED FOR CONNECTION TO THE PUBLIC TELEPHONE NETWORK. Failure to observe this caution could result in damage to the public telephone network.**

**Der Anschluss dieses Gerätes an ein öffentliches Telekommunikationsnetz in den EG-Mitgliedstaaten verstößt gegen die jeweiligen einzelstaatlichen Gesetze zur Anwendung der Richtlinie 91/263/EWG zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über Telekommunikationsendeinrichtungen einschliesslich der gegenseitigen Anerkennung ihrer Konformität.**

## Trademark Notice

All trademarks and registered trademarks are the property of their respective owners.

## Copyright Restrictions

© 2000, 2001, 2004, 2005 Transition Networks.

All rights reserved. No part of this work may be reproduced or used in any form or by any means - graphic, electronic, or mechanical - without written permission from Transition Networks.

Printed in the U.S.A.

**33169.E**

---