



TN-SFP-GE-x, TN-GLC-xx-xx, TN-CWDM-SFP-1xx0, TN-CWDM-100LX-1xx0 Series
Cisco compatible Small Form Factor Pluggable (SFP)

User Guide

Part Number 33480
Revision D February 2022

Intellectual Property

© 2022 Lantronix, Inc. All rights reserved. No part of the contents of this publication may be transmitted or reproduced in any form or by any means without the written permission of Lantronix.

Lantronix is a registered trademark of Lantronix, Inc. in the United States and other countries.

All other trademarks and trade names are the property of their respective holders.

Patented: <https://www.lantronix.com/legal/patents/>; additional patents pending.

Warranty

For details on the Lantronix warranty policy, please go to <http://www.lantronix.com/support/warranty>.

Contacts

Lantronix Corporate Headquarters

48 Discovery, Suite 250

Irvine, CA 92618, USA

Toll Free: 800-526-8766

Phone: 949-453-3990

Fax: 949-453-3995

Technical Support

Phone: +1.952.358.3601 or 1.800.260.1312, or <https://www.lantronix.com/technical-support/>

Sales Offices

For a current list of our domestic and international sales offices, go to www.lantronix.com/about/contact.

Disclaimer

All information contained herein is provided "AS IS." Lantronix undertakes no obligation to update the information in this publication. Lantronix does not make, and specifically disclaims, all warranties of any kind (express, implied or otherwise) regarding title, non-infringement, fitness, quality, accuracy, completeness, usefulness, suitability or performance of the information provided herein. Lantronix shall have no liability whatsoever to any user for any damages, losses and causes of action (whether in contract or in tort or otherwise) in connection with the user's access or usage of any of the information or content contained herein. The information and specifications contained in this document are subject to change without notice.

Revision History

Date	Rev	Comments
9/30/13	A	Initial release.
11/22/16	B	Update DoC, MTBF, and contact information and change format.
6/12/19	C	Add UL and Conformal Coated SFP information.
2/8/22	D	Initial Lantronix re-brand.

Table of Contents

Product Description	4
Ordering Information.....	4
Features.....	5
Conformal Coated SFPs (TN-SFP-GE-x-C).....	5
Features	5
Specifications and Standards	6
Optical Specifications	6
Application: Fiber Connections with SFPs	7
Safety Instructions	7
SFP Unpacking.....	8
SFP Installation.....	8
Cautions	8
Installing an SFP Module	9
Fiber Cable Physical Characteristics	10
Connecting Fiber Cables.....	10
Removing an SFP Module	10
DDMI (Digital Diagnostics Monitoring Interface)	11
SFP Information and SFP Detail Info	12
SFP Information	12
SFP Detail Info	14
Compliance Information.....	15
UL Recognized.....	17
Declaration of Conformity.....	17

Product Description

Lantronix TN-SFP-GE-x, TN-GLC-xx-xx, TN-CWDM-SFP-1xx0, and TNCWDM-100LX-1xx0 series small form factor pluggable (SFP) transceiver modules are designed to install in any SFP port. These TN-SFP modules allow a 1000Base-T, 1000Base-SX or LX interface to the network through the SFP connector. TN-SFP transceivers are designed for bi-directional, serial-optical data communications: Gigabit Ethernet or fiber channel at speeds up to 2.125 Gbps.



All Lantronix SFPs and XFPs are compliant with the Multi-Sourcing Agreement (MSA) ensuring interoperability with all other MSA compliant networking devices.

All Lantronix SFP modules fully comply with the Multi-Sourcing Agreement (MSA). This compliance allows our SFP modules to be used in other MSA compliant SFP platforms. In addition, the SFP modules referenced in this manual (TN-SFP-GE-x, TN-GLC-xx-xx, TN-CWDM-SFP-1xx0, and TNCWDM-XL100-1xx0) are also compatible with all Cisco SFP-based equipment supporting similar Cisco model SFPs, as well as its IOS software and SMARTnet. TN SFP modules ARE NOT Cisco OEM brand modules.

Ordering Information

#	SKU	Description
1	TN-CWDM-SFP-1270	1000Base-LX/ZX Fibre Channel (LC) single mode 1270nm [80 km/49.7 mi.] Link Budget: 24.0 dB
2	TN-CWDM-SFP-1290	1000Base-LX/ZX Fibre Channel (LC) single mode 1290nm [80 km/49.7 mi.] Link Budget: 24.0 dB
3	TN-CWDM-SFP-1310	1000Base-LX/ZX Fibre Channel (LC) single mode 1310nm [80 km/49.7 mi.] Link Budget: 24.0 dB
4	TN-CWDM-SFP-1330	1000Base-LX/ZX Fibre Channel (LC) single mode 1330nm [80 km/49.7 mi.] Link Budget: 24.0 dB
5	TN-CWDM-SFP-1350	1000Base-LX/ZX Fibre Channel (LC) single mode 1350nm [80 km/49.7 mi.] Link Budget: 24.0 dB
6	TN-CWDM-SFP-1370	1000Base-LX/ZX Fibre Channel (LC) single mode 1370nm [80 km/49.7 mi.] Link Budget: 24.0 dB
7	TN-CWDM-SFP-1390	1000Base-LX/ZX Fibre Channel (LC) single mode 1390nm [80 km/49.7 mi.] Link Budget: 24.0 dB
8	TN-CWDM-SFP-1410	1000Base-LX/ZX Fibre Channel (LC) single mode 1410nm [80 km/49.7 mi.] Link Budget: 24.0 dB
9	TN-CWDM-SFP-1430	1000Base-LX/ZX Fibre Channel (LC) single mode 1430nm [80 km/49.7 mi.] Link Budget: 24.0 dB
10	TN-CWDM-SFP-1450	1000Base-LX/ZX Fibre Channel (LC) single mode 1450nm [80 km/49.7 mi.] Link Budget: 24.0 dB
11	TN-CWDM-SFP-1470	1000Base-LX/ZX Fibre Channel (LC) single mode 1470nm [80 km/49.7 mi.] Link Budget: 24.0 dB
12	TN-CWDM-SFP-1490	1000Base-LX/ZX Fibre Channel (LC) single mode 1490nm [80 km/49.7 mi.] Link Budget: 24.0 dB
13	TN-CWDM-SFP-1510	1000Base-LX/ZX Fibre Channel (LC) single mode 1510nm [80 km/49.7 mi.] Link Budget: 24.0 dB
14	TN-CWDM-SFP-1530	1000Base-LX/ZX Fibre Channel (LC) single mode 1530nm [80 km/49.7 mi.] Link Budget: 24.0 dB

15	TN-CWDM-SFP-1550	1000Base-LX/ZX Fibre Channel (LC) single mode 1550nm [80 km/49.7 mi.] Link Budget: 24.0 dB
16	TN-CWDM-SFP-1570	1000Base-LX/ZX Fibre Channel (LC) single mode 1570nm [80 km/49.7 mi.] Link Budget: 24.0 dB
17	TN-CWDM-SFP-1590	1000Base-LX/ZX Fibre Channel (LC) single mode 1590nm [80 km/49.7 mi.] Link Budget: 24.0 dB
18	TN-CWDM-SFP-1610	1000Base-LX/ZX Fibre Channel (LC) single mode 1610nm [80 km/49.7 mi.] Link Budget: 24.0 dB

Features




- Course Wavelength Division Multiplexing (CWDM) ITU Grid Compliant Wavelengths
- Hot-Pluggable SFP Optical Transceiver with Duplex LC Connector
- DMI (Digital Diagnostic Function) and DDMI (Digital Diagnostics Monitoring Interface)
- Class 1 Laser International Safety Standard IEC-60825 Compliant
- Compatible with SFP Multi-Sourcing Agreement (MSA)

Conformal Coated SFPs (TN-SFP-GE-x-C)

- TN-SFP-GE-S-C
- TN-SFP-GE-L-C
- TN-SFP-GE-Z-C

Features

- Extended operating temperature -40°C ~ +85°C
- Compliant with IEEE802.3z Gigabit Ethernet Standard
- SFF-8472 Digital Diagnostic Function (DMI)
- Conformal Coating (polyurethane coating Dymax 9482) for PCBs
- Comply to EIA-364-65B Class IIIA

SKU	Data Rate (Mbps)	Media	Wavelength (nm)	Transmission Distance (Km)	Temp. Range (°C)
TN-SFP-GE-S-C 	1250	Multi mode fiber	850	550	-40~85
TN-SFP-GE-L-C 	1250	Single mode fiber	1310	10	-40~85
TN-SFP-GE-Z-C 	1250	Single mode fiber	1550	80	-40~85

Specifications and Standards

The TN-GLC and TN-CWDM series SFPs was designed to meet these standards and specifications:

Standards	Compliant with IEEE 802.3z 1000BASE-LX/ZX
Compliance	IEC-60825; FDA 21; CFR 1040.10 and 1040.11. Compliant with Fiber Channel 1x SM-LC-L FC-PI. RoHS Compliant.
Dimensions	0.52 x 2.18 x 0.33 in (13.4 x 55.5 x 8.5 mm, Fiber) 0.95 x 2.8 x 0.54 in (14-0 x 71.1 13.7 mm, Copper)
Weight	1 oz. (28 g) approximately
Voltage	3.3V, Fiber 0.66 W; Copper 1.0 W
Wavelength	-6.0 < λ_c < +7.5 nm (<i>TN-CWDM-xx-1xx0 only</i>)
Operating Temp	TN-GLC-xx-xx, TN-CWDM-xx-1xx0: 0°C to 70°C (32°F to 158° F). TN-SFP-GE-x: -40°C to 85°C (-40° to 185°F).
Storage Temp	-40°C to 85°C (-40° to 185°F)
Humidity	5% to 95%, non-condensing
MTBF	MTBF for TN-GLC-LX-SM-RGD is 477,008 hours.
Warranty	Lifetime


Optical Specifications

xx = center wavelength (λ_c)

27 = 1270nm	39 = 1390nm	53 = 1530nm	29 = 1290nm	41 = 1410nm
55 = 1550nm	31 = 1310nm	43 = 1430nm	57 = 1570nm	33 = 1330nm
47 = 1470nm	59 = 1590nm	35 = 1350nm	49 = 1490nm	61 = 1610nm
37 = 1370nm	51 = 1510nm			

Application: Fiber Connections with SFPs

SFPs are used with Gigabit Ethernet Switches and Routers, Fibre Channel Switch Infrastructure, xDSL applications, Metro Edge Switching, etc.

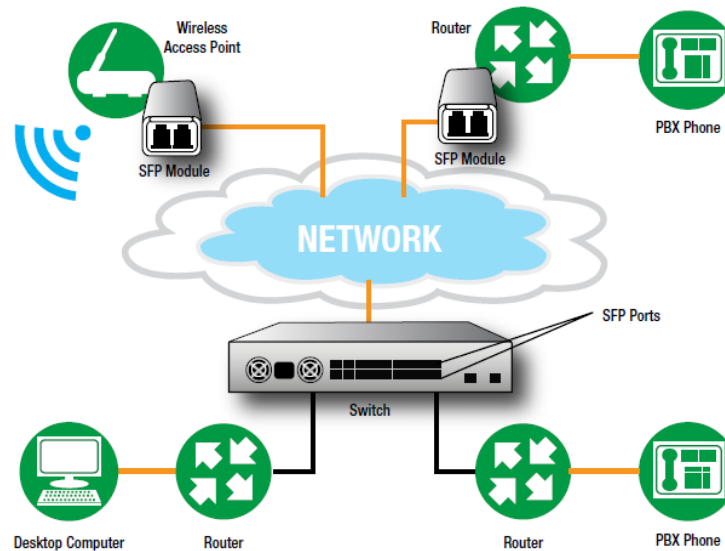

Safety Instructions

When a connector is removed during installation, testing, or servicing, or when an energized fiber is broken, a risk of ocular exposure to optical energy that may be potentially hazardous occurs, depending on the laser output power. The primary hazards of exposure to laser radiation from an optical-fiber system are:

- Damage to the eye by accidental exposure to a beam emitted by a laser source.
- Damage to the eye from viewing a connector attached to a broken fiber or an energized fiber.

Danger: Never attempt to view optical connectors that might be emitting laser energy.

Do not power up the laser product without connecting the laser to the optical fiber and putting the cover in position, as laser outputs will emit infrared laser light at this point.

See the Lantronix [SFP webpage](#) for our full line of SFP transceivers. See the [FOA webpage](#) for additional information.

High Risk Activities Disclaimer

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems ("High Risk Activities"). Lantronix and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

SFP Unpacking

Before you start installing the TN-SFP-xxx, verify that the package contains the following items:

- One TN-10G-SFP-xxx
- Two protective foam pieces
- One Documentation Postcard

Please notify your sales representative immediately if any of the above items is missing or damaged. Save the packaging for possible future use.

SFP Installation

The optical ports of the SFP transceiver must be terminated with an optical connector or with a dust plug. The SFP transceiver must be operated within the specified temperature and voltage limits.

The Fiber Optic Association, Inc. provides a Technical Bulletin on “*Guidelines for Testing and Troubleshooting Fiber Optic Installations*” at <http://www.thefoa.org/tech/guides/TT3.pdf>.


There are other FOA Technical Bulletins that should be used as references for the design and planning of the network. These documents can be downloaded from the [FOA Tech Topics website](#).

Cautions


- The SFP transceiver module is keyed to only be installed one way. However, if forced the wrong way, damage may occur.
- Avoid getting dust or other contaminants into the fiber bore of the SFP transceiver module, as this will cause the optics to not operate properly.
- Clean the optic surfaces of the optical fiber before you plug them back in to the optical bores of another SFP transceiver module.
- Each port must match the wavelength specifications on the other end of the cable, and the cable must not exceed the specified cable length for reliable communications.

Installing an SFP Module

1. Attach an ESD-preventive wrist strap to your wrist and to the ESD ground connector or a bare metal surface on your chassis.
2. Remove the SFP transceiver module from its protective packaging. Note: Do not remove the optical bore dust plugs until directed to do so in a later procedure.
3. Check the slot orientation. Note that for some devices (e.g., S4224) some slots are “upside down” compared to other slots.
4. Position the SFP device at the desired installation slot, with the label facing correctly.
5. Carefully slide the SFP device into the slot, aligning it with the internal installation guides.

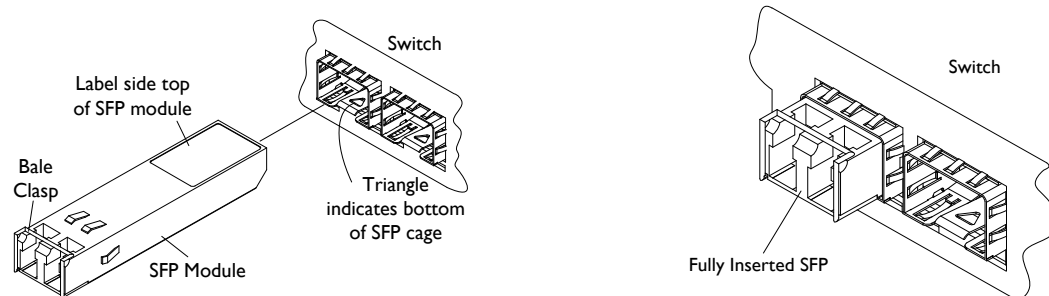

6. Ensure that the SFP device is firmly seated against the internal mating connector. To verify that the SFP is seated and latched properly. **a)** Grasp the SFP by the sides and try to remove it without releasing the latch. **b)** If the SFP can not be removed, it is installed and seated properly. If the SFP can be removed, reinsert it and press harder with your thumb; repeat if necessary until it is latched securely into the socket.

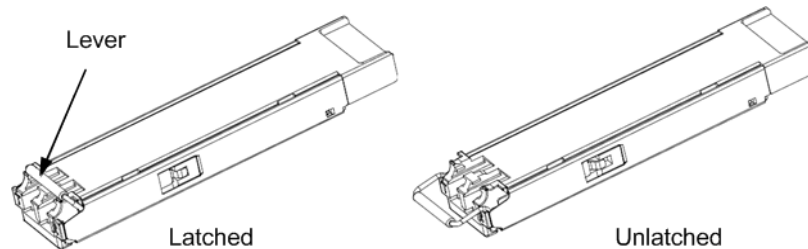

7. Connect the fiber cable to the fiber port connector of the SFP device. Make sure the SFP release latch is in the up (closed) position when you insert the cable connector into the SFP.
8. Remove the dust plug from the connector. Save the dust plug for future use.
9. Attach an appropriate cable into the SFP module port.
10. Attach the other end of the cable into the other device.
11. Observe the status LED(s). See the related manual for details.

Fiber Cable Physical Characteristics

The fiber cable physical characteristics must meet or exceed IEEE 802.3ae specifications:


- Single mode fiber (*recommended*): 9 μm
- Multimode fiber (*recommended*): 62.5/125 μm
- Multimode fiber (*optional*): 100/140, 85/140, 50/125 μm

Warning: Visible and invisible laser radiation when open. DO NOT stare into laser beam or view directly with optical instruments. Failure to observe this warning could result in damage to your eyes or blindness.

Connecting Fiber Cables

To install the fiber cable, do the following:

1. Locate the appropriate fiber cable.
2. Install the cable as shown below.

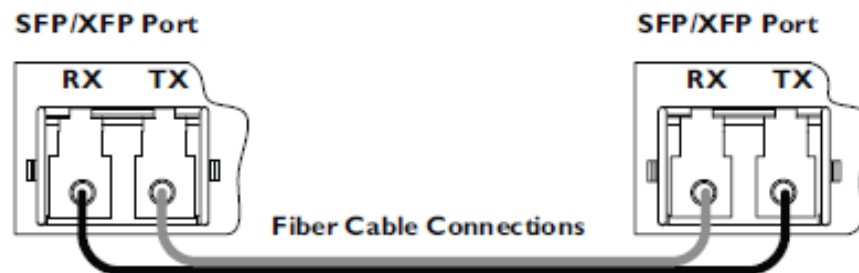

Removing an SFP Module

Caution: Be careful when removing the SFP or SFP+ from a device. Some SFP transceiver module temperatures may exceed 160°F (70°C) and be too hot to touch with bare hands. **Note:** Do not remove and replace the SFP modules more often than necessary; excessive SFP removing and replacing can shorten the SFPs useful life.

1. Attach an ESD-preventive wrist strap to your wrist and to the ESD ground connector or a bare metal surface on your chassis.
2. For future reattachment of fiber-optic cables, note which connector plug is send (TX) and which is receive (RX).
3. Remove the SFP transceiver module:
 - a. If the SFP transceiver module has an **actuator button latch**, gently press the actuator button on the front of the SFP transceiver module until it clicks and the latch mechanism releases the SFP transceiver module from the socket connector. Grasp the actuator button between your thumb and index finger, and carefully pull the SFP transceiver module straight out of the module slot.
 - b. If the SFP transceiver module has a **bail clasp latch**, pull the latch out and down to eject the SFP transceiver module from the socket connector. If the bail clasp latch is obstructed and you cannot use your index finger to open it, use a small, flat-blade screwdriver or other long, narrow instrument to open the bail clasp latch. Grasp the SFP transceiver module between your thumb and index finger, and carefully remove it from the socket.
4. Replace the Dust Plug.
5. Place the removed SFP/SFP+ transceiver module in an antistatic bag or other protective package.

DDMI (Digital Diagnostics Monitoring Interface)

DDMI (Digital Diagnostics Monitoring Interface) provides enhanced digital DMI for optical transceivers which allows real time access to device operating parameters.

The following DMI port screen and explanation table contains brief definitions of the DDMI support offered on some Small Form Factor Pluggable (SFP) Transceiver Modules. For further information, see the help option or User Guide for the S3290, S4140, S4212, and S4224. **Note:** This feature is not available on all devices and may vary between products. See the related manual for more information.

The screenshot shows a web interface for monitoring a transceiver. On the left is a navigation menu with options like System, Ports, Link OAM, DHCP, Security, LACP, Loop Protection, Spanning Tree, MVR, IPMC, LLDP, Ethernet Services, Performance Monitor, PTP, MAC Table, VLANs, DDMI (Overview, Detailed, UOLD), and Diagnostics. The main content area is titled 'Transceiver Information' and includes a table with the following data:

Vendor	Transion
Part Number	TN-10GSFP-LR1
Serial Number	8800022
Revision	0001
Date Code	2011-08-09
Transceiver	10G

Below this is the 'DDMI Information' section, which is a table with the following data:

Type	Current	High Alarm Threshold	High Warn Threshold	Low Warn Threshold	Low Alarm Threshold
Temperature(C)	52.875	85.000	80.000	0.000	-5.000
Voltage(V)	3.2600	3.6000	3.5000	3.1000	3.0000
Tx Bias(mA)	38.896	90.000	80.000	4.000	2.000
Tx Power(mW)	0.5624	1.4125	1.1220	0.1585	0.1259
Rx Power(mW)	0.0000 --	1.4125	1.1220	0.0363	0.0229
Tx Power(dBm)	-2.50	1.50	0.50	-8.00	-9.00
Rx Power(dBm)	-inf	1.50	0.50	-14.40	-16.40

The Transceiver Information and DDMI Information sections are described below.

DDMI Parameter	Description
DDMI	Rx Power (uW) Intrusion Threshold; a level for Rx Power on the Fiber port. If the DDMI read value falls below the preset value, an intrusion is detected, and a trap is generated. The default is 0 uW. The range is 0 - 65,535 uW.
Port	The device's port number.
Vendor	The SFP vendor's name.
Part Number	The SFP vendor Part number provided by the SFP vendor (<i>TN-10GSFP-SR</i>).
Serial Number	The SFP Vendor Serial number provided by the SFP vendor (e.g., <i>8672105</i>).
Revision	The SFP vendor Revision level for part number provided by the SFP vendor.
Date Code	The vendor's manufacturing date code (e.g., <i>2011-08-09</i>).
Transceiver	The Transceiver compatibility (e.g., <i>1000BASE_SX</i> or <i>10G</i>).
Current	The current value of temperature, voltage, TX bias, TX power, and RX power.
High Alarm Threshold	The high alarm threshold value of temperature, voltage, TX bias, TX power, and RX power.
High Warn Threshold	The high warn threshold value of temperature, voltage, TX bias, TX power, and RX power.
Low Warn Threshold	The low warn threshold value of temperature, voltage, TX bias, TX power, and RX power.
Low Alarm Threshold	The low alarm threshold value of temperature, voltage, TX bias, TX power, and RX power.

SFP Information and SFP Detail Info

Note: This feature is not available on all devices and may vary between products. See the related manual for more information.

SFP Information

This page displays general SFP information and monitoring information as shown and described below.

Port	Tx Central Wavelength	Bit Rate	Temperature	Vcc	Mon1 (Bias)	Mon2 (TxPwr)	Mon3 (RxPwr)
1							
2							
3							
4							
5							
6							
7							
8							
9							
10	1310	10 Gbps	27.07 C	3.35 V	0 mA	0.00 dBm	none

Parameter descriptions:

Parameter	Description
Port	The logical port for the settings contained in the same row.
Tx Central Wavelength	Displays the nominal transmitter output wavelength in nm.
Bit rate	Displays the nominal bit rate of the transceiver.
Temperature	Displays the internally measured transceiver temperature. Temperature accuracy is vendor specific but must be better than 3 degrees Celsius over specified operating temperature and voltage.
Vcc	Displays the internally measured transceiver supply voltage. Accuracy is vendor specific but must be better than 3 percent of the manufacturer's nominal value over specified operating temperature and voltage. Note that in some transceivers, transmitter supply voltage and receiver supply voltage are isolated. In that case, only one supply is monitored. Refer to the device specification for more detail.
Mon1 (Bias)	Displays the measured TX bias current in uA. Accuracy is vendor specific but must be better than 10 percent of the manufacturer's nominal value over specified operating temperature and voltage.
Mon2 (TX PWR)	Displays the measured coupled TX output power in mW. Accuracy is vendor specific but must be better than 3dB over specified operating temperature and

	voltage. Data is assumed to be based on measurement of a laser monitor photodiode current. Data is not valid when the transmitter is disabled.
Mon3 (RX PWR)	Displays the measured received optical power in mW. Absolute accuracy is dependent upon the exact optical wavelength. For the vendor specified wavelength, accuracy should be better than 3dB over specified temperature and voltage. This accuracy should be maintained for input power levels up to the lesser of maximum transmitted or maximum received optical power per the appropriate standard. It should be maintained down to the minimum transmitted power minus cable plant loss (insertion loss or passive loss) per the appropriate standard. Absolute accuracy beyond this minimum required received input optical power range is vendor specific.

SFP Detail Info

This page displays detailed SFP information and monitoring information as shown and described below.

The screenshot shows the 'SFP Information for Port 10' page. The left sidebar contains a navigation menu with 'Monitor' selected, and 'SFP Detail Info' highlighted. The main content area displays a table of SFP parameters for Port 10. The table includes an 'Auto-refresh' checkbox and a 'Port 10' dropdown menu. The parameters and their values are as follows:

Parameter	Description
Connector Type	SFP or SFP Plus - LC
Fiber Type	Reserved
Tx Central Wavelength	1310
Bit Rate	10 Gbps
Vendor OUI	00-c0-f2
Vendor Name	Transition
Vendor P/N	TN-SFP-25G-ER
Vendor Revision	1.0
Vendor Serial Number	TLSPH007
Date Code	200820
Temperature	27.07 C
Vcc	3.35 V
Mon1 (Bias)	0 mA
Mon2 (TX PWR)	0.00 dBm
Mon3 (RX PWR)	none

Parameter descriptions:

Parameter	Description
Connector Type	Displays the external optical or electrical cable connector provided as the media interface.
Fiber Type	Displays the fiber channel transmission media.
Tx Central Wavelength	Displays the nominal transmitter output wavelength in nm.
Bit rate	Displays the nominal bit rate of the transceiver.
Vendor OUI	Displays the vendor IEEE company ID (Organizationally Unique Identifier).
Vendor Name	Displays the vendor name (e.g., TN-SFP-25G-ER).
Vendor P/N	Displays the vendor part number or product name.
Vendor Revision	Displays the vendor product revision.
Vendor Serial Number	Displays the vendor serial number for the transceiver.
Date Code	Displays the vendor's manufacturing date code.
Temperature	Displays the internally measured transceiver temperature. Temperature accuracy is vendor specific but must be better than 3 degrees Celsius over specified operating temperature and voltage.

Vcc	Displays the internally measured transceiver supply voltage. Accuracy is vendor specific but must be better than 3 percent of the manufacturer's nominal value over specified operating temperature and voltage. Note that in some transceivers, transmitter supply voltage and receiver supply voltage are isolated. In that case, only one supply is monitored. Refer to the device specification for more detail.
Mon1 (Bias)	Displays the measured TX bias current in uA. Accuracy is vendor specific but must be better than 10 percent of the manufacturer's nominal value over specified operating temperature and voltage.
Mon2 (TX PWR)	Displays the measured coupled TX output power in mW. Accuracy is vendor specific but must be better than 3dB over specified operating temperature and voltage. Data is assumed to be based on measurement of a laser monitor photodiode current. Data is not valid when the transmitter is disabled.
Mon3 (RX PWR)	Displays the measured received optical power in mW. Absolute accuracy is dependent upon the exact optical wavelength. For the vendor specified wavelength, accuracy should be better than 3dB over specified temperature and voltage. This accuracy should be maintained for input power levels up to the lesser of maximum transmitted or maximum received optical power per the appropriate standard. It should be maintained down to the minimum transmitted power minus cable plant loss (insertion loss or passive loss) per the appropriate standard. Absolute accuracy beyond this minimum required received input optical power range is vendor specific.

Compliance Information

The fiber optic transmitters on this device meet Class I Laser safety requirements per IEC-825/CDRH standards and comply with 21 CFR1040.10 and 21CFR1040.11.

WARNING: Visible and invisible laser radiation when open. Do not stare into the beam or view the beam directly with optical instruments. Failure to observe this warning could result in an eye injury or blindness.

IMPORTANT: Copper based media ports such as Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are intended to be connected to intra-building (inside plant) link segments that are not subject to lightning transients or power faults. Copper-based media ports such as Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are NOT to be connected to inter-building (outside plant) link segments that are subject to lightning transients or power faults.

Class I Laser Compliance

This product has been tested and found to comply with the limits for FDA Class I laser for IEC60825, EN60825, and 21CFR1040 specifications.

Translated Safety Warnings

Warning Class I laser product.

Waarschuwing Klasse-I laser produkt.

Varoitus Luokan I lasertuote.

Attention Produit laser de classe I

Warnung Laserprodukt der Klasse I.

Avvertenza Prodotto laser di Classe I.

Advarsel Laserprodukt av klasse I.

Aviso Produto laser de classe I.

¡Advertencia! Producto láser Clase I.

Varning! Laserprodukt av klass I.

Aviso Produto a laser de classe I.

Advarsel Klasse I laserprodukt.

FCC Regulations

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at the user's own expense.

Canadian Regulations

This digital apparatus does not exceed the Class A limits for radio noise for digital apparatus set out on the radio interference regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

European Regulations

Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Achtung !

Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten. In diesem Fall ist der Benutzer für Gegenmaßnahmen verantwortlich.

Attention !

Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.



In accordance with European Union Directive 2002/96/EC of the European Parliament and of the Council

of 27 January 2003, Lantronix will accept post usage returns of this product for proper disposal. The contact information for this activity can be found in the 'Contact Us' portion of this document.

Der Anschluss dieses Gerätes an ein öffentliches Telekommunikationsnetz in den EGMitgliedstaaten verstösst gegen die jeweiligen einzelstaatlichen Gesetze zur Anwendung der Richtlinie 91/263/EWG zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über Telekommunikationsendeinrichtungen einschliesslich der gegenseitigen Anerkennung ihrer Konformität.



CAUTION: RJ connectors are NOT INTENDED FOR CONNECTION TO THE PUBLIC TELEPHONE NETWORK. Failure to observe this caution could result in damage to the public telephone network.

Der Anschluss dieses Gerätes an ein öffentliches Telekommunikationsnetz in den EGMitgliedstaaten verstösst gegen die jeweiligen einzelstaatlichen Gesetze zur Anwendung der Richtlinie 91/263/EWG zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über Telekommunikationsendeinrichtungen einschliesslich der gegenseitigen Anerkennung ihrer Konformität.

UL Recognized

TN-SFP-10G-SR	TN-GLC-SX-MM- RGD	TN-GLC-FE-100FX	TN-SFP-OC3S
TN-SFP-10G-LR		TN-GLC-BX-U-20	TN-SFP-SX
TN-GLC-T-MG	TN-GLC-BX-U	TN-GLC-BX-D-20	TN-SFP-LX1
TN-GLC-LH-SM	TN-GLC-BX-D	TN-GLC-LH-SMD	TN-SFP-LXB11
TN-GLC-LX-SM-RGD	TN-GLC-LHX-SM	TN-GLC-T	TN-SFP-LXB12
TN-GLC-SX-MM	TN-SFP-GE-L	TN-GLC-FE-100LX	
	TN-SFP-GE-S	TN-SFP-OC3M	

**Declaration of Conformity**

Manufacture's Name: Lantronics, Inc.
 Manufacture's Address: 48 Discovery, Suite 250, Irvine, California 92618 USA

Declares that the product:
 TN-SFP-GE-L

Conform to the following Product Regulations:
 FCC Part 15 Class A, EN 55022:2010, EN 55024:2010
 Directive 2004/108/EC
 Low-Voltage Directive 2006/95/EC

IEC/EN 60950-1

With the technical construction on file at the above address, this product carries the CE Mark

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Place: Irvine, California

Date: April 27, 2022

Signature: *Fathi Hakam*

Full Name: Fathi Hakam

Position: Vice President of Engineering

**Lantronix Corporate Headquarters**

48 Discovery, Suite 250
Irvine, CA 92618, USA
Toll Free: 800-526-8766
Phone: 949-453-3990
Fax: 949-453-3995

Technical Support

Online: <https://www.lantronix.com/technical-support/>

Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at www.lantronix.com/about/contact.