



ION 2-Slot Chassis (ION002-AD) User Guide

Intellectual Property

© 2022, 2023 Lantronix, Inc. All rights reserved. No part of the contents of this publication may be transmitted or reproduced in any form or by any means without the written permission of Lantronix.

Lantronix is a registered trademark of Lantronix, Inc. in the United States and other countries.

Patented: <https://www.lantronix.com/legal/patents/>; additional patents pending.

Warranty

For details on the Lantronix warranty policy, go to <http://www.lantronix.com/support/warranty>.

Contacts

Lantronix Corporate Headquarters

48 Discovery, Suite 250
Irvine, CA 92618, USA
Toll Free: 800-526-8766
Phone: 949-453-3990
Fax: 949-453-3995

Technical Support

Online: <https://www.lantronix.com/technical-support/>

Sales Offices

For a current list of our domestic and international sales offices, go to www.lantronix.com/about/contact.

Disclaimer

All information contained herein is provided "AS IS." Lantronix undertakes no obligation to update the information in this publication. Lantronix does not make, and specifically disclaims, all warranties of any kind (express, implied or otherwise) regarding title, non-infringement, fitness, quality, accuracy, completeness, usefulness, suitability or performance of the information provided herein. Lantronix shall have no liability whatsoever to any user for any damages, losses and causes of action (whether in contract or in tort or otherwise) in connection with the user's access or usage of any of the information or content contained herein. The information and specifications contained in this document are subject to change without notice.

Revision History

Date	Rev.	Notes
2/20/15	A	Initial release for ION002-AD.
3/10/22	B	First Lantronix rebrand.
10/4/23	C	Update contact information, DoC, and power supply information. Minor technical and editorial changes. Update power input information.

Contents

- 1. Introduction 4**
 - Product Description 4
 - Models 4
 - Options 4
 - Power Supply Included 4
 - Specifications 4
 - Package Contents 5
 - Document Overview 5
 - Related Manuals and Online Help 5
 - Safety Warnings and Cautions 6
 - Dimensions 6
 - Mounting Options 7
- 2. Installation 8**
 - Grounding the Chassis 8
 - Grounding Wire Size 8
 - Connecting the Ground Wire 8
 - Grounding Methods 9
 - Installing Slide-In Cards 9
 - Powering the Chassis 10
 - Power via the DC INPUT (EuroBlock) Connector 10
 - For More Information 12
 - Product and Packaging Labels 12
- 3. Troubleshooting 13**
- 4. Related Information 14**
 - Compliance Information 14
 - Standards 14
 - FCC Regulations 14
 - Canadian ICES-003 14
 - CE Marking 14
 - UL Listed Power Supply 14
 - Declaration of Conformity 14
 - European Regulations 15
 - Electrical Safety Warnings 16

1. Introduction

Product Description

Lantronix' ION002-AD is a 2-slot chassis designed for installing one or two Lantronix ION slide-in cards. The following ION Slide-in cards are supported:

- C2110
- C2210
- C3100
- C3110
- C3210
- C2220
- C3220
- C3230
- C6010
- C6110
- C6120
- C6210

The ION002-AD is intended for installing any two 6W or less ION slide-in cards. The ION002-AD can house and power two ION slide-in-cards or one “double-wide” converter such as the C6120-1013. Note that the IONMM and C4120 are not supported. Power Input is via a barrel connector for 12VDC. Management is only supported if the chosen slide-in-card supports remote in-band management over the fiber, or if the card is IP-addressable.

Models

The ION002-AD models are described below. Note that the IONMM (ION Management Module) cannot be used in the ION002-AD.

Model	Description
ION002-AD	2-Slot ION Chassis, desktop, with AC or DC power input.

Options

The ION002-AD options listed below are sold separately.

Model	Description
WMBP	Optional Wall Mount Bracket; 5.0 in. (127 mm)
WMBV	Optional Vertical Mount Bracket; 5.0 in. (127 mm)

Power Supply Included

To order the corresponding country specific power supply, add the extension to the end of the SKU; e.g., ION001-A-xx, where xx means -NA = North America, -LA = Latin America, -EU = Europe, -UK = United Kingdom, -SA = South Africa, -JP = Japan, -OZ = Australia, -BR = Brazil.

Specifications

Note: The ION002-AD 2-Slot chassis is Class A compliant.

Dimensions	7.0 x 4.0 x 2.17 inches (178 x 102 x 55.11 mm)
Weight	1 lb. (45 kg) approximately
MTBF	<p>With Power Supply: MTBF to be greater than 191,800 MIL-HDBK-217F Hours at 25°C when bundled with a typical 200,000 hour power supply. MTBF to be greater than 527,500 Bellcore Hours at 25°C when bundled with a typical 200,000 hour power supply.</p> <p>Without Power Supply: MTBF to be greater than 4,700,000 MIL-HDBK-217F Hours at 25°C when with no power supply bundled.</p>

	MTBF to be greater than 13,000,000 Bellcore Hours at 25°C when bundled with no power supply bundled.
Power Inputs	Two options: One external AC/DC power supply (provided) or an optional two-wire terminal block (21-60 VDC polarity insensitive). See selected Slide-In Card manual for power consumption data.
Environment	0° to 50°C (32 to 122° F)
Storage Temp	-20° to 85°C
Humidity	10 to 90%, non-condensing
Warranty	Lifetime

Package Contents

Make sure that you have received the following items.

- One ION002-AD Two-Slot ION Chassis
- One User manual
- Front ION Blank with #4 Screw
- Four rubber feet
- One Documentation Post Card
- One PolyBag

Document Overview

The purpose of this manual is to provide the information needed to install the ION002-AD to the point of operation. Note that there are separate manuals for the ION slide-in-cards. Note: Some Documentation may have Transition Networks named or pictured. Transition Networks was acquired by Lantronix in August 2021.

Related Manuals and Online Help

A printed documentation card is shipped with each ION002-AD device. A substantial set of technical documents, white papers, case studies, etc. are available on the Lantronix web site at <https://www.lantronix.com/>. Note that this manual provides links to third party web sites for which Lantronix is not responsible. Other ION system and related device manuals are listed below.

1. Product Support Postcard, 33504
2. ION Management Module (IONMM) Install Guide, 33420 and User Guide, 33457
3. ION System NID User Guides (33432, 33457, 33472, 33493, 33494, 33495, 33496)
4. SPS-2460-xx User Guide, 33455
5. Release Notes (firmware version specific)

Note: Information in this document is subject to change without notice. All information was deemed accurate and complete at the time of publication. For the most current ION002-AD information, see the ION002-AD [product page](#).

Safety Warnings and Cautions

These products are not intended for use in life support products where failure of a product could reasonably be expected to result in death or personal injury. Anyone using this product in such an application without express written consent of an officer of Lantronix does so at their own risk and agrees to fully indemnify Lantronix for any damages that may result from such use or sale.



Attention: This product, like all electronic products, uses semiconductors that can be damaged by ESD (electrostatic discharge). Always observe appropriate precautions when handling.



Note: Emphasizes important information or calls your attention to related features or instructions.




Caution: Alerts you to a potential hazard that could cause loss of data or damage the system or equipment.



Warning: Alerts you to a potential hazard that could cause personal injury.

CAUTION: Copper based media ports, e.g., Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are intended to be connected to intrabuilding (inside plant) link segments that are not subject to lightning transients or power faults. Copper based media ports, e.g., Twisted Pair (TP) Ethernet, USB, RS232, RS422, RS485, DS1, DS3, Video Coax, etc., are NOT to be connected to interbuilding (outside plant) link segments that are subject to lightning transients or power faults. Failure to observe this caution could result in damage to equipment.

Dimensions

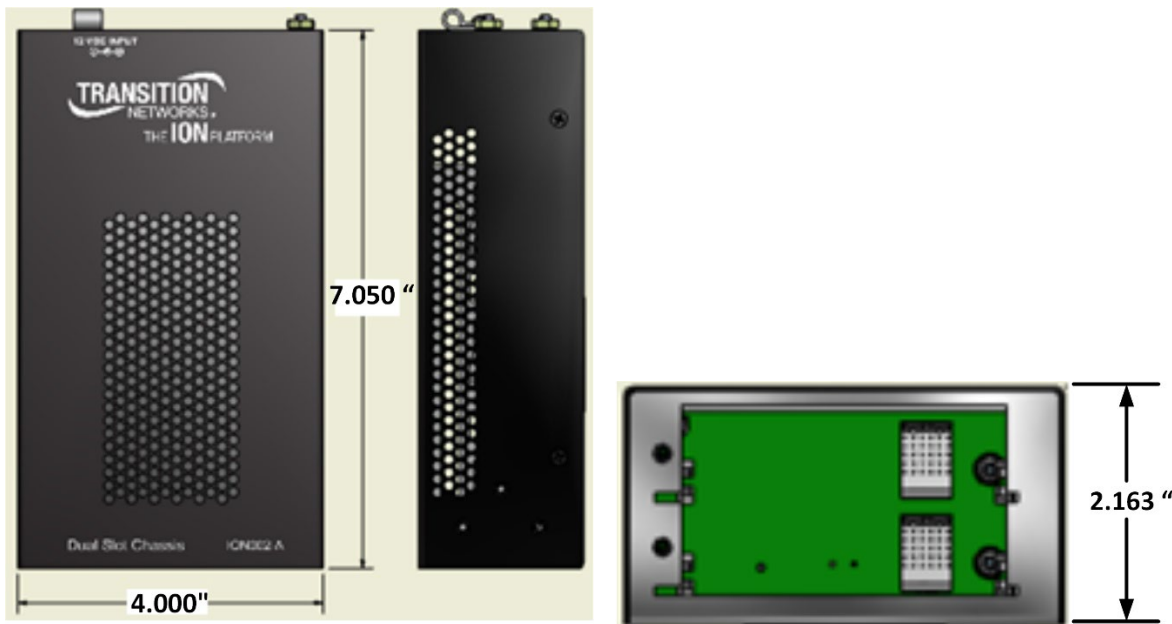

Mounting Options

WMBP Optional Wall Mount Bracket; 5.0 in. (127 mm)

WMBV Optional Vertical Mount Bracket; 5.0 in. (127 mm)



2. Installation

ION002-AD installation can involve installing the SICs, powering the Chassis, and grounding the Chassis.



Grounding the Chassis

The ION002-AD chassis comes equipped with grounding lugs located on its back panel. They require a grounding conductor wire terminated with a two-hole, compression-type, grounding connector (not provided). The grounding wire (must be a copper conductor) is not included with the chassis and must be provided by the customer/installer.

The electrical-conducting path from the ION002-AD chassis must:

- Flow via the grounding lugs to the common bonding network (CBN) for telecom installations, or to an alternative approved grounding system (if required) for non-telecom installations.
- Be of sufficiently low impedance to conduct fault currents likely to be imposed on the media converter.
- Enable proper operation of any over-current protection devices.

Grounding Wire Size

The wire size of the Protective Earth (ground) conductor should be greater than or equal to the wire size of the power source conductors. The power-source conductor wire size is installation dependent and sized to accommodate acceptable IR losses between the power source and the device terminal block. The device terminal block accommodates #6 wire lugs. A #6 wire lug typically terminates #16 - #20 wire; with #18 most common.

Connecting the Ground Wire


The conductor must be fastened to the grounding lugs with the enclosed antirotation star-washers and lug-nut fasteners. The torque requirement for the connector lug-nut fasteners is specified by the connector's manufacturer.

Grounding Methods

The conductor must be fastened to the grounding lugs with the enclosed antirotation star-washers and lug-nut fasteners. The torque requirement for the connector lug-nut fasteners is specified by the connector's manufacturer.

To properly ground the ION002-AD chassis:

1. Obtain one (1) a two-hole, compression-type, grounding connector.
2. Attach the grounding conductor to the chassis by placing the two-hole connector onto the grounding lugs and fasten with the enclosed lock washers / lug-nuts at the proper torque (per the manufacturer's specification).
3. Attach the opposite end of the grounding conductor to the common-bonding network (CBN) for telecom, or to earth ground (if required) for non-telecom installations.

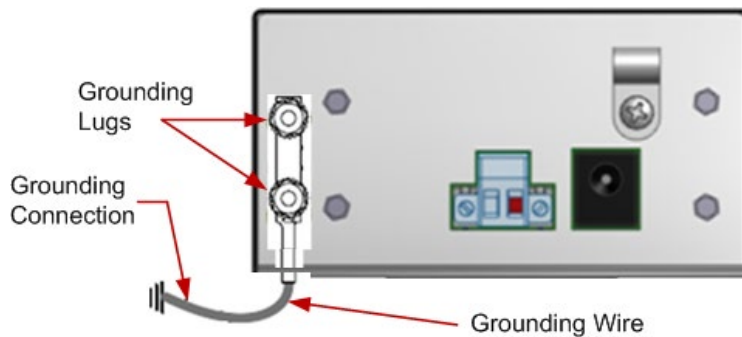


Installing Slide-In Cards

CAUTION: Wear a grounding device and observe electrostatic discharge precautions when installing slide-in cards into the dual-slot chassis. Failure to observe this caution could result in damage to the slide-in cards.

Note: The maximum power delivery capacity for the ION002-AD Dual Slot chassis is 6 Watts.

To install a slide-in-card into the ION002-AD chassis:

1. Refer to the manuals for the slide-in card to ensure that any DIP switches or jumpers on the module's circuit board are set correctly for the site installation.
2. Carefully align the slide-in card to the chassis installation guides and slide it fully into the installation slot, as shown below.
3. Ensure that the slide-in card is firmly seated inside the chassis.
4. Push in and rotate the attached panel fastener screw to secure the slide-in card to the ION002-AD chassis frame.
5. Repeat steps 1-4 to install a second card.

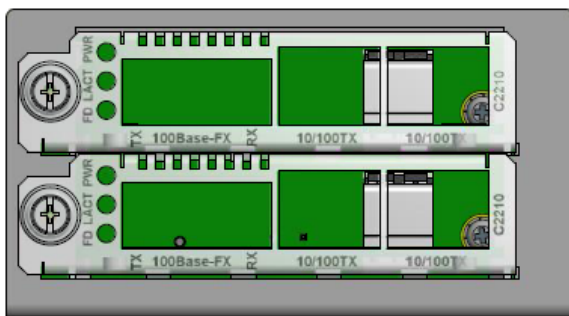

6. If only one card is being installed in the chassis, it is suggested that the slot Blank (provided) is used to cover up the unused slot.

Powering the Chassis

⚠ CAUTION: only one power input should be connected at any time.

To supply power to the ION002-AD chassis with the external AC/DC power supply (provided):

1. Connect the barrel connector on the supplied power adapter to the ION002-AD chassis' 12 VDC INPUT power port (located on the back of the chassis).
- 2a. Connect the power adapter plug (supplied) to AC power. **Note:** the power inputs are not redundant; only one input can be used.
- 2b. For an optional DC power source, use the 2-wire terminal block. The input voltage on the 2-wire terminal block is 21-60 VDC, polarity insensitive. This terminal block can be used if your installation site offers a low voltage DC power source. See "Power via the DC INPUT (EuroBlock) Connector" below for more information.
3. Verify that the ION002-AD chassis is powered by observing the lit LED(s) on the installed slide-in card.



CAUTION: only one power input should be connected at any time.

DC Input: 12V DC (Barrel) Connector

DC INPUT: 21-60 VDC Terminal Block (EuroBlock)


Power via the DC INPUT (EuroBlock) Connector

DC INPUT: 21-60 VDC EuroBlock (Terminal Block). The procedures below describe how to remove the terminal block, connect the Power wires to the Terminal Block, and then reinstall the terminal block and verify the Power wire connections.

Removing the Terminal Block (TB)

1. Loosen the “2” mounting screws that attach the “primary” Terminal Block (TB) to the ION002-AD chassis.
2. Pull the TB from the ION002-AD chassis connector as shown below.

DC INPUT: 21-60 VDC Terminal Block (EuroBlock)

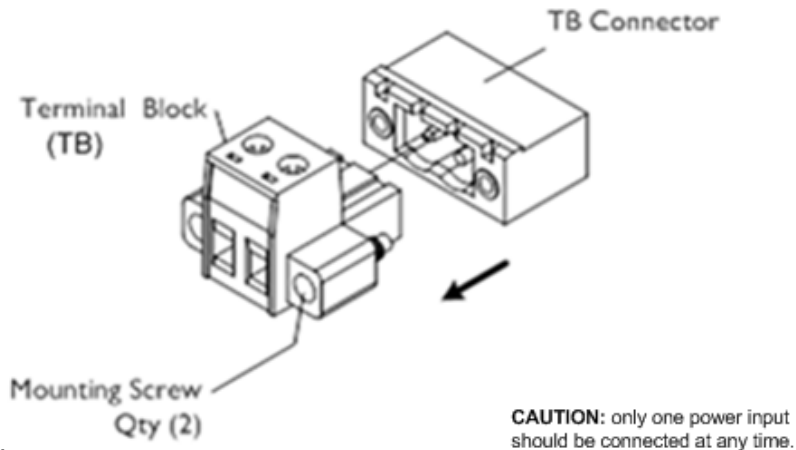


Notes: It is a good practice to turn OFF input and load power, and unplug the power Terminal Block before making wire connections. Otherwise, a metal screwdriver blade can inadvertently short the terminal connections to the grounded enclosure. However, in some instances this is not possible as this may be a bussed power rail providing power to numerous other devices. Also note:

- The range of suitable wire for the terminal block is 12 to 26 AWG.
- The power source must be safety certified.


Connecting Power Wires to the Terminal Block

1. Strip the wires to the proper length.
2. Insert the positive and negative power wires into V+ and V- contacts respectively of the Terminal Block (note polarity on the ION002-AD chassis). Make sure the wires are secure. See figure below.
3. Insert the positive and negative power wires into V+ and V- contacts respectively into the power source—make sure the wires are secure. See the figures above. Insert the positive and negative power wires into V+ and V- contacts respectively into the power source—make sure the wires are secure. See the figure below.

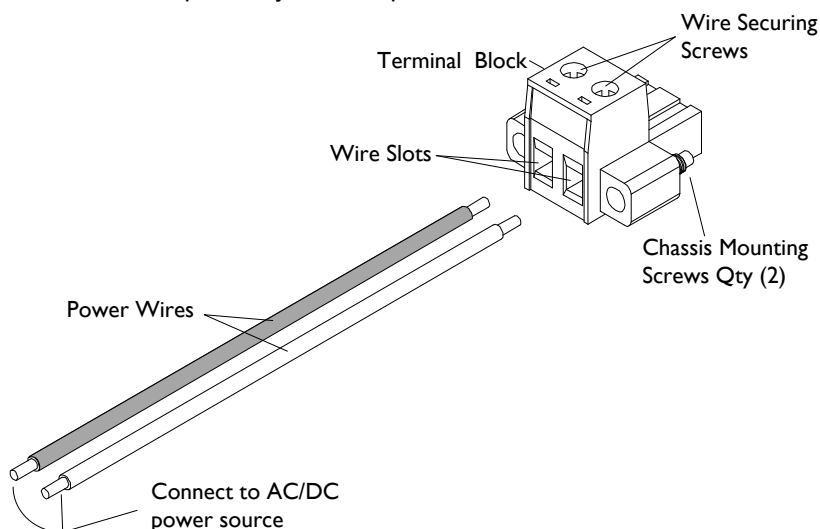

Reinstalling the Terminal Block and verifying power wire connections

- 4. Reinstall the Terminal Block into the primary location on the ION002-AD.
- 5. Tighten the two screws to secure the Terminal Block to the ION002-AD chassis.
- 6. Turn the power source ON and observe that the green front panel PWR (power) LED is lit, indicating that power is applied to the ION002-AD. See the figure below.

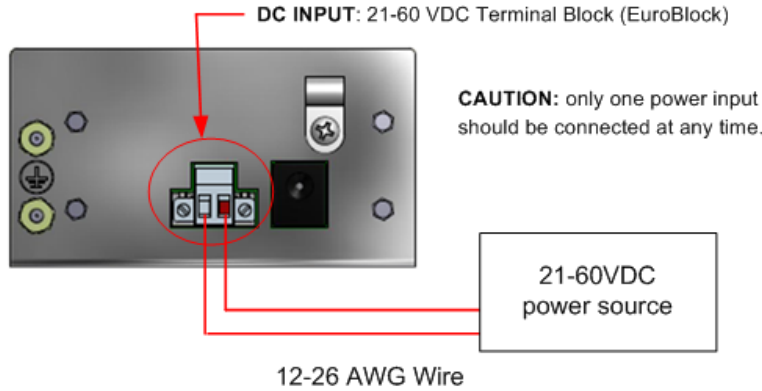


For More Information

See the related slide-in-card manuals for information on:

- Pre-Installation
- DIP Switch settings
- Installation and Setup
- Installing slide-in-cards and SFP/SFP+ Devices
- Cabling
- Operation (CLI and Web GUI)
- Power and Status LEDs
- Cable Specifications
- Cable Types
- Troubleshooting
- Management (CLI or web GUI)

Product and Packaging Labels

The chassis and power supply packaging and product labels provide information helpful when contacting Technical Support.

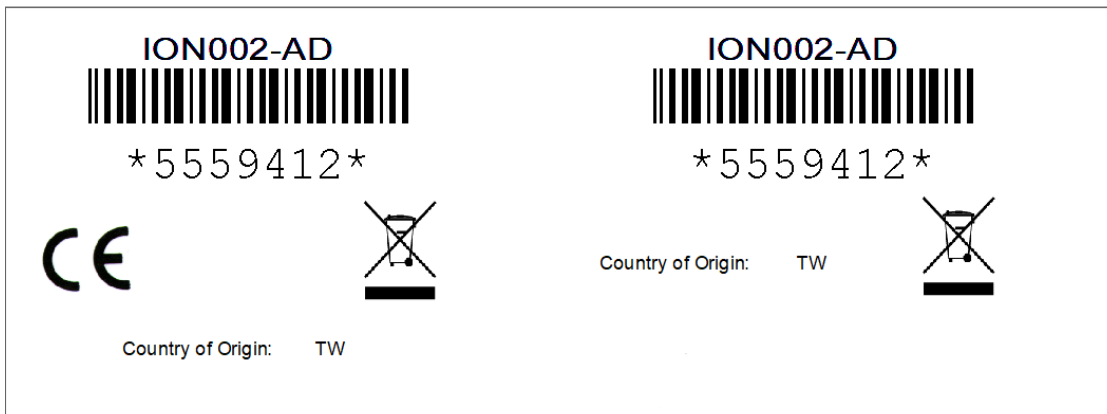

3. Troubleshooting

1. Is a media converter installed in the ION002-AD chassis?

NO

- Install a slide-in card into the ION002-AD chassis. See the installation instructions.
- Proceed to step 2.

YES

- Proceed to step 2.

2. Is the Power LED on the slide-in card lit?

NO

- Is the slide-in-card properly seated?
- Is the power adapter the proper type and cycle frequency for the AC outlet? (See *technical specifications*)
- Is the power adapter properly installed in the ION002-AD and in the grounded AC outlet?
- Contact Technical Support.

YES

- Proceed to step 3.

3. Check the power requirement for the installed slide-in card.

- Power requirement must be 6 W or less.
- For more slide-in-card information, see the related manual.
- For additional assistance, contact Technical Support.

4. Related Information

Compliance Information

Standards

CISPR22/EN55022 Class A, CE Mark, and IEC 61850-3; NDAA Compliant and TAA Compliant

FCC Regulations

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canadian ICES-003

This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CE Marking

This is a Class A product. In a domestic environment, this product could cause radio interference; as a result, the customer may be required to take adequate preventative measures.

UL Listed Power Supply

The Power Supply is tested and recognized by the Underwriters Laboratories, Inc.

Declaration of Conformity

Manufacture's Name: Lantronics, Inc.
Manufacture's Address: 48 Discovery, Suite 250, Irvine, California 92618 USA
Declares that the products: ION002-AD
Conforms to the following Product Regulations:
EMC Directive 2004/108/EC; EN 55022:2006+A1:2007 Class A;
EN55024:1998+A1:2001+A2:2003; EN61000-3-2; EN61000-3-3; CFR Title 47 Part 15
Subpart B Class A; Low Voltage Directive: 2006/95/EC
With the technical construction on file at the above address, this product carries the CE Mark
I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).
Place: Irvine, California
Date: June 16, 2023
Signature: *Eric Bass*
Full Name: Eric Bass
Position: Vice President of Engineering

European Regulations

WARNING: This is a Class A product. In a domestic environment, this product could cause radio interference in which case the user may be required to take adequate measures.

Achtung ! Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten. In diesem Fall ist der Benutzer für Gegenmaßnahmen verantwortlich.

Attention ! Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.



In accordance with European Union Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003, Lantronix will accept post usage returns of this product for proper disposal. The contact information for this activity can be found in the 'Contact Us' portion of this document.

CAUTION: RJ connectors are NOT INTENDED FOR CONNECTION TO THE PUBLIC TELEPHONE NETWORK. Failure to observe this caution could result in damage to the public telephone network.

Der Anschluss dieses Gerätes an ein öffentliches Telekommunikationsnetz in den EG-Mitgliedstaaten verstößt gegen die jeweiligen einzelstaatlichen Gesetze zur Anwendung der Richtlinie 91/263/EWG zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über Telekommunikationsendeinrichtungen einschliesslich der gegenseitigen Anerkennung ihrer Konformität.

Electrical Safety Warnings

Electrical Safety

IMPORTANT: This equipment must be installed in accordance with safety precautions.

Elektrische Sicherheit

WICHTIG: Für die Installation dieses Gerätes ist die Einhaltung von Sicherheitsvorkehrungen erforderlich.

Elektrisk sikkerhed

VIGTIGT: Dette udstyr skal 16nstillers i overensstemmelse med sikkerhedsadvarslerne.

Elektrische veiligheid

BELANGRIJK: Dit apparaat moet in overeenstemming met de veiligheidsvoorschriften worden geïnstalleerd.

Sécurité électrique

IMPORTANT : Cet équipement doit être utilisé conformément aux instructions de sécurité.

Sähköturvallisuus

TÄRKEÄÄ : Tämä laite on asennettava turvaohjeiden mukaisesti.

Sicurezza elettrica

IMPORTANTE: questa apparecchiatura deve essere installata rispettando le norme di sicurezza.

Elektrisk sikkerhet

VIKTIG: Dette utstyret skal 16nstillers i samsvar med sikkerhetsregler.

Segurança eléctrica

IMPORTANTE: Este equipamento tem que ser instalado segundo as medidas de precaução de segurança.

Seguridad eléctrica

IMPORTANTE: La instalación de este equipo deberá llevarse a cabo cumpliendo con las precauciones de seguridad.

Elsäkerhet

OBS! Alla nödvändiga försiktighetsåtgärder måste vidtas när denna utrustning används.

**Lantronix Corporate Headquarters**

48 Discovery, Suite 250
Irvine, CA 92618, USA
Toll Free: 800-526-8766
Phone: 949-453-3990
Fax: 949-453-3995

Technical Support

Online: <https://www.lantronix.com/technical-support/>

Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at www.lantronix.com/about/contact.