




SM8TAT2DPB

Managed Switch, 8-port Gigabit PoE+, 2-port SFP/RJ-45 Combo

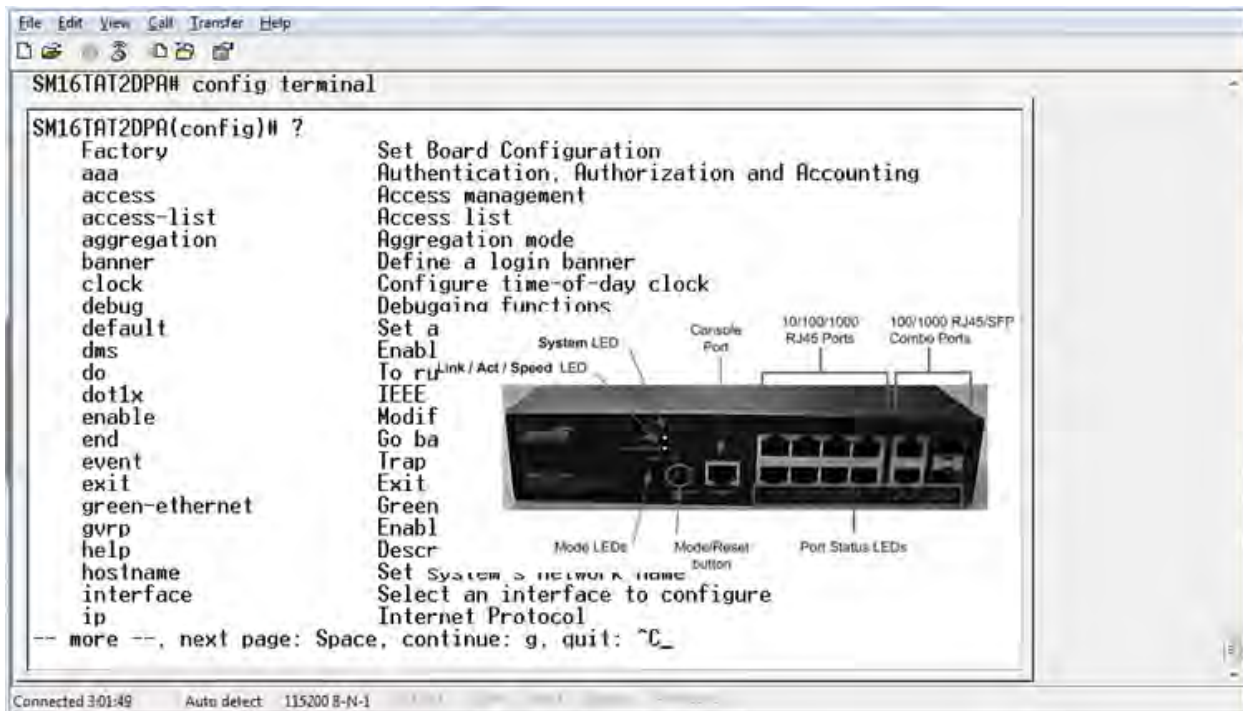

CLI Reference

33700 Rev. A

Safety Warnings and Cautions

These products are not intended for use in life support products where failure of a product could reasonably be expected to result in death or personal injury. Anyone using this product in such an application without express written consent of an officer of Transition Networks does so at their own risk, and agrees to fully indemnify Transition Networks for any damages that may result from such use or sale.



Attention: this product, like all electronic products, uses semiconductors that can be damaged by ESD (electrostatic discharge). Always observe appropriate precautions when handling.



NOTE: Emphasizes important information or calls your attention to related features or instructions.



WARNING: Alerts you to a potential hazard that could cause personal injury.



CAUTION: Alerts you to a potential hazard that could cause loss of data, or damage the system or equipment.

SM8TAT2DPB CLI Reference - TN PN 33700 Rev. A

Record of Revisions

Rev	Date	Description of Changes
A	11/11/16	Initial release for Firmware v 6.48.

Trademark notice

All trademarks and registered trademarks are the property of their respective owners. All other products or service names used in this publication are for identification purposes only, and may be trademarks or registered trademarks of their respective companies. All other trademarks or registered trademarks mentioned herein are the property of their respective holders.

Copyright restrictions

© 2016 Transition Networks, Inc. All rights reserved. No part of this work may be reproduced or used in any form or by any means (graphic, electronic, or mechanical) without written permission from Transition Networks.

Address comments on this product or manual to:

Transition Networks Inc.

10900 Red Circle Drive, Minnetonka, MN 55343

tel: +1.952.941.7600 | toll free: 1.800.526.9267 | fax: 952.941.2322

sales@transition.com | techsupport@transition.com | customerservice@transition.com

Contents

- Safety Warnings and Cautions..... ii
- Contents 3
- 1 CLI Management 5
 - 1-1 INTRODUCTION..... 5
 - 1-2 CLI CONNECTION..... 5
 - 1-3 LOGIN 6
 - 1-4 RELATED MANUALS..... 6
 - 1-5 CLI COMMANDS..... 7
 - 1-5 GLOBAL CLI COMMANDS 8
- 2 CLEAR Commands..... 11
- 3 CONFIGURE Commands 19
 - ACCESS-LIST 67
 - 3-3 NO 71
 - 3-4 QOS..... 107
 - 3-5 SNMP-SERVER 113
 - 3-6 SPANNING-TREE 120
- 4 COPY Commands 123
- 5 DEBUG Commands 124
- 6 DELETE Commands 125
- 7 DIR Commands 126
- 8 DISABLE Commands 127
- 9 DO Commands..... 128
- 10 DOT1X Commands..... 129
- 11 ENABLE Commands 130
- 12 FIRMWARE Commands 131
- 13 NO Commands..... 133
- 14 PING Commands..... 134
- 15 RELOAD Commands..... 136
- 16 SEND Commands 137
- 17 SHOW Commands 138
- 18 TERMINAL Commands..... 206

19 IP Commands..... 208

20 Traceroute Commands 209

21 CLI Command Reference 210

22 CLI Summary..... 261

23 Configure DHCP Per Port 271

Appendix A Service, Warranty & Tech Support..... 274

Appendix B Compliance Information 274

1

CLI Management

1-1 Introduction

This guide gives specific information on how to operate and use the management functions of the switch.

The guide is intended for use by network administrators who are responsible for operating and maintaining network equipment; consequently, it assumes a basic working knowledge of general switch functions, the Internet Protocol (IP), and Simple Network Management Protocol (SNMP).

1-2 CLI Connection

This section provides a brief description of the network connection.

- Locate the correct DB-9 (RS-232) cable with female DB-9 connector. RS-232 cable is used for connecting a terminal or terminal emulator to the Managed Switch's RJ45 port to access the command-line interface.
- Attach the RJ45 serial port on the switch's front panel which used to connect to the switch for console configuration.
- Attach the other end of the DB-9 cable to an ASCII terminal emulator or PC Com-1, 2 port. For example, a PC running Microsoft Windows HyperTerminal utility.
- At "Com Port Properties" Menu, configure the parameters as below: (see the next section).

Baud rate	115200
Stop bits	1
Data bits	8
Parity	N
Flow control	none

1-3 Login

The command-line interface (CLI) is a text-based interface. You can access the CLI through either a direct serial connection to the device or a Telnet session. The default user and password to login into the Managed Switch are listed below:

Username: admin

Password: admin

After you login successfully, the prompt will be shown as "<sys_name>#". This means you are treated as an administrator and have the privilege for setting the Managed Switch. If logged in as other than the administrator, the prompt will be shown as "<sys_name>>", meaning you are treated as a guest and are only allowed for setting the system under the administrator. Each CLI command has its own privilege level.

```
Username: admin
Password: admin
SM8TAT2DPB#
```

1-4 Related Manuals

These manuals give specific information on how to operate the management functions of the switch:

- SM8TAT2DPB Quick Start Guide, 33697
- SM8TAT2DPB Install Guide, 33698
- SM8TAT2DPB Web User Guide, 33699
- SM8TAT2DPB CLI Reference, 33700 (this manual)

For Transition Networks Drivers, Firmware, Manuals, etc. go to the [Product Support](#) webpage.

For Application Notes, Brochures, Data Sheets, Specifications, etc. go to the [Support Library](#).

Note that this manual provides links to third party web sites for which Transition Networks is not responsible.

1-5 CLI Commands

The CLI is divided into several modes. If a user has enough privilege to run a particular command, the user has to run the command in the correct mode. To see the commands of the mode, please input “?” after the system prompt, then all commands will be listed in the screen. The command modes are listed as follows:

Command Modes

Mode	Prompt	Command Function in This Mode
exec	<sys_name>#	Display current config, diagnostics, maintenance
config	<sys_name>(config)#	Configure features other than those below
Config-if	<sys_name>(config-interface)#	Configure ports
Config-if-vlan	<sys_name>(config-if-vlan)#	Configure static vlan
Config-line	<sys_name>(config-line)#	Line Configuration
Config-impc-profile	<sys_name>(config-impc-profile)#	IPMC Profile
Config-snmp-host	<sys_name>(config-snmp-host)#	SNMP Server Host
Config-stp-aggr	<sys_name>(config-stp-aggr)#	STP Aggregation
Config-dhcp-pool	<sys_name>(config-dhcp-pool)#	DHCP Pool Configuration
Config-rtc2544-profile	<sys_name>(config-rtc2544-profile)#	RFC2544 Profile

Commands reside in the corresponding modes could run only in that mode. If a user wants to run a particular command, the user has to change to the appropriate mode. The command modes are organized as a tree, and users start to in enable mode. The following table explains how to change from one mode to another.

Change Between Command Modes

Mode	Enter Mode	Leave Mode
exec	--	--
config	Configure terminal	exit
config-interfcae	Interface <port-type> <port-type-list>	exit
config-vlan	Interface vlan <vlan_list>	exit

1-5 Global CLI Commands

The global mode CLI commands are shown below:

```
SM8TAT2DPB# ?
  clear          Reset functions
  configure      Enter configuration mode
  copy           Copy from source to destination
  debug          Debugging functions
  delete         Delete one file in flash: file system
  dir            Directory of all files in file system
  disable        Turn off privileged commands
  do             To run exec commands in config mode
  dot1x          IEEE Standard for port-based Network Access Control
  enable         Turn on privileged commands
  exit           Exit from EXEC mode
  firmware       Firmware upgrade/swap
  help           Description of the interactive help system
  ip             IPv4 commands
  logout         Exit from EXEC mode
  more           Display file
  no             Negate a command or set its defaults
  ping           Send ICMP echo messages
  reload         Reload system.
  send           Send a message to other tty lines
  show           Show running system information
  terminal        Set terminal line parameters
  traceroute     traceroute program
SM8TAT2DPB#
```


Exit

Exit from EXEC mode.

Syntax:

exit

Parameter:

None.

Example:

```
SM8TAT2DPB# exit
```

Press ENTER to get started

Help

Description of the interactive help system.

Syntax:

help

Parameter:

None.

Example:

```
SM8TAT2DPB# help
```

Help may be requested at any point in a command by entering a question mark '?'. If nothing matches, the help list will be empty and you must backup until entering a '?' shows the available options.

Two styles of help are provided:

1. Full help is available when you are ready to enter a command argument (e.g. 'show ?') and describes each possible argument.
2. Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. 'show pr?'.)

```
SM8TAT2DPB#
```

logout

Exit from EXEC mode.

Syntax:

logout

Parameter:

none

Example:

```
SM8TAT2DPB# logout
```

```
Press ENTER to get started
```

end

Go back to EXEC mode.

Syntax:

end

Example:

```
SM8TAT2DPB# con ter
```

```
SM8TAT2DPB(config)# end
```

```
SM8TAT2DPB#
```

2

CLEAR Commands

Table : CLEAR Commands

Command	Function
access	Access management
access-list	Access list
dot1x	IEEE Standard for port-based Network Access Control
ip	Interface Internet Protocol config commands
ipv6	IPv6 configuration commands
lACP	Clear LACP statistics
lldp	Clears LLDP statistics.
logging	Syslog
mac	MAC Address Table
mvr	Multicast VLAN Registration configuration
sflow	Statistics flow.
spanning-tree	STP Bridge
statistics	Clear statistics for a given interface

access

Access management.

Syntax:

```
clear access management statistics
```

Parameter:

management Access management configuration.

statistics Statistics data.

Example:

```
SM8TAT2DPB # clear access management statistics
SM8TAT2DPB #
```

access-list

Access list.

Syntax:

Clear access-list ace statistics

Parameter:

ace Access list entry

statistics Traffic statistics

Example:

```
SM8TAT2DPB# clear access-list ace statistics
SM8TAT2DPB#
```

dot1x

IEEE Standard for port-based Network Access Control.

Syntax

Clear dot1x statistics

Clear dot1x statistics interface GigabitEthernet < PORT_TYPE_LIST >

Parameter

statistics Clears the statistics counters

interface Interface

GigabitEthernet 1 Gigabit Ethernet Port

PORT_TYPE_LIST Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB# clear dot1x statistics interface GigabitEthernet 1/1-18
SM8TAT2DPB#
```

ip

Interface Internet Protocol config commands

Syntax

```

clear ip arp
clear ip dhcp detailed statistics { server | client | snooping | relay | helper | all } [ interface ( <port_type>
[ <in_port_list> ] ) ]
clear ip dhcp relay statistics
clear ip dhcp server binding <ip>
clear ip dhcp server binding { automatic | manual | expired }
clear ip dhcp server statistics
clear ip dhcp snooping statistics [ interface ( <port_type> [ <in_port_list> ] ) ]
clear ip igmp snooping [ vlan <v_vlan_list> ] statistics
clear ip statistics [ system ] [ interface vlan <v_vlan_list> ] [ icmp ] [ icmp-msg <type> ]

```

Parameter

arp	Clear ARP cache
dhcp	Dynamic Host Configuration Protocol
igmp	Internet Group Management Protocol
statistics	Traffic statistics
relay	DHCP relay agent configuration
snooping	DHCP snooping
interface	Select an interface to configure
GigabitEthernet	1 Gigabit Ethernet Port
vlan	IPv4 traffic interface
<vlan_list>	VLAN identifier(s): VID

EXAMPLE

```

SM8TAT2DPB# clear ip arp
SM8TAT2DPB# clear ip dhcp detailed statistics all interface GigabitEthernet 1/1-18
SM8TAT2DPB# clear ip dhcp relay statistics
SM8TAT2DPB# clear ip dhcp server binding 192.168.1.11
SM8TAT2DPB# clear ip dhcp server binding automatic
SM8TAT2DPB# clear ip dhcp server statistics
SM8TAT2DPB# Clear ip dhcp snooping statistics interface GigabitEthernet 1/1-18
SM8TAT2DPB# clear ip igmp snooping vlan 1 statistics
SM8TAT2DPB# clear ip statistics system interface
SM8TAT2DPB# clear ip statistics system interface vlan 1 icmp icmp-msg 2

```

ipv6

IPv6 configuration commands.

Syntax

clear ipv6 mld snooping [vlan <v_vlan_list>] statistics

clear ipv6 neighbors

clear ipv6 statistics [system] [interface vlan <v_vlan_list>] [icmp] [icmp-msg <type>]

Parameter

mld	Multicasat Listener Discovery
neighbors	Ipv6 neighbors
statistics	Traffic statistics
snooping	Snooping MLD
statistics	Running MLD snooping counters
vlan	Ipv6 interface traffic
<vlan_list>	VLAN identifier(s): VID
icmp	IPv6 ICMP traffic
icmp-msg	IPv6 ICMP traffic for designated message type
interface	Select an interface to configure
system	IPv6 system traffic
< 0-255>	ICMP message type ranges from 0 to 255

EXAMPLE

```
SM8TAT2DPB# clear ipv6 mld snooping vlan 3 statistics
SM8TAT2DPB# clear ipv6 neighbors
SM8TAT2DPB# clear ipv6 statistics system icmp icmp-msg 2
```

lACP

Clear LACP statistics

Syntax

Clear lACP statistics

Parameter

statistics Clear all LACP statistics

EXAMPLE

```
SM8TAT2DPB# clear ipv6 mld snooping vlan 3 statistics
SM8TAT2DPB# clear ipv6 neighbors
SM8TAT2DPB# Clear ipv6 statistics system icmp icmp-msg 2
```

lldp

Clears LLDP statistics.

Syntax

Clear lldp statistics

Clear lldp statistics| begin | exclude | include >< LINE >

Parameter

statistics Clears LLDP statistics.
| Output modifiers
begin Begin with the line that matches
exclude Exclude lines that match
include Include lines that match
<LINE> String to match output lines

EXAMPLE

```
SM8TAT2DPB# clear lldp statistics | begin LINE
SM8TAT2DPB#
```

logging

Clear Syslog (system logging).

Syntax

```
clear logging [ info ] [ warning ] [ error ] [ switch <switch_list> ]
```

Parameter

error	Error
info	Information
warning	Warning

EXAMPLE

```
SM8TAT2DPB# clear logging info error warning  
SM8TAT2DPB#
```

mac

Clear MAC Address Table.

Syntax

```
Clear mac address-table
```

Parameter

address-table	Flush MAC Address table.
----------------------	--------------------------

EXAMPLE

```
SM8TAT2DPB# clear mac address-table  
SM8TAT2DPB#
```


mvr

Multicast VLAN Registration configuration.

Syntax

```
clear mvr [ vlan <v_vlan_list> | name <mvr_name> ] statistics
```

Parameter

name	MVR multicast name
statistics	Running MVR protocol counters
vlan	MVR multicast vlan
< word16>	MVR multicast VLAN name
<vlan_list>	MVR multicast VLAN list

EXAMPLE

```
SM8TAT2DPB# clear mvr vlan 25 statistics
SM8TAT2DPB#
```

sflow

Statistics flow.

Syntax

```
clear sflow statistics { receiver [ <receiver_index_list> ] | samplers [ interface [ <samplers_list> ] ( <port_type>
[ <v_port_type_list> ] ) ] }
```

Parameter

interface	Interface
receiver	Clear statistics for receiver.
<port_type>	GigabitEthernet
<Samplers : option>	runtime
<port_type_list>	Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB# clear sflow statistics interface GigabitEthernet 1/1-18
```

spanning-tree

Spanning Tree Protocol Bridge.

Syntax

```
clear spanning-tree { { statistics [ interface ( <port_type> [ <v_port_type_list> ] ) ] } } | { detected-protocols [ interface ( <port_type> [ <v_port_type_list_1> ] ) ] } }
```

Parameter

detected-protocols	Set the STP migration check
statistics	STP statistics
interface	Choose port
<port_type>	GigabitEthernet
<port_type_list>	Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB# clear spanning-tree detected-protocols interface GigabitEthernet 1/1-8
```

statistics

Clear statistics for a given interface

Syntax

```
clear statistics interface <port_type> <port_type_list>  
clear statistics <port_type> <port_type_list>
```

Parameter

<port_type>	GigabitEthernet
<port_type_list>	Port list in 1/1-8 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB# clear statistics GigabitEthernet 1/1-8  
SM8TAT2DPB#
```

3

CONFIGURE Commands

Table : CONFIGURE Commands

Command	Function
aaa	Authentication, Authorization and Accounting
access	Access management
access-list	Access list
aggregation	Aggregation mode
banner	Define a login banner
clock	Configure time-of-day clock
default	Set a command to its defaults
dms	Enable DMS Master
do	To run exec commands in config mode
dot1x	IEEE Standard for port-based Network Access Control
enable	Modify enable password parameters
end	Go back to EXEC mode
event	Trap event severity level
exit	Exit from Configuration mode
green-ethernet	Green ethernet (Power reduction)
gvrp	Enable GVRP feature
help	Description of the interactive help system
hostname	Set system's network name
interface	Select an interface to configure
ip	Internet Protocol
ipmc	IPv4/IPv6 multicast configuration
ipv6	IPv6 configuration commands
lACP	LACP settings
line	Configure a terminal line
lldp	LLDP configurations.
logging	Syslog

loop-protect	Loop protection configuration
mac	MAC table entries/configuration
monitor	Set monitor configuration.
mvr	Multicast VLAN Registration configuration
no	Negate a command or set its defaults
ntp	Configure NTP
poe	power over ethernet
port-security	Enable/disable port security globally.
privilege	Command privilege parameters
qos	Quality of Service
radius-server	Configure RADIUS
rmon	Remote Monitoring
sflow	Statistics flow.
smtp	Set email information
snmp-server	Set SNMP server's configurations
spanning-tree	Spanning Tree protocol
system	Set the SNMP server's configurations
tacacs-server	Configure TACACS+
upnp	Set UPnP's configurations
username	Establish User Name Authentication
vlan	VLAN commands
voice	Voice appliance attributes
web	Web

terminal

Configure from the terminal (config mode).

Syntax

configure terminal

EXAMPLE

```
SM8TAT2DPB# configure terminal
SM8TAT2DPB(config)#
```

aaa

Configure Authentication, Authorization and Accounting.

SYNTAX

```
aaa authentication login { console | telnet | ssh | http } { { local | radius | tacacs } [ { local | radius | tacacs }
[ { local | radius | tacacs } ] ] }
```

Parameter

authentication	Authentication
login	Login
console	Configure Console
http	Configure HTTP
ssh	Configure SSH
telnet	Configure Telnet
local	Use local database for authentication
radius	Use RADIUS for authentication
tacacs	Use TACACS+ for authentication

EXAMPLE

```
SM8TAT2DPB(config)# aaa authentication login http radius
SM8TAT2DPB(config)#
```

access

Configure Access management.

SYNTAX

access management

access management <access_id> <access_vid> <start_addr> [to <end_addr>] { [web] [snmp] [telnet] | all }

Parameter

management	Access management configuration
< 1-16>	ID of access management entry
< 1-4094>	The VLAN ID for the access management entry
< ipv4_addr>	Start IPv4 address
< ipv6_addr>	Start IPv6 address
all	All services
snmp	SNMP service
telnet	TELNET/SSH service
to	End address of the range
web	Web service

EXAMPLE

```
SM8TAT2DPB(config)# access management 10 3 192.168.1.1 all
SM8TAT2DPB(config)#
```

aggregation

Configure Aggregation mode.

SYNTAX

```
aggregation mode {[ dmac ][ ip ][ dmac ][ port ]}
```

Parameter

mode	Traffic distribution mode
dmac	Destination MAC affects the distribution
ip	IP address affects the distribution
port	IP port affects the distribution
smac	Source MAC affects the distribution

EXAMPLE

```
SM8TAT2DPB(config)# aggregation mode ip port dmac smac  
SM8TAT2DPB(config)#
```

banner

Define a login banner

SYNTAX

banner [motd] <banner>

banner exec <banner>

banner login <banner>

Parameter

<LINE> c banner-text c, where 'c' is a delimiting character

exec Set EXEC process creation banner

login Set login banner

motd Set Message of the Day banner

EXAMPLE

```
SM8TAT2DPB(config)# banner exec LINE
Enter TEXT message. End with the character 'L'.
L
SM8TAT2DPB(config)#
```


clock

Configure time-of-day clock.

SYNTAX

```

clock set <icliDate> <icliTime>
clock summer-time <word16> date [ <start_month_var> <start_date_var> <start_year_var> <start_hour_var>
<end_month_var> <end_date_var> <end_year_var> <end_hour_var> [ <offset_var> ] ]
clock summer-time <word16> recurring [ <start_week_var> <start_day_var> <start_month_var>
<start_hour_var> <end_week_var> <end_day_var> <end_month_var> <end_hour_var> [ <offset_var> ] ]
clock timezone <word_var> <hour_var> [ <minute_var> ]

```

Parameters

set	set clock
summer-time	Configure summer (daylight savings) time
timezone	Configure time zone
<date>	yyyy/mm/dd
<time>	hh:mm:ss
<2000-2097>	Year to start
hh:mm	Time to start (hh:mm)
<1-12>	Month to end
<1-31>	Date to end
<2000-2097>	Year to end
hh:mm	Time to end (hh:mm)
<1-1440>	Offset to add in minutes
<1-5>	Week number to start
<1-7>	Weekday to start
<1-12>	Month to start

EXAMPLE

```

SM8TAT2DPB(config)# clock ?
  set          set clock
  summer-time  Configure summer (daylight savings) time
  timezone     Configure time zone
SM8TAT2DPB(config)# clock set 2016/08/11 10:19:30
2016-08-11T10:19:30+00:00
SM8TAT2DPB(config)#

```

debug

Configure Debugging functions.

SYNTAX

enable password

parsing

vcl policy VCL commands

Parameter

debug set debug functions.

EXAMPLE

```
SM8TAT2DPB(config)# debug enable password
priv = 0 -> clear,
priv = 1 -> clear,
priv = 2 -> clear,
priv = 3 -> clear,
priv = 4 -> clear,
priv = 5 -> clear,
priv = 6 -> clear,
priv = 7 -> clear,
priv = 8 -> clear,
priv = 9 -> clear,
priv = 10 -> clear,
priv = 11 -> clear,
priv = 12 -> clear,
priv = 13 -> clear,
priv = 14 -> clear,
priv = 15 -> clear,
priv = 16 -> clear,
SM8TAT2DPB(config)#

SM8TAT2DPB(config)# debug parsing ?
<cr>
SM8TAT2DPB(config)# debug parsing
interface ten 1/1
      ^
% Invalid word detected at '^' marker.

SM8TAT2DPB(config)#

SM8TAT2DPB(config)# debug vcl ?
policy  Policy configuration
SM8TAT2DPB(config)# debug vcl policy ?
<Policy : 0-255>  Policy number to apply
SM8TAT2DPB(config)# debug vcl policy 1 ?
<cr>
SM8TAT2DPB(config)# debug vcl policy 1
SM8TAT2DPB(config)#
```

default

Set access list reate limiter to its defaults.

SYNTAX

```
default access-list rate-limiter [ <rate_limiter_list> ]
```

Parameter

access-list	Access list
rate-limiter	Rate limiter
<RateLimiterId : 1-16>	Rate limiter ID

EXAMPLE

```
SM8TAT2DPB(config)# default access-list rate-limiter 3
SM8TAT2DPB(config)#
```

do

Run exec commands in config mode.

SYNTAX

do <LINE >{[< LINE >]}

Parameter

<LINE> Exec Command

EXAMPLE

```
SM8TAT2DPB(config)# do show vlan
```

```
VLAN  Name                               Interfaces
-----  -----
1     default                               Gi 1/1-10
```

```
SM8TAT2DPB(config)#
```

dot1x

Configure IEEE Standard for port-based Network Access Control.

SYNTAX

```

dot1x authentication timer inactivity <v_10_to_100000>
dot1x authentication timer re-authenticate <v_1_to_3600>
dot1x feature { [ guest-vlan ] [ radius-qos ] [ radius-vlan ] }*1
dot1x guest-vlan <value>
dot1x guest-vlan supplicant
dot1x max-reauth-req <value>
dot1x re-authentication
dot1x system-auth-control
dot1x timeout quiet-period <v_10_to_1000000>
dot1x timeout tx-period <v_1_to_65535>

```

Parameter

authentication	Authentication
feature	Globally enables/disables a dot1x feature functionality
guest-vlan	Guest VLAN
max-reauth-req	Guest VLAN ID used when entering the Guest VLAN.
re-authentication	Set Re-authentication state
system-auth-control	Set the global NAS state
timeout	timeout
timer	timer
inactivity	Time in seconds between check for activity on successfully authenticated MAC addresses.
re-authenticate	The period between re-authentication attempts in seconds
<10-1000000>	seconds
<1-3600>	seconds
guest-vlan	Globally enables/disables state of guest-vlan
radius-qos	Globally enables/disables state of RADIUS-assigned QoS.
radius-vlan	Globally enables/disables state of RADIUS-assigned VLAN.
<1-4095>	The number of times a Request Identity EAPOL frame is sent without response before considering entering the Guest VLAN.
supplicant	The switch remembers if an EAPOL frame has been received on the port for the life-time of the port. Once the switch considers whether to enter the Guest VLAN, it will first

check if this option is enabled or disabled. If disabled (unchecked; default), the switch will only enter the Guest VLAN if an EAPOL frame has not been received on the port for the life-time of the port. If enabled (checked), the switch will consider entering the Guest VLAN even if an EAPOL frame has been received on the port for the life-time of the port.

<1-255>	number of times
quiet-period	Time in seconds before a MAC-address that failed authentication gets a new authentication chance.
tx-period	the time between EAPOL retransmissions.
<10-1000000>	seconds
<1-65535>	seconds

EXAMPLE

```
SM8TAT2DPB(config)# dot1x authentication timer inactivity 1000
SM8TAT2DPB(config)# dot1x feature guest-vlan radius-qos radius-vlan
SM8TAT2DPB(config)# dot1x guest-vlan 33
SM8TAT2DPB(config)# dot1x max-reauth-req 3
SM8TAT2DPB(config)# dot1x re-authentication
SM8TAT2DPB(config)# dot1x system-auth-control
SM8TAT2DPB(config)# dot1x timeout quiet-period 3000
```

enable

Modify enable password parameters.

SYNTAX

```
enable password [ <level> <1-15> ] <WORD>
```

```
enable secret { 0 | 5 } [ <level> <1-15> ] <WORD>
```

Parameter

password	Assign the privileged level clear password
secret	Assign the privileged level secret
WORD	The UNENCRYPTED (cleartext) password
level	Set exec level password
<1-15>	Level number
0	Specifies an UNENCRYPTED password will follow
5	Specifies an ENCRYPTED secret will follow

EXAMPLE

```
SM8TAT2DPB(config)# enable password level 10 999
SM8TAT2DPB(config)#
```

event

Configure Trap event severity level.

SYNTAX

```
event group <group_name> { level <lvl> | syslog { enable | disable } | trap { enable | disable } | smtp { enable | disable } | ipush { enable | disable } }
```

Parameter

Group	Configure trap event severity level
<word32>	ACL, ACL_Log, Access_Mgmt, Auth_Failed, Cold_Start, Config_Info, FAN_FAIL, Firmware_Upgrade, Import_Export, LACP, Link_Status, Login, Logout, Loop_Protect, Mgmt_IP_Change, Module_Change, NAS, Password_Change, Poe_Auto_Check, Port_Security, Temperature, VLAN, Voltage, Warm_Start

EXAMPLE

```
SM8TAT2DPB(config)# event group VLAN trap enable
SM8TAT2DPB(config)#
```

Green-ethernet

Configure Powering down of PHYs when there is no traffic.

SYNTAX

green-ethernet <xxx>

Parameter

optimize-for-power Set if EEE will be optimized for least power consumption (else optimized for least traffic latency).

EXAMPLE

```
SM8TAT2DPB(config)# green-ethernet eee?  
eee Powering down of PHYs when there is no traffic.  
SM8TAT2DPB(config)# green-ethernet eee ?  
optimize-for-power Set if EEE will be optimized for least power  
consumption (else optimized for least traffic  
latency).  
SM8TAT2DPB(config)# green-ethernet eee optimize-for-power ?  
<cr>  
SM8TAT2DPB(config)# green-ethernet eee optimize-for-power  
SM8TAT2DPB(config)#
```


gvrp

Configure GVRP feature

SYNTAX

gvrp

gvrp max-vlans <1-4095>

gvrp time { [join-time <1-20>] [leave-time <60-300>] [leave-all-time <1000-5000>] }*1

Parameter

time config gvrp timer value in units of centi seconds [cs]

EXAMPLE

```
SM8TAT2DPB(config)# gvrp max-vlans 333
SM8TAT2DPB(config)# gvrp time join-time 13 leave-all-time 3000 leave-time 200
SM8TAT2DPB(config)#
```

hostname

Set system's network name.

SYNTAX

hostname < WORD >

Parameter

WORD This system's network name.

EXAMPLE

```
SM8TAT2DPB(config)# hostname abc
abc(config)#
```

interface

Select an interface to configure.

SYNTAX

interface (<port_type> [<plist>])

interface vlan <vlist>

Parameter

<port_type>	GigabitEthernet
vlan	VLAN interface configurations
<vlan_list>	List of VLAN interface numbers, 1-4095
<port_type_list>	Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB(config)# interface GigabitEthernet 1/1-18
SM8TAT2DPB(config-if)# poe weekday Fri hour 22
SM8TAT2DPB(config-if)# interface vlan 3
SM8TAT2DPB(config-if-vlan)# ip address dhcp
SM8TAT2DPB(config-if-vlan)#
```

ip

Configure Internet Protocol.

SYNTAX

```

ip arp inspection
ip arp inspection entry interface <port_type> <in_port_type_id> <vlan_var> <mac_var> <ipv4_var>
ip arp inspection translate [ interface <port_type> <in_port_type_id> <vlan_var> <mac_var> <ipv4_var> ]
ip arp inspection vlan <in_vlan_list>
ip arp inspection vlan <in_vlan_list> logging { deny | permit | all }
ip dhcp excluded-address <low_ip> [ <high_ip> ]
ip dhcp pool <pool_name>
ip dhcp relay
ip dhcp relay information option
ip dhcp relay information policy { drop | keep | replace }
ip dhcp server
ip dhcp snooping
ip dns proxy
ip helper-address <v_ipv4_ucast>
ip http secure-redirect
ip http secure-server
ip igmp host-proxy [ leave-proxy ]
ip igmp snooping
ip igmp snooping vlan <v_vlan_list>
ip igmp ssm-range <v_ipv4_mcast> <ipv4_prefix_length>
ip igmp unknown-flooding
ip name-server { <v_ipv4_addr> | dhcp [ interface vlan <v_vlan_id> ] }
ip route <v_ipv4_addr> <v_ipv4_netmask> <v_ipv4_gw>
ip routing
ip source binding interface <port_type> <in_port_type_id> <vlan_var> <ipv4_var> <mac_var>
ip ssh
ip verify source
ip verify source translate

```

Parameter

arp	Address Resolution Protocol
dhcp	Dynamic Host Configuration Protocol
dns	Domain Name System

helper-address	DHCP relay server
http	Hypertext Transfer Protocol
igmp	Internet Group Management Protocol
name-server	Domain Name System
route	Add IP route
routing	Enable routing for IPv4 and IPv6
source	source command
ssh	Secure Shell
verify	verify command
inspection	ARP inspection
entry	arp inspection entry
interface	arp inspection entry interface config
<port_type>	Port type in Fast, Giga ethernet
<port_type_id>	Port ID in the format of switch-no/port-no
<vlan_id>	Select a VLAN id to configure
<mac_ucast>	Select a MAC address to configure
<ipv4_ucast>	Select an IP Address to configure
deny	log denied entries
permit	log permitted entries
all	log all entries
translate	arp inspection translate all entries
vlan	arp inspection vlan setting
<vlan_list>	arp inspection vlan list
relay	DHCP relay agent information
information	DHCP information option <Option 82>
option	DHCP option
information	DHCP information option(Option 82)
policy	Policy for handling the receiving DHCP packet already include the information option
drop	Drop the package when receive a DHCP message that already contains relay information
keep	Keep the original relay information when receive a DHCP message that already contains it
replace	Replace the original relay information when receive a DHCP message that already contains it
server	Enable DHCP server
snooping	DHCP snooping
proxy	DNS proxy service
secure-redirect	Secure HTTP web redirection
secure-server	Secure HTTP web server

snooping	Snooping IGMP
<word16>	Profile name in 16 char's
vlan	IGMP VLAN
ssm-range	IPv4 address range of Source Specific Multicast
<ipv4_mcast>	Valid IPv4 multicast address
<4-32>	Prefix length ranges from 4 to 32
unknown-flooding	Flooding unregistered IPv4 multicast traffic
<ipv4_ucast>	A valid IPv4 unicast address
dhcp	Dynamic Host Configuration Protocol
interface	Select an interface to configure
vlan	VLAN Interface
<vlan_id>	VLAN identifier(s): VID
<ipv4_addr>	Network
<ipv4_netmask>	Netmask
<ipv4_addr>	Gateway
binding	ip source binding
interface	ip source binding entry interface config
<port_type>	* or Gigabitethernet
*	All switches or All ports
Gigabitethernet	1 Gigabitethernet Port
<port_type_id>	Port ID in the format of switch-no/port-no, ex 1/1-18 for Gigabitethernet
<vlan_id>	Select a VLAN id to configure
<ipv4_ucast>	Select an IP Address to configure
<ipv4_netmask>	Select a subnet mask to configure
<mac_ucast>	Select a MAC address to configure
source	verify source
limit	limit command
<0-2>	the number of limit
translate	ip verify source translate all entries
loggin	ARP inspection vlan logging mode config

EXAMPLE

```
SM8TAT2DPB(config)# ip arp inspection
SM8TAT2DPB(config)# ip dhcp relay
SM8TAT2DPB(config)# ip dns proxy
SM8TAT2DPB(config)# ip helper-address 192.168.1.1
SM8TAT2DPB(config)# ip http secure-server
```

```

SM8TAT2DPB(config)# ip igmp snooping vlan 3
SM8TAT2DPB(config)# ip name-server 192.168.1.6
SM8TAT2DPB(config)# ip route 192.168.1.1 255.255.255.0 192.168.1.100
SM8TAT2DPB(config)# ip routing
SM8TAT2DPB(config)# ip ssh
SM8TAT2DPB(config)# ip verify source translate
IP Source Guard:
    Translate 0 dynamic entries into static entries.

```

ipmc

IPv4/IPv6 multicast configuration.

SYNTAX

ipmc profile

ipmc profile <profile_name>

ipmc range <entry_name> { <v_ipv4_mcast> [<v_ipv4_mcast_1>] | <v_ipv6_mcast> [<v_ipv6_mcast_1>] }

Parameter

profile	IPMC profile configuration
range	A range of IPv4/IPv6 multicast addresses for the profile
< word16 >	Range entry name in 16 characters
<ipv4_mcast>	Valid IPv4 multicast address
<ipv6_mcast>	Valid IPv6 multicast address

EXAMPLE

```

SM8TAT2DPB (config)# ipmc profile test
SM8TAT2DPB (config-ipmc-profile)#

```

ipv6

IPv6 configuration commands

SYNTAX

```

ipv6 mld host-proxy [ leave-proxy ]
ipv6 mld snooping
ipv6 mld snooping vlan <v_vlan_list>
ipv6 mld ssm-range <v_ipv6_mcast> <ipv6_prefix_length>
ipv6 mld unknown-flooding
ipv6 route <v_ipv6_subnet> { <v_ipv6_ucast> | interface vlan <v_vlan_id> <v_ipv6_addr> }

```

Parameter

mld	Multicasat Listener Discovery
route	Configure static routes
host-proxy	MLD proxy configuration
snooping	Snooping MLD
ssm-range	IPv6 address range of Source Specific Multicast
unknown-flooding	Flooding unregistered IPv6 multicast traffic
leave-proxy	MLD proxy for leave configuration
vlan	MLD VLAN
<vlan_list>	VLAN identifier(s): VID
<ipv6_mcast>	Valid IPv6 multicast address
X:X:X:X::X/<0-128>	IPv6 prefix x:x::y/z

EXAMPLE

```

SM8TAT2DPB(config)# ipv6 mld host-proxy leave-proxy
SM8TAT2DPB (config)# ipv6 mld snooping vlan 1
SM8TAT2DPB (config)#

```

lACP

Configure LACP settings.

SYNTAX

```
lACP system-priority <1-65535>
```

Parameter

system-priority	System priority
<1-65535>	Priority value, lower means higher priority

EXAMPLE

```
SM8TAT2DPB (config)# lACP system-priority 333
SM8TAT2DPB (config)#
```

line

Configure a terminal line.

SYNTAX

```
line { <0~16> | console 0 | vty <0~15> }
```

Parameter

<0~16>	List of line numbers
console	Console terminal line
0	Console Line number
vtY	Virtual terminal
<0~15>	List of vty numbers

EXAMPLE

```
SM8TAT2DPB (config)# line console 0
SM8TAT2DPB (config-line)#
```


Ildp

Configure LLDP and LLDP-MED parameters. **LLDP** is an IEEE 802.1ab standard protocol. The Link Layer Discovery Protocol (LLDP) specified in this standard allows stations attached to an IEEE 802 LAN to advertise, to other stations attached to the same IEEE 802 LAN, the major capabilities provided by the system incorporating that station. **LLDP-MED** is an extension of IEEE 802.1ab and is defined by the telecommunication industry association (TIA-1057).

SYNTAX

```

lldp holdtime <2-10>
lldp med datum { wgs84 | nad83_navd88 | nad83_mllw }
lldp med fast <1-10>
lldp med location-tlv altitude { meters | floors } <word11>
lldp med location-tlv civic-addr { country | state | county | city | district | block | street | leading-street-direction |
trailing-street-suffix | street-suffix | house-no | house-no-suffix | landmark | additional-info | name | zip-code |
building | apartment | floor | room-number | place-type | postal-community-name | p-o-box | additional-code }
<string250>
lldp med location-tlv elin-addr <dword25>
lldp med location-tlv latitude { north | south } <word8>
lldp med location-tlv longitude { west | east } <word9>
lldp med media-vlan policy-list <range_list>
lldp med media-vlan-policy <0-31> { voice | voice-signaling | guest-voice-signaling | guest-voice |
softphone-voice | video-conferencing | streaming-video | video-signaling } { tagged <vlan_id> | untagged }
[ l2-priority <0-7> ] [ dscp <0-63> ]
lldp reinit <1-10>
lldp timer <5-32768>
lldp transmission-delay <1-8192>

```

Parameter

holdtime	Sets LLDP hold time (The neighbor switch will discard the LLDP information after "hold time" multiplied with "timer" seconds).
med	Media Endpoint Discovery.
reinit	LLDP tx reinitialization delay in seconds.
timer	Sets LLDP TX interval (The time between each LLDP frame transmitted in seconds).
transmission-delay	Sets LLDP transmission-delay. LLDP transmission delay (the amount of time that the transmission of LLDP frames will be delayed after LLDP configuration has changed) in seconds.)

<2-10>	2-10 seconds.
<1-10>	1-10 seconds.
<5-32768>	5-32768 seconds.
<1-8192>	1-8192 seconds.
datum	Datum (geodetic system) type.
fast	Number of times to repeat LLDP frame transmission at fast start.
location-tlv	LLDP-MED Location Type Length Value parameter.
media-vlan-policy	Use the media-vlan-policy to create a policy, which can be assigned to an interface.
nad83_mllw	Mean lower low water datum 1983
nad83_navd88	North American vertical datum 1983
wgs84	World Geodetic System 1984
altitude	Altitude parameter
meter	Altitude value
floors	Altitude value
civic-addr	Civic address information and postal information
country	The two-letter ISO 3166 country code in capital ASCII letters – e.g., DK, DE or US.
state	National subdivisions (state, canton, region, province, prefecture).
county	County, parish, gun (Japan), district.
city	City, township, shi (Japan) - Example: Copenhagen.
district	City division, borough, city district, ward, chou (Japan).
block	Neighbourhood, block.
street	Street - Example: Poppelvej.
leading-street-direction	Leading street direction - Example: N.
trailing-street-suffix	Trailing street suffix - Example: SW.
street-suffix	Street suffix - Example: Ave, Platz.
house-no	House number - Example: 21.
house-no-suffix	House number suffix - Example: A, 1/2.
landmark	Landmark or vanity address - Example: Columbia University.
additional-info	Additional location info - Example: South Wing.
name	Name (residence and office occupant) - Example: Flemming Jahn.
zip-code	Postal/zip code - Example: 2791.
building	Building (structure) - Example: Low Library.
apartment	Unit (Apartment, suite) - Example: Apt 42.
floor	Floor - Example: 4 th floor.
room-number	Room number - Example: 450F.
place-type	Place type - Example: Office.

postal-community-name	Postal community name - Example: Leonia.
p-o-box	Post office box (P.O. BOX) - Example: 12345.
additional-code	Additional code - Example: 1320300003.
<string250>	Value for the corresponding selected civic address.
elin-addr	Emergency Location ID Number, (e.g. E911 and others), as defined by TIA or NENA.
<dword25>	ELIN value
north	Setting latitude direction to north.
south	Setting latitude direction to south.
<word8>	Latitude degrees (0.0000-90.0000).
policy-list	Assignment of policies.
<range_list>	Policies to assign to the interface.
<0-31>	Policy id for the policy which is created.
voice	Create a voice policy.
voice-signaling	Create a voice signaling policy.
guest-voice-signaling	Create a guest voice signaling policy.
guest-voice	Create a guest voice policy.
softphone-voice	Create a softphone voice policy.
video-conferencing	Create a video conferencing policy.
streaming-video	Create a streaming video policy.
video-signaling	Create a video signaling policy.
tagged	The policy uses tagged frames.
<vlan_id>	The VLAN the policy uses tagged frames.
untagged	The policy uses un-tagged frames.
l2-priority	Layer 2 priority.
<0-7>	Priority 0-7
dscp	Differentiated Services Code Point.
<0-63>	DSCP value 0-63.

EXAMPLE

```
SM8TAT2DPB(config)# lldp ?
  holdtime      Sets LLDP hold time (The neighbor switch will
                 discarded the LLDP information after "hold time"
                 multiplied with "timer" seconds ).
  med           Media Endpoint Discovery.
  reinit        LLDP tx reinitialization delay in seconds.
  timer         Sets LLDP TX interval (The time between each LLDP
                 frame transmitted in seconds).
```

```
transmission-delay    Sets LLDP transmission-delay.  LLDP transmission delay
                      (the amount of time that the transmission of LLDP
                      frames will delayed after LLDP configuration has
                      changed) in seconds.)

SM8TAT2DPB(config)# lldp holdtime ?
    <2-10>    2-10 seconds.

SM8TAT2DPB(config)# lldp med ?

    datum          Datum (geodetic system) type.
    fast           Number of times to repeat LLDP frame transmission at
                   fast start.
    location-tlv   LLDP-MED Location Type Length Value parameter.
    media-vlan-policy  Use the media-vlan-policy to create a policy, which
                   can be assigned to an interface.

SM8TAT2DPB(config)# lldp reinit ?
    <1-10>    1-10 seconds.

SM8TAT2DPB(config)# lldp timer ?
    <5-32768>  5-32768 seconds.

SM8TAT2DPB(config)# lldp transmission-delay ?
    <1-8192>   1-8192 seconds.

SM8TAT2DPB(config)#
SM8TAT2DPB(config)# lldp holdtime 5
SM8TAT2DPB(config)# lldp med fast 5
SM8TAT2DPB(config)# lldp reinit 3
SM8TAT2DPB(config)# lldp timer 555
SM8TAT2DPB(config)# lldp transmission-delay 333
Note: According to IEEE 802.1AB-clause 10.5.4.2 the transmission-delay must not
be larger than LLDP timer * 0.25. LLDP timer changed to 1332
SM8TAT2DPB(config)#
```

logging

Syslog (system logging) configuration.

SYNTAX

logging host { <ipv4_ucast> | <hostname> }

logging level { info | warning | error }

logging on

Parameter

host	host
<ipv4_ucast>	IP address of the log server
<hostname>	Domain name of the log server
level	level
info	Information
warning	Warning
error	Error
on	Enable syslog server

EXAMPLE

```
SM8TAT2DPB(config)# logging level error
SM8TAT2DPB(config)# logging on
SM8TAT2DPB(config)#
```

loop-protect

Loop protection configuration.

SYNTAX

loop-protect

loop-protect shutdown-time <0-604800>

loop-protect transmit-time <1-10>

Parameter

shutdown-time	Loop protection shutdown time interval
<0-604800>	Shutdown time in second
transmit-time	Loop protection transmit time interval
<1-10>	Transmit time in second

EXAMPLE

```
SM8TAT2DPB(config)# loop-protect
SM8TAT2DPB(config)# loop-protect shutdown-time 333
SM8TAT2DPB(config)# loop-protect transmit-time 3
SM8TAT2DPB(config)#
```

mac

MAC table entries/configuration.

SYNTAX

```
mac address-table aging-time <0,10-1000000>
```

```
mac address-table static <mac_addr> vlan <vlan_id> interface <port_type> <port_type_list>
```

Parameter

address-table	Mac Address Table
aging-time	Mac address aging time
<0,10-1000000>	Aging time in seconds, 0 disables aging
static	Static MAC address
<mac_addr>	48 bit MAC address: xx:xx:xx:xx:xx:xx
vlan	VLAN keyword
<vlan_id>	VLAN IDs 1-4095
interface	Select an interface to configure
<port_type>	Port type * or Gigabitethernet
*	All switches or All ports
Gigabitethernet	1 Gigabit Ethernet port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB(config)# mac address-table aging-time 3333
SM8TAT2DPB(config)#
```

monitor

Set monitor configuration.

SYNTAX

```
monitor destination interface <port_type> <port_type_id>
monitor source { interface <port_type> <port_type_list> | cpu } { both | rx | tx }
```

Parameter

destination	The destination port. That is the port that trafficed should be mirrored to.
interface	Interface to mirror traffic to.
source	The source port. That is the source port to be mirrored to the destination port.
interface	Mirror interface traffic.
<port_type>	1 Gigabit Ethernet port
*	All switches or all ports.
<port_type_list>	Port list in 1/1-18.
cpu	Mirror CPU traffic.
both	Setting source port to both will mirror both ingress and egress traffic.
rx	Setting source port to rx will mirror both ingress traffic.
tx	Setting source port to tx will mirror both egress traffic.
<port_type>	Port type in GigabitEthernet
<port_type_list>	Port list in 1/1-18 for GigabitEthernet

EXAMPLE

```
SM8TAT2DPB(config)# monitor destination interface GigabitEthernet 1/12
SM8TAT2DPB(config)# monitor source cpu both
SM8TAT2DPB(config)#
```


mvr

Multicast VLAN Registration configuration.

SYNTAX

```

mvr
mvr name <mvr_name> channel <profile_name>
mvr name <mvr_name> frame priority <cos_priority>
mvr name <mvr_name> frame tagged
mvr name <mvr_name> igmp-address <v_ipv4_ucast>
mvr name <mvr_name> last-member-query-interval <ipmc_lmqi>
mvr name <mvr_name> mode { dynamic | compatible }
mvr vlan <v_vlan_list> [ name <mvr_name> ]
mvr vlan <v_vlan_list> channel <profile_name>
mvr vlan <v_vlan_list> frame priority <cos_priority>
mvr vlan <v_vlan_list> frame tagged
mvr vlan <v_vlan_list> igmp-address <v_ipv4_ucast>
mvr vlan <v_vlan_list> last-member-query-interval <ipmc_lmqi>
mvr vlan <v_vlan_list> mode { dynamic | compatible }

```

Parameter

name	MVR multicast name
<word16>	MVR multicast VLAN name
channel	MVR channel configuration
<word16>	Profile name in 16 char's
frame	MVR control frame in TX
priority	Interface CoS priority
<0-7>	CoS priority ranges from 0 to 7
tagged	Tagged IGMP/MLD frames will be sent
igmp-address	MVR address configuration used in IGMP
<ipv4_ucast>	A valid IPv4 unicast address MVR multicast VLAN name
last-member-query-interval	Last Member Query Interval in tenths of seconds
<0-31744>	0 - 31744 tenths of seconds
mode	MVR mode of operation
dynamic	Dynamic MVR operation mode
compatible	Compatible MVR operation mode
vlan	MVR multicast vlan
<vlan_list>	MVR multicast VLAN list

channel	MVR channel configuration
<word16>	Profile name in 16 char's
frame	MVR control frame in TX
priority	Interface CoS priority
<0-7>	CoS priority ranges from 0 to 7
igmp-address	MVR address configuration used in IGMP
<ipv4_ucast>	A valid IPv4 unicast address
<vlan_list>	MVR multicast VLAN list
last-member-query-interval	Last Member Query Interval in tenths of seconds
<0-31744>	0 - 31744 tenths of seconds
compatible	Compatible MVR operation mode

EXAMPLE

```
SM8TAT2DPB(config)# mvr vlan 10 mode dynamic
SM8TAT2DPB(config)#
```

ntp

Configure NTP (Network Timing Protocol).

SYNTAX

```
ntp
ntp server <1-5> ip-address <hostname>
ntp server <1-5> ip-address <ipv4_ucast>
ntp server <1-5> ip-address <ipv6_ucast>
```

Parameter

server	Configure NTP server
<1-5>	index number
ip-address	ip address
<ipv4_ucast>	ipv4 address
<ipv6_ucast>	ipv6 address
<hostname>	domain name

EXAMPLE

```
SM8TAT2DPB(config)# ntp server 3 ip-address 192.168.1.1
SM8TAT2DPB(config)#
```

poe

Configure Power Over Ethernet (PoE).

SYNTAX

```

poe management mode { class-consumption | class-reserved-power | allocation-consumption |
allocation-reserved-power | lldp-consumption | lldp-reserved-power }
poe ping-check { enable | disable }

```

Parameter

management	Use management mode to configure PoE power management method.
Ping-check	Enable/Disable POE Ping Check.
Mode	PoE Power Management Mode
allocation-consumption	Max. port power determined by allocated, and power is managed according to power consumption.
allocation-reserved-power	Max. port power determined by allocated, and power is managed according to reserved power.
class-consumption	Max. port power determined by class, and power is managed according to power consumption.
class-reserved-power	Max. port power determined by class, and power is managed according to reserved power.
lldp-consumption	Max. port power determined by LLDP Media protocol, and power is managed according to power consumption.
lldp-reserved-power	Max. port power determined by LLDP Media protocol, and power is managed according to reserved power.

EXAMPLE

```

SM8TAT2DPB(config)# poe management mode allocation-consumption
SM8TAT2DPB(config)# poe management mode allocation-reserved-power
SM8TAT2DPB(config)# poe management mode class-consumption
SM8TAT2DPB(config)# poe management mode class-reserved-power
SM8TAT2DPB(config)# poe management mode lldp-consumption
SM8TAT2DPB(config)# poe management mode lldp-reserved-power
SM8TAT2DPB(config)# Poe ping-check enable
SM8TAT2DPB(config)#

```

port-security

Enable/disable and configure port security globally.

SYNTAX

port-security

port-security aging

port-security aging time <v_10_to_10000000>

Parameter

aging Time in seconds between check for activity on learned MAC addresses.

time Time in seconds between check for activity on learned MAC addresses.

<10-10000000> seconds

EXAMPLE

```
SM8TAT2DPB(config)# port-security agin time 1000
```

```
SM8TAT2DPB(config)#
```

privilege

Configure command privilege parameters.

SYNTAX

```
privilege { exec | configure | config-vlan | line | interface | if-vlan | ipmc-profile | snmps-host | stp-aggr | dhcp-pool
| rfc2544-profile } level <privilege> <cmd>
```

Parameter

config-vlan	VLAN Configuration Mode
configure	Global configuration mode
dhcp-pool	DHCP Pool Configuration Mode
exec	Exec mode
if-vlan	VLAN Interface Mode
interface	Port List Interface Mode
ipmc-profile	IPMC Profile Mode
line	Line configuration mode
rfc2544-profile	RFC2544 Profile Mode
snmps-host	SNMP Server Host Mode
stp-aggr	STP Aggregation Mode
level	Set privilege level of command
<LINE>	Initial valid words and literals of the command to modify, in 128 characters

EXAMPLE

```
SM8TAT2DPB(config)# privilege config-vlan level 10 LINE
SM8TAT2DPB(config)# privilege configure level 10 LINE
SM8TAT2DPB(config)# privilege dhcp-pool level 10 LINE
SM8TAT2DPB(config)#
```

radius-server

Configure RADIUS.

SYNTAX

```

radius-server attribute 32 <line1-255>
radius-server attribute 4 <ipv4_ucast>
radius-server attribute 95 <ipv6_ucast>
radius-server deadtime <1-1440>
radius-server host { <word1-255> | <ipv4_ucast> | <ipv6_ucast> } [ auth-port <0-65535> ] [ acct-port
<0-65535> ] [ timeout <1-1000> ] [ retransmit <1-1000> ] [ key <line1-63> ]
radius-server key <line1-63>
radius-server retransmit <1-1000>
radius-server timeout <1-1000>

```

Parameter

deadtime	Time to stop using a RADIUS server that doesn't respond
host	Specify a RADIUS server
key	Set RADIUS encryption key
retransmit	Specify the number of retries to active server
timeout	Time to wait for a RADIUS server to reply
<Minutes : 1-1440>	Time in minutes
<Host4 : ipv4_ucast>	IPv4 address
<Host6 : ipv6_ucast>	IPv6 address
<HostName : word1-255>	Hostname
acct-port	UDP port for RADIUS accounting server
auth-port	UDP port for RADIUS authentication server
key	Server specific key (overrides default)
retransmit	Specify the number of retries to active server (overrides default)
timeout	Time to wait for this RADIUS server to reply (overrides default)
<AuthPort : 0-65535>	UDP port number
<Seconds : 1-1000>	Wait time in seconds
<Key : line1-63>	The shared key
<1-1000>	Number of retries for a transaction

EXAMPLE

```

SM8TAT2DPB(config)# radius-server host device key 12
SM8TAT2DPB(config)#

```

rmon

Configure Remote Monitoring.

SYNTAX

```
rmon alarm <1-65535> <WORD> <1-2147483647> { absolute | delta } rising-threshold
<-2147483648-2147483647> [ <0-65535> ] falling-threshold <-2147483648-2147483647> [ <0-65535> ] { [ rising
| falling | both ] }
rmon alarm <1-65535> { ifInOctets | ifInUcastPkts | ifInNUcastPkts | ifInDiscards | ifInErrors | ifInUnknownProtos
| ifOutOctets | ifOutUcastPkts | ifOutNUcastPkts | ifOutDiscards | ifOutErrors } <uint> <1-2147483647> { absolute
| delta } rising-threshold <-2147483648-2147483647> [ <0-65535> ] falling-threshold
<-2147483648-2147483647> [ <0-65535> ] { [ rising | falling | both ] }
rmon event <1-65535> [ log ] [ trap <word127> ] { [ description <line127> ] }
```

Parameter

alarm	Configure an RMON alarm
event	Configure an RMON event
<1-65535>	Alarm entry ID
<WORD>	MIB object to monitor
<1-2147483647>	Sample interval
absolute	Test each sample directly
delta	Test delta between samples
rising-threshold	Configure the rising threshold
<-2147483648-2147483647>	rising threshold value
<0-65535>	Event to fire on rising threshold crossing
falling-threshold	Configure the falling threshold
<-2147483648-2147483647>	falling threshold value
rising	Trigger alarm when the first value is larger than the rising threshold
falling	Trigger alarm when the first value is less than the falling threshold
both	Trigger alarm when the first value is larger than the rising threshold or less than the falling threshold (default)
ifInOctets	The total number of octets received on the interface, including framing characters
ifInUcastPkts	The number of uni-cast packets delivered to a higher-layer protocol
ifInNUcastPkts	The number of broad-cast and multi-cast packets delivered to a higher-layer protocol
ifInDiscards	The number of inbound packets that are discarded even the packets are normal
ifInErrors	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol
ifInUnknownProtos	The number of the inbound packets that were discarded because of the unknown or

	un-support protocol
ifOutOctets	The number of octets transmitted out of the interface , including framing characters
ifOutUcastPkts	The number of uni-cast packets that request to transmit
ifOutNUcastPkts	The number of broad-cast and multi-cast packets that request to transmit
ifOutDiscards	The number of outbound packets that are discarded event the packets is normal
ifOutErrors	The The number of outbound packets that could not be transmitted because of errors
<uint>	ifIndex
<1-2147483647>	Sample interval
absolute	Test each sample directly
delta	Test delta between samples
rising-threshold	Configure the rising threshold

EXAMPLE

```
SM8TAT2DPB(config)# rmon alarm 10000 ifInErrors 10 9999 absolute rising-threshold 0
falling-threshold 0 both
SM8TAT2DPB(config)#
```


sflow

Configure Statistics flow (sFlow).

SYNTAX

```

sflow agent-ip { ipv4 <ipv4_addr> | ipv6 <ipv6_addr> }
sflow collector-address{ <ipv4_addr> | <ipv6_addr> }
sflow collector-port <1-65535>
sflow max-datagram-size [ receiver <range_list> ] <200-1468>
sflow timeout [ receiver <range_list> ] <0-2147483647>

```

Parameter

agent-ip	The agent IP address used as agent-address in UDP datagrams. Defaults to IPv4 loopback address.
ipv4	ipv4 address
ipv6	ipv6 address
<ipv4_addr>	ipv6 address
<ipv6_addr>	ipv4 address
collector-address	Collector address
collector-port	Collector UDP port
<1-65535>	Port Number
max-datagram-size	Maximum datagram size.
<200-1468>	Bytes
timeout	Receiver timeout measured in seconds. The switch decrements the timeout once per second, and as long as it is non-zero, the receiver receives samples. Once the timeout reaches 0, the receiver and all its configuration is reset to defaults.
<0-2147483647>	Number in seconds

EXAMPLE

```

SM8TAT2DPB(config)# sflow agent-ip ipv4 192.168.1.2
SM8TAT2DPB(config)# sflow collector-port 3
SM8TAT2DPB(config)# sflow max-datagram-size 333
SM8TAT2DPB(config)# sflow timeout 3333
SM8TAT2DPB(config)#

```

smtp

Set email information. The function is used to set an Alarm trap when the switch alarm then you could set the SMTP server to send you the alarm mail.

SYNTAX

```
smtp delete { server | username | sender | returnpath | mailaddress <index> }
```

```
smtp mailaddress <index> <mail_addr_name>
```

```
smtp returnpath <return_path>
```

```
smtp sender <sender_name>
```

```
smtp server <hostname>
```

```
smtp username <username> <password>
```

Parameter

delete	Delete command
mailaddress	Configure email address
returnpath	Configure email returnpath
sender	Configure email sender
server	Configure email server
username	Configure email user name

EXAMPLE

```
SM8TAT2DPB(config)# smtp mailaddress 1 BobB  
SM8TAT2DPB(config)# smtp returnpath BobRetPath  
SM8TAT2DPB(config)# smtp sender Author  
SM8TAT2DPB(config)# smtp server Engineering  
SM8TAT2DPB(config)# smtp username jeffs@transition.com Belfrey  
SM8TAT2DPB(config)#
```

system

Set the SNMP server's configuration.

SYNTAX

system contact <v_line255>

system location <v_line255>

system name <v_line255>

Parameter

- contact** Set the SNMP server's contact string
- location** Set the SNMP server's location string
- name** Set the SNMP server's system model name string
- <line255>** Maximum number of 255 character strings

EXAMPLE

```
SM8TAT2DPB(config)# system contact 222
SM8TAT2DPB(config)# system location 333
SM8TAT2DPB(config)# system name GE
SM8TAT2DPB(config)#
```

tacacs-server

Configure TACACS+.

SYNTAX

tacacs-server deadtime <minutes>

tacacs-server host <host_name> [port <port>] [timeout <seconds>] [key <key>]

tacacs-server key <key>

tacacs-server timeout <seconds>

Parameter

deadtime	Time to stop using a TACACS+ server that doesn't respond
host	Specify a TACACS+ server
key	Set TACACS+ encryption key
timeout	Time to wait for a TACACS+ server to reply
<Minutes : 1-1440>	Time in minutes (1-1440 minutes).
<Key : line1-63>	The shared key (1-63 characters).
<Seconds : 1-1000>	Wait time in seconds (1-1000 seconds)
<word1-255>	Hostname (1-255 characters)
<ipv4_ucast>	IPv4 address
<ipv6_ucast>	IPv6 address
port	TCP port for TACACS+ server
<0-65535>	TCP port number

EXAMPLE

```
SM8TAT2DPB(config)# tacacs-server deadtime 300
SM8TAT2DPB(config)# tacacs-server host 192.168.1.2
SM8TAT2DPB(config)# tacacs-server key 33
SM8TAT2DPB(config)# tacacs-server timeout 300
SM8TAT2DPB(config)# do show tacacs
Global TACACS+ Server Timeout      : 300 seconds
Global TACACS+ Server Deadtime     : 300 minutes
Global TACACS+ Server Key          : 33
TACACS+ Server #1:
  Host name   : 192.168.1.2
  Port        : 49
  Timeout     :
  Key         :
SM8TAT2DPB(config)#
```

upnp

Set UPnP's configurations. UPnP (Universal Plug and Play) allows devices to connect seamlessly and simplifies implementation of networks in the home (data sharing, communications, entertainment) and in corporate environments. **Caution:** UPnP allows clients in the local network to automatically configure the device. UpnP should only be used (enabled) if necessary and with preventive measures as it can result in high security risks for your network.

SYNTAX

```
upnp
upnp advertising-duration <66-86400>
upnp ttl <1-255>
```

Parameter

advertising-duration Set the advertising duration. The duration, carried in SSDP packets, is used to inform a control point or control points how often it or they should receive an SSDP advertisement message from this switch. If a control point does not receive any message within the duration, it will think that the switch no longer exists. Due to the unreliable nature of UDP, in the standard it is recommended that such refreshing of advertisements to be done at less than one-half of the advertising duration. In the implementation, the switch sends SSDP messages periodically at the interval one-half of the advertising duration minus 30 seconds. Valid values are 66 - 86400.

ttl Set TTL value. The TTL value is used by UPnP to send SSDP advertisement messages.

<100-86400> advertising duration

<1-255> TTL value

EXAMPLE

```
SM8TAT2DPB(config)# upnp advertising-duration 88
SM8TAT2DPB(config)# upnp ttl 25
SM8TAT2DPB(config)# end
SM8TAT2DPB# show upnp
UPnP Mode           : Disabled
UPnP TTL            : 25
UPnP Advertising Duration : 88
SM8TAT2DPB#
```

username

Establish User Name Authentication.

SYNTAX

username <username> privilege <priv> password encrypted <encry_password>

username <username> privilege <priv> password none

username <username> privilege <priv> password unencrypted <password>

Parameter

<Username : word31>	User name allows letters, numbers and underscores
privilege	Set user privilege level
<privilegeLevel : 0-15>	User privilege level
password	Specify the password for the user
encrypted	Specifies an ENCRYPTED password will follow
none	NULL password
unencrypted	Specifies an UNENCRYPTED password will follow
<Password : line31>	The UNENCRYPTED (Plain Text) user password. Any printable characters including space is accepted. Notice that you have no change to get the Plain Text password after this command. The system will always display the ENCRYPTED password.
<Password : word4-44>	The ENCRYPTED (hidden) user password. Notice the ENCRYPTED password will be decoded by system internally. You cannot directly use it as same as the Plain Text and it is not human-readable text normally.

EXAMPLE

```
SM8TAT2DPB(config)# username jefferson privilege 15 password none
SM8TAT2DPB(config)# (config)#
```

vlan

Configure VLAN parameters.

SYNTAX

```

vlan <vlan_list>
vlan ethertype s-custom-port <0x0600-0xffff>
vlan protocol { { eth2 { <etype> | arp | ip | ipx | at } } | { snap { <oui> | rfc-1042 | snap-8021h } <pid> } } | { llc
<dsap> <ssap> } } group <grp_id>

```

Parameter

<vlan_list>	ISL VLAN IDs 1-4095
ethertype	Ether type for Custom S-ports
protocol	Protocol-based VLAN commands
s-custom-port	Custom S-ports configuration
<0x0600-0xffff>	Ether type (Range: 0x0600-0xffff)
eth2	Ethernet-based VLAN commands
<0x600-0xffff>	Ether Type(Range: 0x600 - 0xFFFF)
arp	Ether Type is ARP
ip	Ether Type is IP
ipx	Ether Type is IPX
at	Ether Type is AppleTalk
snap	SNAP-based VLAN group
<0x0-0xfffff>	SNAP OUI (Range 0x000000 - 0FFFFFFF)
rfc_1042	SNAP OUI is rfc_1042
snap_8021h	SNAP OUI is 8021h
<0x0-0xffff>	PID (Range: 0x0 - 0xFFFF)
llc	LLC-based VLAN group
<0x0-0xff>	DSAP (Range: 0x00 - 0xFF)
<0x0-0xff>	SSAP (Range: 0x00 - 0xFF)
group	Protocol-based VLAN group commands
<word16>	Group Name (Range: 1 - 16 characters)

EXAMPLE

```

SM8TAT2DPB(config)# vlan protocol eth2 ?
  <0x600-0xffff>  Ether Type(Range: 0x600 - 0xFFFF)
  arp             Ether Type is ARP
  at             Ether Type is AppleTalk

```

```
ip          Ether Type is IP
ipx         Ether Type is IPX
SM8TAT2DPB(config)# vlan protocol eth2 at ?
group      Protocol-based VLAN group commands
SM8TAT2DPB(config)# vlan protocol eth2 at group ?
<word16>   Group Name (Range: 1 - 16 characters)
SM8TAT2DPB(config)# vlan protocol eth2 at group ADMIN ?
<cr>
SM8TAT2DPB(config)# vlan protocol eth2 at group ADMIN
SM8TAT2DPB(config)#
SM8TAT2DPB(config)# vlan ethertype s-custom-port 0x1111
SM8TAT2DPB(config)# vlan protocol eth2 arp group 123
SM8TAT2DPB(config)#
```


voice

Configure Voice appliance attributes.

SYNTAX

```
voice vlan
voice vlan aging-time <aging_time>
voice vlan class { <traffic_class> | low | normal | medium | high }
voice vlan oui <oui> [ description <description> ]
voice vlan vid <vid>
```

Parameter

advertising-duration	Set advertising duration
vlan	Vlan for voice traffic
aging-time	Set secure learning aging time
<10-10000000>	Aging time, 10-10000000 seconds
class	Set traffic class
<0-7>	Traffic class value
oui	OUI configuration
<oui>	OUI value
description	Set description for the OUI
<line32>	Description line
vid	Set VLAN ID
<vlan_id>	VLAN ID, 1-4095

EXAMPLE

```
SM8TAT2DPB(config)# voice vlan aging-time 3333
SM8TAT2DPB(config)# voice vlan class 7
SM8TAT2DPB(config)# voice vlan vid 3333
SM8TAT2DPB(config)#
```

web

Configure Web privilege levels.

SYNTAX

```
web privilege group <CWORD> level { [ cro <0-15> ] [ crw <0-15> ] [ sro <0-15> ] [ srw <0-15> ] }
```

Parameter

privilege	Web privilege
group	Web privilege group
CWORD	Valid words are 'ACTIVATE' 'Aggregation' 'DHCP' 'DMS_client' 'DMS_server' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'GARP' 'GVRP' 'Green_Ethernet' 'IP2' 'IPMC_Snooping' 'IP_Phone_Auto_Provisioning' 'LACP' 'LLDP' 'Loop_Protect' 'MAC_Table' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'POE' 'Ports' 'Private_VLANs' 'QoS' 'RPC' 'SMTP' 'Security' 'Spanning_Tree' 'System' 'TS_client' 'TS_server' 'Timer' 'Trap_Event' 'Trouble_Shooting' 'UPnP' 'VCL' 'VLANs' 'VTUN' 'Voice_VLAN' 'XXRP' 'cloud_management' 'sFlow'
level	Web privilege group level (0-15)
cro	Configuration Read-only level
crw	Configuration Read-write level
sro	Status/Statistics Read-only level
srw	Status/Statistics Read-write level

EXAMPLE

```
SM8TAT2DPB(config)# web privilege group Ports level crw 15 ?

  cro    Configuration Read-only level
  sro    Status/Statistics Read-only level
  srw    Status/Statistics Read-write level
  <cr>

SM8TAT2DPB(config)# web privilege group Ports level crw 15

SM8TAT2DPB(config)#
```

access-list**Table : configure – access-list Commands**

Command	Function
<code>ace</code>	Access list entry
<code>rate-limiter</code>	Rate limiter

rate-limiter

Configure Rate limiter.

SYNTAX

```
access-list rate-limiter [ <1~16> ] { pps <0-3276700> | 100kbps <0-10000> }
```

Parameter

100kbps	100k bits per second
<RateLimiterList : 1~16>	Rate limiter ID
<PpsRate : 0-3276700>	Rate value
<0-10000>	Rate value

EXAMPLE

```
SM8TAT2DPB(config)# access-list rate-limiter 100kbps 111
SM8TAT2DPB(config)#
```

ace

Configure Access list entry.

SYNTAX

```

access-list ace{ update<1-256> | <1-256> } [action< deny | filter | permit >]
access-list ace{ update<1-256> | <1-256> } [dmac-type < any | broadcast | multicast | unicast >]
access-list ace{ update<1-256> | <1-256> } [frametype < any | arp | etype | ipv4 | ipv4-icmp | ipv4-tcp | ipv4-udp |
ipv6 | ipv6-icmp | ipv6-tcp | ipv6-udp >]
access-list ace{ update<1-256> | <1-256> } [ ingress] [ ingress interface { <port_type> <port_type_id> |
<port_type> <port_type_list> } | any } ]
access-list ace{ update<1-256> | <1-256> } [ logging [ disable ] ]
access-list ace{ update<1-256> | <1-256> } [ lookup [ disable ] ]
access-list ace{ update<1-256> | <1-256> } [ mirror [ disable ] ]
access-list ace{ update<1-256> | <1-256> } [ next { <1-256> | last } ]
access-list ace{ update<1-256> | <1-256> } [ policy <0-255> [ policy-bitmask <0x0-0xFF> ] ]
access-list ace{ update<1-256> | <1-256> } [ rate-limiter { <1-16> | disable } ]
access-list ace{ update<1-256> | <1-256> } [redirect | interface { <port_type> <port_type_id> | <port_type>
<port_type_list> } | disable } ]
access-list ace{ update<1-256> | <1-256> } [shutdown]
access-list ace{ update<1-256> | <1-256> } [ tag { tagged | untagged | any } ]
access-list ace{ update<1-256> | <1-256> } [ tag-priority { <0-7> | any } ]
access-list ace{ update<1-256> | <1-256> } [ vid { <1-4095> | any } ]

```

Parameter

action	Access list action
dmac-type	The type of destination MAC address
frametype	Frame type
ingress	Ingress
logging	Logging frame information
lookup	Second lookup
mirror	Mirror frame to destination mirror port
next	insert the current ACE before the next ACE ID
policy	Policy
rate-limiter	Rate limiter
redirect	Redirect frame to specific port
shutdown	Shutdown incoming port
tag	Tag

tag-priority	Tag priority
vid	VID field
deny	Deny
filter	Filter
permit	Permit
any	Don't-care the type of destination MAC address
broadcast	Broadcast destination MAC address
multicast	Multicast destination MAC address
unicast	Unicast destination MAC address
any	Don't-care the frame type
arp	Frame type of ARP
etype	Frame type of etype
ipv4	Frame type of IPv4
ipv4-icmp	Frame type of IPv4 ICMP
ipv4-tcp	Frame type of IPv4 TCP
ipv4-udp	Frame type of IPv4 TCP
ipv6	Frame type of IPv4
ipv6-icmp	Frame type of IPv6 ICMP
ipv6-tcp	Frame type of IPv6 TCP
ipv6-udp	Frame type of IPv6 UDP
interface	Select an interface to configure
<port_type>	Gigabitethernet
*	All switches or All ports
Gigabitethernet	1 Gigabit Ethernet port
<port_type_id>	Port ID in the format of switch-no/port-no ex, 1/1-18 for Gigabitethernet
<port_type>	* or Gigabitethernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18
any	Don't-care the ingress interface
<0-255>	Policy ID
policy-bitmask	The bitmask for policy ID
<0x0-0xFF>	The value of policy bitmask
<1-4095>	The value of VID field
<0-7>	The value of tag priority

EXAMPLE

```
SM8TAT2DPB(config)# access-list ace 10 action deny
SM8TAT2DPB(config)# access-list ace ?
    <AceId : 1-256>    ACE ID
    update            Update an existing ACE
SM8TAT2DPB(config)# access-list rate-limiter ?
    100kbps          100k bits per second
    <RateLimiterList : 1~16>    Rate limiter ID
    pps             Packets per second
SM8TAT2DPB(config)#
```

3-3 no

Negate a command or set its defaults.

Table : configure – no Commands

Command	Function
aaa	Authentication, Authorization and Accounting
access	Access management
access-list	Access list
aggregation	Aggregation mode
banner	Define a login banner
clock	Configure time-of-day clock
dms	Disable DMS Master
dot1x	IEEE Standard for port-based Network Access Control
enable	Modify enable password parameters
green-ethernet	Green ethernet (Power reduction)
gvrp	Enable GVRP feature
hostname	Set system's network name
interface	none
ip	Internet Protocol
ipmc	IPv4/IPv6 multicast configuration
ipv6	IPv6 configuration commands
lacp	LACP settings
lldp	LLDP configurations.
logging	Syslog
loop-protect	Loop protection configuration
mac	MAC table entries/configuration
monitor	Set monitor configuration.
mvr	Multicast VLAN Registration configuration
ntp	Configure NTP
poe	Power Over Ethernet
port-security	Enable/disable port security globally.
privilege	Command privilege parameters
qos	Quality of Service
radius-server	Configure RADIUS
rmon	Remote Monitoring

sflow	Statistics flow.
snmp-server	Enable SNMP server
spanning-tree	STP Bridge
system	Set the SNMP server's configurations
tacacs-server	Configure TACACS+
upnp	Set UPnP's configurations
username	Establish User Name Authentication
vlan	Vlan commands
voice	Voice appliance attributes
web	Web

aaa

Negate Authentication, Authorization and Accounting

SYNTAX

```
no aaa authentication login { console | telnet | ssh | http }
```

Parameter

authentication	Authentication
login	Login
console	Disable Console
http	Disable HTTP
ssh	Disable SSH
telnet	Disable Telnet

EXAMPLE

```
SM8TAT2DPB(config)# no aaa authentication login ssh
SM8TAT2DPB(config)#
```


access

Negate Access management

SYNTAX

```
no access management [<1~16>]
```

```
no access management
```

Parameter

management Access management configuration

<1~16> ID of access management entry

EXAMPLE

```
SM8TAT2DPB(config)# no access management
SM8TAT2DPB(config)#
```

access-list

Negate Access list.

SYNTAX

```
no access-list ace <1~256>
```

Parameter

ace Access list entry

<AceId : 1-256> ACE ID

EXAMPLE

```
SM8TAT2DPB(config)# no access-list ace 1
SM8TAT2DPB(config)#
```

aggregation

Negate Aggregation mode.

SYNTAX

```
no aggregation mode
```

Parameter

mode Traffic distribution mode

EXAMPLE

```
SM8TAT2DPB(config)# no aggregation mode
SM8TAT2DPB(config)#
```

banner

Define a login banner

SYNTAX

no banner [motd]

no banner exec

no banner login

Parameter

exec Set EXEC process creation banner

login Set login banner

motd Set Message of the Day banner

EXAMPLE

```
SM8TAT2DPB(config)# no banner login
SM8TAT2DPB(config)#
```

clock

Configure time-of-day clock

SYNTAX

no clock summer-time

no clock timezone

Parameter

summer-time Configure summer (daylight savings) time

timezone Configure time zone

EXAMPLE

```
SM8TAT2DPB(config)# no clock summer-time
SM8TAT2DPB(config)# no clock timezone
SM8TAT2DPB(config)#
```

dot1x

IEEE Standard for port-based Network Access Control

SYNTAX

```

no dot1x authentication timer inactivity
no dot1x authentication timer re-authenticate
no dot1x feature { [ guest-vlan ] [ radius-qos ] [ radius-vlan ] }
no dot1x guest-vlan [supplicant]
no dot1x max-reauth-req
no dot1x re-authentication
no dot1x system-auth-control
no dot1x timeout quiet-period
no dot1x timeout tx-period

```

Parameter

authentication	Authentication
feature	Globally enables/disables a dot1x feature functionality
guest-vlan	Guest VLAN
max-reauth-req	The number of time a Request Identity EAPOL frame is sent without response before considering entering the Guest VLAN.
re-authentication	Set Re-authentication state
system-auth-control	Set the global NAS state
timeout	timeout
timer	timer
inactivity	Time in seconds between check for activity on successfully authenticated MAC addresses.
re-authenticate	The period between re-authentication attempts in seconds
guest-vlan	Globally enables/disables state of guest-vlan
radius-qos	Globally enables/disables state of RADIUS-assigned QoS.
radius-vlan	Globally enables/disables state of RADIUS-assigned VLAN.
supplicant	The switch remembers if an EAPOL frame has been received on the port for the life-time of the port. Once the switch considers whether to enter the Guest VLAN, it will first check if this option is enabled or disabled. If disabled (unchecked; default), the switch will only enter the Guest VLAN if an EAPOL frame has not been received on the port for the life-time of the port. If enabled (checked), the switch will consider

entering the Guest VLAN even if an EAPOL frame has been received on the port for the life-time of the port.

quiet-period Time in seconds before a MAC-address that failed authentication gets a new authentication chance.

tx-period the time between EAPOL retransmissions.

EXAMPLE

```
SM8TAT2DPB(config)# no dot1x authentication timer inactivity
SM8TAT2DPB(config)# no dot1x feature guest-vlan radius-qos radius-vlan
SM8TAT2DPB(config)# no dot1x guest-vlan supplicant
SM8TAT2DPB(config)# no dot1x max-reauth-req
SM8TAT2DPB(config)# no dot1x re-authentication
SM8TAT2DPB(config)# no dot1x system-auth-control
SM8TAT2DPB(config)# no dot1x timeout tx-period
SM8TAT2DPB(config)#
```

enable

Modify enable password parameters

SYNTAX

no enable password [level <1-15>]

no enable secret [0|5 { level <1-15> }]

Parameter

password Assign the privileged level clear password

secret Assign the privileged level secret

0 Specifies an UNENCRYPTED password will follow

5 Specifies an ENCRYPTED password will follow

level Set exec level password

<1-15> Level number

EXAMPLE

```
SM8TAT2DPB(config)# no enable secret level 15
SM8TAT2DPB(config)# no enable password level 15
SM8TAT2DPB(config)#
```

gvrp

Negate GVRP feature.

SYNTAX

gvrp

gvrp max-vlans <maxvlans>

gvrp time { [join-time <jointime>] [leave-time <leavetime>] [leave-all-time <leavealltime>] }*1

Parameter

max-vlans	Number of simultaneously VLANs that GVRP can control
time	Config GARP protocol timer parameters. IEEE 802.1D-2004, clause 12.11.
join-time	Set GARP protocol parameter JoinTime. See IEEE 802.1D-2004, clause 12.11
leave-all-time	Set GARP protocol parameter LeaveAllTime. See IEEE 802.1D-2004, clause 12.11
leave-time	Set GARP protocol parameter LeaveTime. See IEEE 802.1D-2004, clause 12.11

EXAMPLE

```
SM8TAT2DPB(config)#no gvrp max-vlans 1
SM8TAT2DPB(config)#no gvrp time join-time 10
SM8TAT2DPB(config)#no gvrp time leave-all-time 2000
SM8TAT2DPB(config)#no gvrp time leave-time 70
SM8TAT2DPB(config)#
```

hostname

Set system's network name.

SYNTAX

no hostname

EXAMPLE

```
SM8TAT2DPB(config)# no hostname
SM8TAT2DPB(config)#
```

interface

Negate Interface VLAN feature.

SYNTAX

```
no interface vlan < vlan_list >
```

Parameter

vlan	Vlan interface configurations
<vlan_list>	Vlan list

EXAMPLE

```
SM8TAT2DPB(config)# no interface vlan 10
SM8TAT2DPB(config)#
```

Ip

Set system's network name.

SYNTAX

```

no ip arp inspection
no ip arp inspection entry interface GigabitEthernet <port_type_id> <vlan_id> <mac_ucast> <ipv4_ucast>
no ip arp inspection vlan <vlan_list> [logging]
no dhcp excluded-address [<ip_address> [<ip_address>]]
no dhcp pool <WORD>
no ip dhcp relay [information {option| policy }]
no ip dhcp server
no ip dhcp snooping
no ip dns proxy
no ip helper-address
no ip http secure-redirect
no ip http secure-server
no ip igmp host-proxy [ leave-proxy ]
no ip igmp snooping
no ip igmp snooping vlan [ <vlan_list> ]
no ip igmp ssm-range
no ip igmp unknown-flooding
no ip name-server
no ip route <ipv4_addr> <ipv4_netmask> <ipv4_addr>
no ip routing
no ip source binding interface GigabitEthernet <port_type_id> <vlan_id>
<ipv4_ucast>{ <ipv4_netmask>|<mac_ucast>}
no ip ssh
no ip verify source

```

Parameter

arp	Address Resolution Protocol
inspection	ARP inspection
entry	arp inspection entry
interface	arp inspection entry interface config
GigabitEthernet	1 Gigabit Ethernet Port
<port_type_id>	Port ID in the format of switch-no/port-no, 1/1-18 for Gigabitetherne

<vlan_id>	Select a VLAN id to configure
<mac_ucast>	Select a MAC address to configure
<ipv4_ucast>	Select an IP Address to configure
vlan	arp inspection vlan setting
<vlan_list>	arp inspection vlan list
logging	ARP inspection vlan logging mode config
dhcp	Dynamic Host Configuration Protocol
excluded-address	Prevent DHCP from assigning certain address
<ip_address>	Low IP address and High IP address
<WORD>	Pool name in 32 characters
pool	Configure DHCP address pools
relay	DHCP relay agent configuration
server	enable DHCP server
snoping	DHCP snooping
information	DHCP information option(Option 82)
option	DHCP option
policy	Policy for handling the receiving DHCP packet already include the information option
snooping	DHCP snooping
dns	Domain Name System
proxy	DNS proxy service
helper-address	None.
http	Hypertext Transfer Protocol
secure-redirect	Secure HTTP web redirection
secure-server	Secure HTTP web server
igmp	Internet Group Management Protocol
host-proxy	IGMP proxy configuration
leave-proxy	IGMP proxy for leave configuration
snooping	Snooping IGMP
vlan	IGMP VLAN
<vlan_list>	VLAN identifier(s): VID
ssm-range	IPv4 address range of Source Specific Multicast
unknown-flooding	Flooding unregistered IPv4 multicast traffic
name-server	Domain Name System
Route	none
<ipv4_addr>	Network
<ipv4_netmask>	Netmask

<ipv4_gateway>	Gateway
routing	Disable routing for IPv4 and IPv6
source	source command
binding	ip source binding
interface	ip source binding entry interface config
Gigabitethernet	1 Gigabitethernet port
<port_type_id>	Port ID in the format of switch-no/port-no, ex., 1/1-18 for Gigabitethernet
<vlan_id>	Select a VLAN id to configure
<ipv4_ucast>	Select an IP Address to configure
<ipv4_netmask>	Select a subnet mask to configure
<mac_ucast>	Select a MAC address to configure
ssh	Secure Shell
verify	verify command
source	verify source

EXAMPLE

```
SM8TAT2DPB(config)# no ip arp inspection vlan 3 logging
SM8TAT2DPB(config)# no ip dhcp relay information option
SM8TAT2DPB(config)# no ip dns proxy
SM8TAT2DPB(config)# no ip helper-address
SM8TAT2DPB(config)# no ip http secure-redirect
SM8TAT2DPB(config)# no ip igmp snooping
SM8TAT2DPB(config)# no ip name-server
SM8TAT2DPB(config)# no ip routing
SM8TAT2DPB(config)# no ip ssh
SM8TAT2DPB(config)# no ip verify source
SM8TAT2DPB(config)#
```

ipmc

Negate IPv4/IPv6 multicast configuration

SYNTAX

no ipmc profile <Profilename : word16>

no ipmc range <Entryname : word16>

Parameter

profile IPMC profile configuration

<Profilename : word16> Profile name in 16 char's

range A range of IPv4/IPv6 multicast addresses for the profile

<Entryname : word16> Range entry name in 16 characters

EXAMPLE

```
SM8TAT2DPB(config)# no ipmc ?
  profile    IPMC profile configuration
  range      A range of IPv4/IPv6 multicast addresses for the profile
SM8TAT2DPB(config)# no ipmc profile ?
  <ProfileName : word16>  Profile name in 16 char's
  <cr>
SM8TAT2DPB(config)# no ipmc profile
SM8TAT2DPB(config)#
```

ipv6

Negate IPv6 configuration commands

SYNTAX

```

no ipv6 mld host-proxy [ leave-proxy ]
no ipv6 mld snooping
no ipv6 mld snooping [vlan <vlan_list> ]
no ipv6 mld ssm-range
no ipv6 mld unknown-flooding
no ipv6 route <ipv6_subnet> { <ipv6_ucast> | interface vlan <vlan_id> <ipv6_linklocal> }

```

Parameter

mld	Multicasat Listener Discovery
host-proxy	MLD proxy configuration
leave-proxy	MLD proxy for leave configuration
snooping	Snooping MLD
vlan	MLD VLAN
<vlan_list>	VLAN identifier(s): VID
ssm-range	IPv6 address range of Source Specific Multicast
unknown-flooding	Flooding unregistered IPv6 multicast traffic
route	Configure static routes
<ipv6_subnet>	IPv6 prefix x:x::y/z
<ipv6_ucast>	IPv6 unicast address (except link-local address) of next-hop
interface	Select an interface to configure
vlan	VLAN Interface
<vlan_id>	VLAN identifier(s): VID
<ipv6_linklocal>	IPv6 link-local address of next-hop

EXAMPLE

```

SM8TAT2DPB(config)# no ipv6 mld snooping ?
    vlan      MLD VLAN
    <cr>
SM8TAT2DPB(config)# no ipv6 mld snooping
SM8TAT2DPB(config)#

```

lacp

Negate LACP settings

SYNTAX

```
no lacp system-priority <1-65535>
```

Parameter

system-priority	System priority
<1-65535>	Priority value, lower means higher priority

EXAMPLE

```
SM8TAT2DPB(config)# no lacp system-priority 10000
SM8TAT2DPB(config)# no lacp ?
    system-priority    System priority
SM8TAT2DPB(config)# no lacp
system-priority
SM8TAT2DPB(config)# no lacp system-priority ?
    <1-65535>    Priority value, lower means higher priority
SM8TAT2DPB(config)#
```

Ildp

Negate LLDP configurations.

SYNTAX

```

no lldp holdtime
no lldp med datum
no lldp med fast
no lldp med location-tlv altitude
no lldp med location-tlv civic-addr { country | state | county | city | district | block | street | leading-street-direction |
trailing-street-suffix | street-suffix | house-no | house-no-suffix | landmark | additional-info | name | zip-code |
building | apartment | floor | room-number | place-type | postal-community-name | p-o-box | additional-code }
no lldp med location-tlv elin-addr
no lldp med location-tlv latitude
no lldp med location-tlv longitude
no lldp med media-vlan-policy <0~31>
no lldp reinit
no lldp timer
no lldp transmission-delay

```

Parameter

holdtime	Sets LLDP hold time (The neighbor switch will discarded the LLDP information after "hold time" multiplied with "timer" seconds).
med	Media Endpoint Discovery.
reinit	Sets LLDP reinitialization delay.
timer	Sets LLDP TX interval (The time between each LLDP frame transmitted in seconds).
tlv-select	Which optional TLVs to transmit.
transmission-delay	Sets LLDP transmission-delay. LLDP transmission delay (the amount of time that the transmission of LLDP frames will be delayed after LLDP configuration has changed) in seconds.)
datum	Set datum to default value.
fast	Set fast repeat count to default value.
location-tlv	LLDP-MED Location Type Length Value parameter.
media-vlan-policy	Use the media-vlan-policy to create a policy, which can be assigned to an interface.
altitude	Setting altitude to default.
civic-addr	Civic address information and postal information
elin-addr	Set elin address to default value.

latitude	Setting Latitude parameter to default.
longitude	Setting longitude to default.
additional-code	Additional code - Example: 1320300003.
additional-info	Additional location info - Example: South Wing.
apartment	Unit (Apartment, suite) - Example: Apt 42.
block	Neighbourhood, block.
building	Building (structure) - Example: Low Library.
city	City, township, shi (Japan) - Example: Copenhagen.
country	The two-letter ISO 3166 country code in capital ASCII letters - Eg: DK, DE or US.
county	County, parish, gun (Japan), district.
district	City division, borough, city district, ward, chou (Japan).
floor	Floor - Example: 4.
house-no	House number - Example: 21.
house-no-suffix	House number suffix - Example: A, 1/2.
landmark	Landmark or vanity address - Example: Columbia University.
leading-street-direction	Leading street direction - Example: N.
name	Name (residence and office occupant) - Example: Flemming Jahn.
p-o-box	Post office box (P.O. BOX) - Example: 12345.
place-type	Place type - Example: Office.
postal-community-name	Postal community name - Example: Leonia.
room-number	Room number - Example: 450F.
state	National subdivisions (state, canton, region, province, prefecture).
street	Street - Example: Poppelvej.
street-suffix	Street suffix - Example: Ave, Platz.
trailing-street-suffix	Trailing street suffix - Example: SW.
zip-code	Postal/zip code - Example: 2791.
<0~31>	Policy to delete.

EXAMPLE

```
SM8TAT2DPB(config)# no lldp ?
  holdtime          Sets LLDP hold time (The neighbor switch will
                    discarded the LLDP information after "hold time"
                    multiplied with "timer" seconds ).
  med               Media Endpoint Discovery.
  reinit           Sets LLDP reinitialization delay.
  timer            Sets LLDP TX interval (The time between each LLDP
                    frame transmitted in seconds).
```

```
transmission-delay    Sets LLDP transmission-delay.  LLDP transmission delay
                      (the amount of time that the transmission of LLDP
                      frames will be delayed after LLDP configuration has
                      changed) in seconds.)
```

```
SM8TAT2DPB(config)# no lldp holdtime
```

```
SM8TAT2DPB(config)#
```

logging

Negate Syslog.

SYNTAX

no logging host

no logging on

Parameter

host host

on Enable syslog server

EXAMPLE

```
SM8TAT2DPB(config)# no logging ?
    host      host
    on        Enable syslog server
SM8TAT2DPB(config)# no logging host
SM8TAT2DPB(config)# no logging on
SM8TAT2DPB(config)#
```

loop-protect

Loop protection configuration

SYNTAX

no loop-protect

no loop-protect shutdown-time

no loop-protect transmit-time

Parameter

shutdown-time Loop protection shutdown time interval

transmit-time Loop protection transmit time interval

EXAMPLE

```
SM8TAT2DPB(config)# no loop-protect ?
    shutdown-time  Loop protection shutdown time interval
    transmit-time  Loop protection transmit time interval
    <cr>
SM8TAT2DPB(config)# no loop-protect shutdown-time
SM8TAT2DPB(config)# no loop-protect transmit-time
SM8TAT2DPB(config)#
```


mac

Negate MAC table entries/configuration

SYNTAX

no mac address-table aging-time [<0,10-1000000>]

no mac address-table static <mac_addr> vlan <vlan_id> interface {*|Gigabitethernet [<port_type_list>]}

Parameter

address-table	Mac table entries configuration/table
aging-time	Mac address aging time
<0,10-1000000>	Aging time in seconds, 0 disables aging
static	Static MAC address
<mac_addr>	48 bit MAC address: xx:xx:xx:xx:xx:xx
vlan	VLAN keyword
<vlan_id>	VLAN IDs 1-4095
interface	Select an interface to configure
Gigabitethernet	1 Gigabit Ethernet port
<port_type_list>	Port list in 1/1-18 for Gigaethernet

EXAMPLE

```
SM8TAT2DPB(config)# no mac address-table ?
    aging-time    Mac address aging time
    static        Static MAC address

SM8TAT2DPB(config)# no mac address-table aging-time ?
    <0,10-1000000> Aging time in seconds, 0 disables aging
    <cr>

SM8TAT2DPB(config)# no mac address-table static ?
    <mac_addr>    48 bit MAC address: xx:xx:xx:xx:xx:xx

SM8TAT2DPB(config)# no mac address-table aging-time 10000
SM8TAT2DPB(config)#
```

monitor

Set monitor configuration.

SYNTAX

no monitor destination

no monitor source { interface Gigabitethernet <port_type_list> | cpu}

Parameter

source The source port(s). That is the ports to be mirrored to the destination port.

cpu Mirror CPU traffic.

interface Mirror Interface traffic.

Gigabitethernet 1 Gigabit Ethernet Port

<port_type_list> Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB(config)# no monitor ?
  destination
  source        The source port(s). That is the ports to be mirrored to the
                 destination port.
SM8TAT2DPB(config)# no monitor destination ?
  <cr>
SM8TAT2DPB(config)# no monitor destination
SM8TAT2DPB(config)# no monitor source ?
  cpu           Mirror CPU traffic.
  interface     Mirror Interface traffic.
SM8TAT2DPB(config)# no monitor source
```

mvr

Negate Multicast VLAN Registration configuration.

SYNTAX

```

no mvr
no mvr name <word16> channel
no mvr name <word16> frame priority
no mvr name <word16> frame tagged
no mvr name <word16> igmp-address
no mvr name <word16> last-member-query-interval
no mvr name <word16> mode
no mvr vlan <vlan_list>
no mvr vlan <vlan_list> channel
no mvr vlan <vlan_list> frame priority
no mvr vlan <vlan_list> frame tagged
no mvr vlan <vlan_list> igmp-address
no mvr vlan <vlan_list> last-member-query-interval
no mvr vlan <vlan_list> mode [{channel | frame | igmp-address | last-member-query-interval}]

```

Parameter

name	MVR multicast name
<word16>	MVR multicast VLAN name
channel	MVR channel configuration
frame	MVR control frame in TX
priority	Interface CoS priority
tagged	Tagged IGMP/MLD frames will be sent
igmp-address	MVR address configuration used in IGMP
last-member-query-interval	Last Member Query Interval in tenths of seconds
mode	MVR mode of operation
vlan	MVR multicast vlan
<vlan_list>	MVR multicast VLAN list

EXAMPLE

```

SM8TAT2DPB(config)# no mvr vlan 12 mode
SM8TAT2DPB(config)#

```

ntp

Negate NTP configurations.

SYNTAX

no ntp
no ntp server <1-5>

Parameter

server Configure NTP server
<1-5> index number

EXAMPLE

```
SM8TAT2DPB(config)# no ntp ?
  automatic   Configure Automatic
  server       Configure NTP server
  <cr>
SM8TAT2DPB(config)# no ntp server 2
SM8TAT2DPB(config)#
```

port-security

Enable/disable port security globally.

SYNTAX

no port-security
no port-security aging
no port-security aging time

Parameter

aging Enable/disable port security aging.
time Time in seconds between check for activity on learned MAC addresses.

EXAMPLE

```
SM8TAT2DPB(config)# no port-security aging time
SM8TAT2DPB(config)#
```

radius-server

Negate RADIUS config.

SYNTAX

```
no radius-server attribute {32 | 4 | 95}
no radius-server deadtime
no radius-server host { <word1-255> | <ipv4_ucast> | <ipv6_ucast> } [ auth-port <0-65535> ] [ acct-port
<0-65535> ]
no radius-server key
no radius-server retransmit
no radius-server timeout
```

Parameter**Attribute**

deadtime	Time to stop using a RADIUS server that doesn't respond
host	Specify a RADIUS server
key	Set RADIUS encryption key
retransmit	Specify the number of retries to active server
timeout	Time to wait for a RADIUS server to reply

EXAMPLE

```
SM8TAT2DPB(config)# no radius-server attribute 4
SM8TAT2DPB(config)# no radius-server deadtime
SM8TAT2DPB(config)# no radius-server host ?
    <HostName : word1-255>      Hostname or IP address
SM8TAT2DPB(config)# no radius-server host ned
Error: Host not found!
SM8TAT2DPB(config)# no radius-server key
SM8TAT2DPB(config)# no radius-server retransmit ?
    <cr>
SM8TAT2DPB(config)# no radius-server retransmit
SM8TAT2DPB(config)# no radius-server timeout ?
    <cr>
SM8TAT2DPB(config)# no radius-server timeout
SM8TAT2DPB(config)#
```

rmon

Negate Remote Monitoring.

SYNTAX

no rmon alarm <alarm : 1-65535>

no rmon event<event : 1-65535>

Parameter

alarm Configure an RMON alarm

event Configure an RMON event

<alarm : 1-65535> Alarm entry ID

<event: 1-65535> Event entry ID

EXAMPLE

```
SM8TAT2DPB(config)# no rmon ?
  alarm    Configure an RMON alarm
  event    Configure an RMON event
SM8TAT2DPB(config)# no rmon alarm ?
  <1-65535> Alarm entry ID
SM8TAT2DPB(config)# no rmon event ?
  <1-65535> Event entry ID
SM8TAT2DPB(config)# no rmon event 1
% Fail to delete event entry
SM8TAT2DPB(config)#
```

sflow

Negate Statistics flow.

SYNTAX

no sflow agent-ip
no sflow collector-address
no sflow collector-port
no sflow max-datagram-size
no sflow timeout

Parameter

agent-ip	Sets the agent IP address used as agent-address in UDP datagrams to 127.0.0.1.
collector-address	Collector address
collector-port	Collector UDP port
max-datagram-size	Maximum datagram size.
timeout	Receiver timeout measured in seconds. The switch decrements the timeout once per second, and as long as it is non-zero, the receiver receives samples. Once the timeout reaches 0, the receiver and all its configuration is reset to defaults.

EXAMPLE

```
SM8TAT2DPB(config)# no sflow agent-ip
SM8TAT2DPB(config)# no sflow collector-address
SM8TAT2DPB(config)# no sflow collector-port
SM8TAT2DPB(config)# no sflow max-datagram-size
SM8TAT2DPB(config)# no sflow timeout
SM8TAT2DPB(config)#
```

snmp-server

Negate SNMP server.

SYNTAX

```

no snmp-server
no snmp-server access <Groupname : word32> model { v1 | v2c | v3 | any } level { auth | noauth | priv }
no snmp-server community v2c
no snmp-server community v3 <Community : word127>
no snmp-server contact
no snmp-server engined-id local
no snmp-server host <Conf : word32>
no snmp-server location
no snmp-server security-to-group model { v1 | v2c | v3 } name <Securityname : word32>
no snmp-server trap
no snmp-server user <Username : word32> engine-id <Engineid : word10-32>
no snmp-server version
no snmp-server view <Viewname : word32> <Oidsubtree : word255>

```

Parameter

access	access configuration
<Groupname : word32>	group name
model	security model
v1	v1 security model
v2c	v2c security model
v3	v3 security model
any	any security model
level	security level
auth	authNoPriv Security Level
noauth	noAuthNoPriv Security Level
priv	authPriv Security Level
community	Set the SNMP community
contact	Clear the SNMP server's contact string
engined-id	Set SNMP engine ID
host	Set SNMP host's configurations
location	Clear the SNMP server's location string
security-to-group	security-to-group configuration

trap	Set trap's configurations
user	user who can access SNMP server
version	Set the SNMP server's version
view	MIB view configuration
<Community : word127>	
local	Set SNMP local engine ID
<ConfName : word32> Name of the host configuration	
model	security model
v1	v1 security model
v2c	v2c security model
v3	v3 security model
name	security user
<SecurityName : word32> security user name	
<Username : word32> name of user	
engine-id	engine ID
<Engineid : word10-32> engine ID octet string	
<Viewname : word32> MIB view name	
<Oidsubtree : word255> MIB view OID	

EXAMPLE

```

SM8TAT2DPB(config)# no snmp-server ?
    access          access configuration
    community       Set the SNMP community
    contact         Clear the SNMP server's contact string
    engined-id      Set SNMP engine ID
    host            Set SNMP host's configurations
    location        Clear the SNMP server's location string
    security-to-group security-to-group configuration
    trap           Set trap's configurations
    user            user who can access SNMP server
    version         Set the SNMP server's version
    view           MIB view configuration
    <cr>
SM8TAT2DPB(config)# no snmp-server access 333 model any level auth
SM8TAT2DPB(config)# no snmp-server community v2c
SM8TAT2DPB(config)# no snmp-server engined-id local
SM8TAT2DPB(config)# no snmp-server host 333

```

```
SM8TAT2DPB(config)# no snmp-server location
SM8TAT2DPB(config)# no snmp-server security-to-group model v2c name 132
SM8TAT2DPB(config)# no snmp-server trap
SM8TAT2DPB(config)# no snmp-server version
SM8TAT2DPB(config)#
```

spanning-tree

Negate STP Bridge.

SYNTAX

no spanning-tree edge bpd-filter
no spanning-tree edge bpd-guard
no spanning-tree mode
no spanning-tree mst <instance> priority
no spanning-tree mst <instance> vlan
no spanning-tree mst forward-time
no spanning-tree mst max-age
no spanning-tree mst max-hops
no spanning-tree mst name
no spanning-tree recovery interval
no spanning-tree transmit hold-count

Parameter

edge	Edge ports
mode	STP protocol mode
mst	STP bridge instance
recovery	The error recovery timeout
transmit	BPDUs to transmit
bpd-filter	Enable BPDU filter (stop BPDU tx/rx)
bpd-guard	Enable BPDU guard
<Instance : 0-7>	instance 0-7 (CIST=0, MST2=1...)
priority	Priority of the instance
forward-time	Delay between port states
max-age	Max bridge age before timeout
max-hops	MSTP bridge max hop count
name	Name keyword
vlan	VLAN keyword
interval	The interval
hold-count	Max number of transmit BPDUs per sec
<Holdcount : 1-10>	1-10 per sec, 6 is default

EXAMPLE

```
SM8TAT2DPB(config)# no spanning-tree ?
    edge           Edge ports
    mode           STP protocol mode
    mst            STP bridge instance
    recovery       The error recovery timeout
    transmit

SM8TAT2DPB(config)# no spanning-tree edge bpdu-filter
SM8TAT2DPB(config)# no spanning-tree mode
SM8TAT2DPB(config)# no spanning-tree mst max-age
SM8TAT2DPB(config)# no spanning-tree recovery interval
SM8TAT2DPB(config)# no spanning-tree transmit hold-count
SM8TAT2DPB(config)#
```

tacacs-server

Configure TACACS+.

SYNTAX

```
no tacacs-server deadtime
no tacacs-server host <host_name> [ port <port> ]
no tacacs-server key
no tacacs-server timeout
```

Parameter

deadtime	Time to stop using a TACACS+ server that doesn't respond
host	Specify a TACACS+ server
<Hostname : word1-255>	Host name or IP address
key	Set TACACS+ encryption key
timeout	Time to wait for a TACACS+ server to reply
key	Server specific key (overrides default)
port	TCP port for TACACS+ server
timeout	Time to wait for this TACACS+ server to reply (overrides default)
<Port : 0-65535>	TCP port number

EXAMPLE

```
SM8TAT2DPB(config)# no tacacs-server deadtime
SM8TAT2DPB(config)# no tacacs-server host 192.168.1.1 port 10000
SM8TAT2DPB(config)# no tacacs-server key
SM8TAT2DPB(config)# no tacacs-server timeout
SM8TAT2DPB(config)#
```

upnp

Set UPnP's configurations.

SYNTAX

no upnp
no upnp advertising-duration
no upnp ttl

Parameter

advertising-duration Set advertising duration
ttl Set TTL value

EXAMPLE

```
SM8TAT2DPB(config)# no upnp advertising-duration
SM8TAT2DPB(config)# no upnp ttl
SM8TAT2DPB(config)#
```

username

Establish User Name Authentication.

SYNTAX

no username <Username : word31>

Parameter

<Username : word31> User name allows letters, numbers and underscores

EXAMPLE

```
SM8TAT2DPB(config)# no username admin
SM8TAT2DPB(config)#
```

vlan

Vlan commands.

SYNTAX

```
no vlan protocol { { eth2 { <0x600-0xffff> | arp | ip | ipx | at } } | { snap { <0x0-0xfffff> | rfc_1042 | snap_8021h }
<0x0-0xffff> } | { llc <0x0-0xff> <0x0-0xff> } } group <word16>
no vlan { [ ethertype s-custom-port ] | <vlan_list> }
```

Parameter

protocol	Protocol-based VLAN commands
eth2	Ethernet-based VLAN commands
<0x600-0xffff>	Ether Type(Range: 0x600 - 0xFFFF)
arp	Ether Type is ARP
ip	Ether Type is IP
ipx	Ether Type is IPX
at	Ether Type is AppleTalk
snap	SNAP-based VLAN group
<0x0-0xfffff>	SNAP OUI (Range 0x000000 - 0FFFFFFF)
rfc_1042	SNAP OUI is rfc_1042
snap_8021h	SNAP OUI is 8021h
<0x0-0xffff>	PID (Range: 0x0 - 0xFFFF)
llc	LLC-based VLAN group
<0x0-0xff>	DSAP (Range: 0x00 - 0xFF)
<0x0-0xff>	SSAP (Range: 0x00 - 0xFF)
group	Protocol-based VLAN group commands
<word16>	Group Name (Range: 1 - 16 characters)
<vlan_list>	Vlan list
ethertype	EtherType (e.g., s-custom-port)
s-custom-port	S-Custom Port EtherType

EXAMPLE

```
SM8TAT2DPB(config)# no vlan ?
    <vlan_list>
    ethertype
    protocol      Protocol-based VLAN commands
SM8TAT2DPB(config)# no vlan 1
```

```
SM8TAT2DPB(config)# no vlan ethertype ?
    s-custom-port
SM8TAT2DPB(config)# no vlan ethertype s-custom-port
SM8TAT2DPB(config)# no vlan protocol ?
    eth2    Ethernet-based VLAN commands
    llc     LLC-based VLAN group
    snap    SNAP-based VLAN group
SM8TAT2DPB(config)# no vlan protocol llc
% Incomplete command.

SM8TAT2DPB(config)# no vlan protocol llc ?
    <0x0-0xff>    DSAP (Range: 0x00 - 0xFF)
SM8TAT2DPB(config)# no vlan protocol llc
```


voice

Negate Voice appliance attributes.

SYNTAX

```
no voice vlan
no voice vlan aging-time
no voice vlan class
no voice vlan oui <oui>
no voice vlan vid
```

Parameter

vlan	Vlan for voice traffic
aging-time	Set secure learning aging time
class	Set traffic class
oui	OUI configuration
<oui>	Traffic class value
vid	Set VLAN ID

EXAMPLE

```
SM8TAT2DPB(config)# no voice vlan ?
    aging-time    Set secure learning aging time
    class         Set traffic class
    oui           OUI configuration
    vid           Set VLAN ID
    <cr>
SM8TAT2DPB(config)# no voice vlan aging-time
SM8TAT2DPB(config)# no voice vlan class
SM8TAT2DPB(config)# no voice vlan oui ?
    <oui>         Traffic class value
SM8TAT2DPB(config)# no voice vlan vid
SM8TAT2DPB(config)#
```

web

Negate Web privilege levels.

SYNTAX

```
no web privilege group [ <group_name> ] level
```

Parameter

privilege	Web privilege
group	Web privilege group
<CWORD>	Valid words are 'Aggregation' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'GARP' 'GVRP' 'Green_Ethernet' 'IP2' 'IPMC_Snooping' 'LACP' 'LLDP' 'Loop_Protect' 'MAC_Table' 'MEP' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'POE' 'Ports' 'Private_VLANs' 'QoS' 'RPC' 'Security' 'Spanning_Tree' 'System' 'Timer' 'UPnP' 'VCL' 'VLANs' 'Voice_VLAN' 'XXRP' 'sFlow'
level	Web privilege group level

EXAMPLE

```
SM8TAT2DPB(config)# no web privilege group ?
  CWORD    Valid words are 'ACTIVATE' 'Aggregation' 'DHCP' 'DMS_client'
           'DMS_server' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'GARP'
           'GVRP' 'Green_Ethernet' 'IP2' 'IPMC_Snooping'
           'IP_Phone_Auto_Provisioning' 'LACP' 'LLDP' 'Loop_Protect'
           'MAC_Table' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'POE' 'Ports'
           'Private_VLANs' 'QoS' 'RPC' 'SMTP' 'Security' 'Spanning_Tree'
           'System' 'TS_client' 'TS_server' 'Timer' 'Trap_Event'
           'Trouble_Shooting' 'UPnP' 'VCL' 'VLANs' 'VTUN' 'Voice_VLAN' 'XXRP'
           'cloud_management' 'sFlow'
  level    Web privilege group level
SM8TAT2DPB(config)# no web privilege group lACP ?
  level    Web privilege group level
SM8TAT2DPB(config)# no web privilege group lACP level ?
  <cr>
SM8TAT2DPB(config)# no web privilege group lACP level
```

3-4 qos

Configure Quality of Service parameters.

Table : configure – qos Commands

Command	Function
<code>map</code>	Global QoS Map/Table
<code>qce</code>	QoS Control Entry
<code>storm</code>	Storm policer

map

Global QoS Map/Table.

SYNTAX

```
qos map cos-dscp <0~7> dpl <dpl : 0~1> dscp { <DscpNum : 0-63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } }
```

```
qos map dscp-classify { <dscpNum : 0~63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } }
```

```
qos map dscp-cos { <dscpNum : 0~63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } } cos <Cos : 0-7> dpl <dpl>
```

```
qos map dscp-egress-translation { <DscpNum : 0~63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } } <Dpl : 0~1> to { <Dscpnum : 0-63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } }
```

```
qos map dscp-ingress-translation { <DscpNum : 0~63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } } to { <DscpNum : 0-63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } }
```

Parameter

cos-dscp	Map for cos to dscp
dscp-classify	Map for dscp classify enable
dscp-cos	Map for dscp to cos
dscp-egress-translation	Map for dscp egress translation
dscp-ingress-translation	Map for dscp ingress translation
dpl	Specify drop precedence level
<Dpl : 0~1>	Specific drop precedence level or range

dscp	Specify DSCP
<DscpNum : 0-63>	Specific DSCP
cos	Specify class of QoS
<Cos : 0-7>	Specific class of QoS
af11	Assured Forwarding PHB AF11(DSCP 10)
af12	Assured Forwarding PHB AF12(DSCP 12)
af13	Assured Forwarding PHB AF13(DSCP 14)
af21	Assured Forwarding PHB AF21(DSCP 18)
af22	Assured Forwarding PHB AF22(DSCP 20)
af23	Assured Forwarding PHB AF23(DSCP 22)
af31	Assured Forwarding PHB AF31(DSCP 26)
af32	Assured Forwarding PHB AF32(DSCP 28)
af33	Assured Forwarding PHB AF33(DSCP 30)
af41	Assured Forwarding PHB AF41(DSCP 34)
af42	Assured Forwarding PHB AF42(DSCP 36)
af43	Assured Forwarding PHB AF43(DSCP 38)
be	Default PHB(DSCP 0) for best effort traffic
cs1	Class Selector PHB CS1 precedence 1(DSCP 8)
cs2	Class Selector PHB CS2 precedence 2(DSCP 16)
cs3	Class Selector PHB CS3 precedence 3(DSCP 24)
cs4	Class Selector PHB CS4 precedence 4(DSCP 32)
cs5	Class Selector PHB CS5 precedence 5(DSCP 40)
cs6	Class Selector PHB CS6 precedence 6(DSCP 48)
cs7	Class Selector PHB CS7 precedence 7(DSCP 56)
ef	Expedited Forwarding PHB(DSCP 46)
va	Voice Admit PHB(DSCP 44)

EXAMPLE

```
SM8TAT2DPB(config)# qos ?
  map      Global QoS Map/Table
  qce      QoS Control Entry
  storm    Storm policer
SM8TAT2DPB(config)# qos map ?
  cos-dscp      Map for cos to dscp
  dscp-classify Map for dscp classify enable
  dscp-cos      Map for dscp to cos
  dscp-egress-translation  Map for dscp egress translation
```

```
dscp-ingress-translation    Map for dscp ingress translation
SM8TAT2DPB(config)# qos qce ?
  <Id : 1-256>      QCE ID
  refresh          Refresh QCE tables in hardware
  update           Update an existing QCE
SM8TAT2DPB(config)# qos storm ?
  broadcast        Police broadcast frames
  multicast        Police multicast frames
  unicast          Police unicast frames
SM8TAT2DPB(config)# qos map cos-dscp 5 dpl 1 dscp 20
SM8TAT2DPB(config)#
```

qce

Configure QoS Control Entry.

SYNTAX

qos qce refresh

```
qos qce { [ update ] } <ld : 1-256> [ { next <ld : 1-256> } | last ] [ ingress interface *|Gigabitethernet
<PORT_LIST> ] [ tag { tagged | untagged | any } ] [ vid { <vlan_list> | any } ] [ pcps { <pcp> | any } ] [ dei { <Dpl :
0-1> | any } ] [ smac { <mac_addr> | <oui> | any } ] [ dmac-type { unicast | multicast | broadcast | any } ]
[ frametype { any | { etype [ { <0x600-0x7ff,0x801-0x86dc,0x86de-0xffff> | any } ] } | llc [ dsap { <0-0xff> | any } ]
[ ssap { <0-0xff> | any } ] [ control { <0-0xff> | any } ] } | { snap [ { <0-0xffff> | any } ] } | { ipv4 [ proto { <0-255> | tcp
| udp | any } ] [ sip { <ipv4_subnet> | any } ] [ dscp { <0~63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 |
af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } | any } ] [ frag { yes | no | any } ]
[ sport { <0~65535> | any } ] [ dport { <0~65535> | any } ] } | { ipv6 [ proto { <0-255> | tcp | udp | any } ] [ sip
{ <ipv4_subnet> | any } ] [ dscp { <0~63> | { be | af11 | af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 |
af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va } | any } ] [ sport { <0~65535> | any } ] [ dport
{ <0~65535> | any } ] } } ] [ action { [ cos { <0-7> | default } ] [ dpl { <0-1> | default } ] [ dscp { <0-63> | { be | af11 |
af12 | af13 | af21 | af22 | af23 | af31 | af32 | af33 | af41 | af42 | af43 | cs1 | cs2 | cs3 | cs4 | cs5 | cs6 | cs7 | ef | va }
| default } ] } ] }
```

Parameter

<ld : 1-256>	QCE ID
refresh	Refresh QCE tables in hardware
update	Update an existing QCE
action	Specify action
dei	Specify DEI (Drop Eligible Indicator)
dmac-type	Specify DMAC type
frametype	Specify frame type
ingress	Ingress interfaces
last	Place QCE at the end
next	Place QCE before the next QCE ID
pcps	Specify PCP (Priority Code Point)
smac	Specify SMAC. If 'qos qce dmac-dip' is set, this parameter specifies the DMAC
tag	Specify tag options
vid	Specify VLAN ID
cos	Specify class of service
dpl	Specify drop precedence level

dscp	Specify DSCP
cos	Specify class of service
<Cos : 0-7>	Specific class of service
default	Keep default class of service
<Dpl : 0-1>	Specific drop precedence level
default	Keep default drop precedence level
<Dscp : 0-63>	Specific DSCP
af11	Assured Forwarding PHB AF11(DSCP 10)
af12	Assured Forwarding PHB AF12(DSCP 12)
af13	Assured Forwarding PHB AF13(DSCP 14)
af21	Assured Forwarding PHB AF21(DSCP 18)
af22	Assured Forwarding PHB AF22(DSCP 20)
af23	Assured Forwarding PHB AF23(DSCP 22)
af31	Assured Forwarding PHB AF31(DSCP 26)
af32	Assured Forwarding PHB AF32(DSCP 28)
af33	Assured Forwarding PHB AF33(DSCP 30)
af41	Assured Forwarding PHB AF41(DSCP 34)
af42	Assured Forwarding PHB AF42(DSCP 36)
af43	Assured Forwarding PHB AF43(DSCP 38)
be	Default PHB(DSCP 0) for best effort traffic
cs1	Class Selector PHB CS1 precedence 1(DSCP 8)
cs2	Class Selector PHB CS2 precedence 2(DSCP 16)
cs3	Class Selector PHB CS3 precedence 3(DSCP 24)
cs4	Class Selector PHB CS4 precedence 4(DSCP 32)
cs5	Class Selector PHB CS5 precedence 5(DSCP 40)
cs6	Class Selector PHB CS6 precedence 6(DSCP 48)
cs7	Class Selector PHB CS7 precedence 7(DSCP 56)
default	Keep default DSCP
ef	Expedited Forwarding PHB(DSCP 46)
va	Voice Admit PHB(DSCP 44)
any	Any
broadcast	Broadcast
multicast	Multicast
unicast	Unicast
etype	Ethernet frames
ipv4	IPv4 frames

ipv6	IPv6 frames
llc	LLC frames
snap	SNAP frames
<Etype : 0x600-0x7ff,0x801-0x86dc,0x86de-0xffff>	Specific EtherType
interface	Interfaces
<Next : 1-256>	The next QCE ID
<Pcp : pcp>	Specific PCP (0-7) or range (0-1, 2-3, 4-5, 6-7, 0-3 or 4-7)
<Smac : mac_addr>	Specific SMAC (XX-XX-XX-XX-XX-XX)
tagged	Tagged frames only
untagged	Untagged frames only
<Vid : vlan_list>	Specific VLAN ID or range
interface	Interfaces
Gigabitethernet	1 Gigabit Ethernet Port
<PORT_LIST>	Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB(config)# qos qce 100 tag vid any action cos 6
SM8TAT2DPB(config)#
```

storm

Storm policer.

SYNTAX

```
qos storm { unicast | multicast | broadcast } <Rate : 1,2,4,8,16,32,64,128,256,512,1024> [ kfps ]
```

Parameter

broadcast	Police broadcast frames
multicast	Police multicast frames
unicast	Police unicast frames
<Rate : 1,2,4,8,16,32,64,128,256,512,1024>	Policer rate (default fps)
kfps	Rate is kfps

EXAMPLE

```
SM8TAT2DPB(config)# qos storm broadcast 256 kfps
SM8TAT2DPB(config)#
```


3-5 snmp-server

Set SNMP server's configurations.

SYNTAX

snmp-server

Table : configure –snmp-server Commands

Command	Function
access	access configuration
community	Set the SNMP community
contact	Set the SNMP server's contact string
engine-id	Set SNMP engine ID
host	Set SNMP host's configurations
location	Set the SNMP server's location string
security-to-group	security-to-group configuration
trap	Set trap's configurations
user	Set the SNMPv3 user's configurations
version	Set the SNMP server's version
view	MIB view configuration

access

access configuration.

SYNTAX

```
snmp-server access <GroupName : word32> model { v1 | v2c | v3 | any } level { auth | noauth | priv } [ read  
<ViewName : word255> ] [ write <WriteName : word255> ]
```

Parameter

<GroupName : word32>	group name
model	security model
any	any security model
v1	v1 security model
v2c	v2c security model
v3	v3 security model
level	security level
auth	authNoPriv Security Level
noauth	noAuthNoPriv Security Level
priv	authPriv Security Level
read	specify a read view for the group
write	specify a write view for the group
<ViewName : word255>	read view name
<WriteName : word255>	write view name

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server access text model v2c level noauth write text  
SM8TAT2DPB(config)#
```

community

Set the SNMP community.

SYNTAX

```
snmp-server community v2c <Community : word127> [ ro | rw ]
```

```
snmp-server community v3 <word127> [ <ipv4_addr> <ipv4_netmask> ]
```

Parameter

v2c	SNMPv2c
<Community : word127>	Community word
ro	Read only
rw	Read write
v3	SNMPv3
<Community : word127>	Community word
<ipv4_addr>	IPv4 address
<ipv4_netmask>	IPv4 netmask

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server community v2c text
SM8TAT2DPB(config)#
```

contact

Set the SNMP server's contact string.

SYNTAX

```
snmp-server contact <line255>
```

Parameter

contact	Set the SNMP server's contact string
<line255>	contact string

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server contact text
SM8TAT2DPB(config)#
```

engine-id

Set SNMP engine ID.

SYNTAX

```
snmp-server engine-id local <Engineid : word10-32>
```

Parameter

local	Set SNMP local engine ID
<Engineid : word10-32>	local engine ID

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server engine-id local 1234567891
SM8TAT2DPB(config)#
```

host

Set SNMP host's configurations.

SYNTAX

```
snmp-server host <word32>
```

Parameter

<word32>	Name of the host configuration
-----------------------	--------------------------------

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server host text
SM8TAT2DPB(config-snmps-host)#
```

location

Set the SNMP server's location string.

SYNTAX

```
snmp-server location <line255>
```

Parameter

<line255>	location string
------------------------	-----------------

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server location text
SM8TAT2DPB(config)#
```

security-to-group

security-to-group configuration.

SYNTAX

```
snmp-server security-to-group model { v1 | v2c | v3 } name <SecurityName : word32> group <GroupName : word32>
```

Parameter

model	security model
v1	v1 security model
v2c	v2c security model
v3	v3 security model
name	security user
<SecurityName : word32>	security user name
group	security group
<GroupName : word32>	security group name

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server security-to-group model v2c name text group text  
SM8TAT2DPB(config)#
```

trap

Set trap's configurations.

SYNTAX

```
snmp-server trap
```

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server trap  
SM8TAT2DPB(config)#
```

user

Set the SNMPv3 user's configurations.

SYNTAX

```
snmp-server user <Username : word32> engine-id <Engineid : word10-32> [ { md5 <Md5Passwd : word8-32> |
sha <ShaPasswd : word8-40> } [ priv { des | aes } <word8-32> ] ]
```

Parameter

<Username : word32>	Username
engine-id	engine ID
<Engineid : word10-32>	Engine ID octet string
md5	Set MD5 protocol
<Md5Passwd : word8-32>	MD5 password
sha	Set SHA protocol
<ShaPasswd word8-40>	SHA password
priv	Set Privacy
des	Set DES protocol
aes	Set AES protocol
<word8-32>	Set privacy password

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server user text engine-id 1234567891 md5 12345678 priv aes
12345678
SM8TAT2DPB(config)#
```

version

Set the SNMP server's version.

SYNTAX

```
snmp-server version { v1 | v2c | v3 }
```

Parameter

v1	SNMPv1
v2c	SNMPv2c
v3	SNMPv3

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server version v2c
SM8TAT2DPB(config)#
```

view

MIB view configuration.

SYNTAX

```
snmp-server view <ViewName : word32> <OidSubtree : word255> { include | exclude }
```

Parameter

<ViewName : word32>	MIB view name
<OidSubtree : word255>	MIB view OID
include	Included type from the view
exclude	Excluded type from the view

EXAMPLE

```
SM8TAT2DPB(config)# snmp-server view text .1 include  
SM8TAT2DPB(config)#
```

3-6 spanning-tree

Configure Spanning Tree protocol (STP).

Table : configure –spanning-tree Commands

Command	Function
<code>aggregation</code>	Aggregation mode
<code>edge</code>	Edge ports
<code>mode</code>	STP protocol mode
<code>mst</code>	STP bridge instance
<code>recovery</code>	The error recovery timeout
<code>transmit</code>	BPDU to transmit

aggregation

Configure Aggregation mode.

SYNTAX

```
spanning-tree aggregation
```

EXAMPLE

```
SM8TAT2DPB(config)# spanning-tree aggregation
SM8TAT2DPB(config-stp-aggr)#
```

edge

Configure Edge ports.

SYNTAX

```
spanning-tree edge bpd-filter
spanning-tree edge bpd-guard
```

Parameter

```
bpd-filter      Enable BPDU filter (stop BPDU tx/rx)
bpd-guard     Enable BPDU guard
```

EXAMPLE

```
SM8TAT2DPB(config)# spanning-tree edge bpd-filter
SM8TAT2DPB(config)#
```


mode

Configure STP protocol mode.

SYNTAX

```
spanning-tree mode { stp | rstp | mstp }
```

Parameter

mstp	Multiple Spanning Tree (802.1s)
rstp	Rapid Spanning Tree (802.1w)
stp	802.1D Spanning Tree

EXAMPLE

```
SM8TAT2DPB(config)# spanning-tree mode stp
SM8TAT2DPB(config)#
```

mst

Configure STP bridge instance.

SYNTAX

```
spanning-tree mst <Instance : 0-7> priority <Prio : 0-61440>
spanning-tree mst < Instance : 0-7> vlan <vlan_list>
spanning-tree mst forward-time <Fwdtime : 4-30>
spanning-tree mst max-age <Maxage : 6-40> [ forward-time <Fwdtime : 4-30> ]
spanning-tree mst max-hops <Maxhops : 6-40>
spanning-tree mst name <Name : word32> revision <0-65535>
```

Parameter

<Instance : 0-7>	instance 0-7 (CIST=0, MST2=1...)
forward-time	Delay between port states
max-age	Max bridge age before timeout
max-hops	MSTP bridge max hop count
name	Name keyword
priority	Priority of the instance
vlan	VLAN keyword
<Prio : 0-61440>	Range in seconds
<vlan_list>	Range of VLANs
<Fwdtime : 4-30>	Range in seconds
<Maxage : 6-40>	Range in seconds
<Maxhops : 6-40>	Hop count range

<Name : word32>	Name of the bridge
revision	Revision keyword
<0-65535>	Revision number

EXAMPLE

```
SM8TAT2DPB(config)# spanning-tree mst 7 vlan 10  
SM8TAT2DPB(config)#
```

recovery

Configure error recovery timeouts.

SYNTAX

```
spanning-tree recovery interval <Interval : 30-86400>
```

Parameter

interval	The interval
<Interval : 30-86400>	Range in seconds

EXAMPLE

```
SM8TAT2DPB(config)# spanning-tree recovery interval 50  
SM8TAT2DPB(config)#
```

transmit

Configure BPDUs to transmit.

SYNTAX

```
spanning-tree transmit hold-count <Holdcount : 1-10>
```

Parameter

hold-count	Max number of transmit BPDUs per second.
<Holdcount : 1-10>	1-10 per second, 6 is default.

EXAMPLE

```
SM8TAT2DPB(config)# spanning-tree transmit hold-count 5  
SM8TAT2DPB(config)#
```

4 COPY Commands

Copy from source to destination.

SYNTAX

```
copy { startup-config | running-config | < flash:filename | tftp://server/path-and-filename > } { startup-config |
running-config | < flash:filename | tftp://server/path-and-filename > } [ syntax-check ] [ { begin | exclude |
include } { <LINE > } ]
```

Parameter

flash:filename tftp://server/path-and-filename	File in FLASH or on TFTP server
running-config	Currently running configuration
startup-config	Startup configuration
 	Output modifiers
syntax-check	Perform syntax check on source configuration
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# copy ?
  flash:filename | tftp://server/path-and-filename  File in FLASH or on
                                                    TFTP server
  running-config                                     Currently running
                                                    configuration
  startup-config                                     Startup configuration
SM8TAT2DPB# copy startup-config running-config syntax-check | include #
SM8TAT2DPB#
```

5

DEBUG Commands

Debugging functions.

SYNTAX

debug prompt text

Parameter

prompt Set prompt for testing.

WORD Word for prompt in 32 characters.

EXAMPLE

```
SM8TAT2DPB# debug prompt test#
test## no debug ?
    prompt    Clear prompt for testing
test## no debug prompt ?
    <cr>
test## no debug prompt
SM8TAT2DPB#
```

6

DELETE Commands

Delete one file in flash: file system.

SYNTAX

Delete <Path : word>

Parameter

<Path : word> Name of file to delete.

EXAMPLE

```
SM8TAT2DPB# delete?
    delete  Delete one file in flash: file system
SM8TAT2DPB# delete text
% Invalid syntax, expected flash:filename
SM8TAT2DPB# delete flash:?
    <Path : word>  Name of file to delete
    <cr>
SM8TAT2DPB# delete flash:text
% Delete of text failed: No such entity.
SM8TAT2DPB# delete flash:
% Invalid syntax, expected flash:filename
SM8TAT2DPB# delete flash:filename ?
    <cr>
SM8TAT2DPB# delete flash:filename
% Delete of filename failed: No such entity.
SM8TAT2DPB#
```

7 DIR Commands

Directory of all files in flash: file system.

SYNTAX

Dir [| begin | exclude | include <LINE>]

Parameter

	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# dir
Directory of flash:
  r- 2011-01-01 00:00:00      716 default-config
  rw 2016-08-12 11:30:48    1174 startup-config
2 files, 1890 bytes total.
SM8TAT2DPB#
```

8

DISABLE Commands

Turn off privileged commands.

SYNTAX

disable <0-15>

Parameter

<0-15> Privilege level

EXAMPLE

```
SM8TAT2DPB# disable 10
```

```
SM8TAT2DPB#
```

9

DO Commands

To run exec commands in config mode.

SYNTAX

Do <LINE>{[LINE]}

Parameter

LINE Exec Command

EXAMPLE

```
SM8TAT2DPB# do show clock
System Time      : 2016-08-12T12:28:45+00:00

SM8TAT2DPB#
```


10

DOT1X Commands

IEEE Standard for port-based Network Access Control.

SYNTAX

```
dot1x initialize [ interface ( <port_type> [ <plist> ] ) ]
```

Parameter

initialize	Force re-authentication immediately
interface	Interface
*	All switches or All ports
Gigabitethernet	1 GigabitEthernet port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB# dot?  
  dot1x    IEEE Standard for port-based Network Access Control  
SM8TAT2DPB# dot1x initialize ?  
  interface  Interface  
  <cr>  
SM8TAT2DPB# dot1x initialize interface ?  
  *          All switches or All ports  
  GigabitEthernet  1 Gigabit Ethernet Port  
SM8TAT2DPB# dot1x initialize  
SM8TAT2DPB#
```

11

ENABLE Commands

Turn on privileged commands.

Syntax

Enable <1-15>

Parameter

<0-15> Choose privileged level

EXAMPLE

```
SM8TAT2DPB# enable ?
  <0-15>  Choose privileged level
  <cr>
SM8TAT2DPB# enable 15 ?
  <cr>
SM8TAT2DPB# enable 15
SM8TAT2DPB#
```

12

FIRMWARE Commands

Firmware upgrade and swap commands.

Syntax

firmware swap

firmware upgrade < TFTPServer_path_file : word>

Parameter

swap	Swap between Active and Alternate firmware image.
upgrade	Firmware upgrade
<TFTPServer_path_file : word>	TFTP Server IP address, path and file name for the server containing the new image.

EXAMPLE

```
SM8TAT2DPB# firmware upgrade tftp://192.168.1.30/path/sm8tat2dpb.bin
Programming image...
SM8TAT2DPB#
SM8TAT2DPB# firmware ?
    swap      Swap between Active and Alternate firmware image.
    upgrade   Firmware upgrade
SM8TAT2DPB# firmware swap ?
    <cr>
SM8TAT2DPB# firmware upgrade ?
    <TFTPServer_path_file : word>   TFTP Server IP address, path and file name
                                    for the server containing the new image.
SM8TAT2DPB# firmware upgrade tftp://192.168.1.30/path/sm8tat2dpb.bin
Download of /path/sm8tat2dpb.bin from 192.168.1.30 failed: Operation timed out.
SM8TAT2DPB# firmware upgrade t
<TFTPServer_path_file : word> <cr>
SM8TAT2DPB# firmware upgrade tftp?
    <TFTPServer_path_file : word>   TFTP Server IP address, path and file name
                                    for the server containing the new image.
```

```
<cr>
SM8TAT2DPB#

SM8TAT2DPB# firmware upgrade swap
% swap is an invalid TFTP path - Expecting something like tftp://10.10.10.10/path/new_image.dat
SM8TAT2DPB# firmware upgrade swap ?

<cr>
SM8TAT2DPB# firmware upgrade swap
% swap is an invalid TFTP path - Expecting something like tftp://10.10.10.10/path/new_image.dat
SM8TAT2DPB#
```

13 NO Commands

Negate a command or set its defaults

Syntax

no debug prompt / **no** port-security shutdown / **no** terminal

Parameter

debug	Debugging functions
port-security	Port security (psec limit)
terminal	Set terminal line parameters

EXAMPLE

```
SM8TAT2DPB# no?
  no    Negate a command or set its defaults
SM8TAT2DPB# no ?
  debug          Debugging functions
  port-security  Port security (psec limit)
  terminal        Set terminal line parameters
SM8TAT2DPB# no debug prompt ?
  <cr>
SM8TAT2DPB# no debug prompt
SM8TAT2DPB# no port-security ?
  shutdown      Reopen one or more ports whose limit is exceeded and shut down.
SM8TAT2DPB# no port-security shutdown ?
  interface
  <cr>
SM8TAT2DPB# no terminal ?
  editing        Enable command line editing
  exec-timeout   Set the EXEC timeout
  history        Control the command history function
  length         Set number of lines on a screen
  width         Set width of the display terminal
SM8TAT2DPB#
```

14

PING Commands

Send IP (ICMP) echo or IPv6 (ICMPv6) echo messages.

Syntax

```
ping ip <v_ip_addr> [ repeat <count> ] [ size <size> ] [ interval <seconds> ]
```

```
ping ipv6 <v_ipv6_addr> [ repeat <count> ] [ size <size> ] [ interval <seconds> ] [ interface vlan <v_vlan_id> ]
```

Parameter

ip	IP (ICMP) echo
<word1-255>	ICMP destination address
repeat	Specify repeat count
<Count : 1-60>	1-60; Default is 5
size	Specify datagram size
<Size : 2-1452>	2-1452; Default is 56 (excluding MAC, IP and ICMP headers)
interval	Specify repeat interval
<Seconds : 0-30>	0-30; Default is 0
ipv6	IPv6 (ICMPv6) echo
<ipv6_addr>	ICMPv6 destination address
repeat	Specify repeat count
<1-60>	1-60; Default is 5
size	Specify datagram size
<2-1452>	2-1452; Default is 56 (excluding MAC, IP and ICMP headers)
interval	Specify repeat interval
<0-30>	0-30; Default is 0
interface	Select an interface to configure
vlan	VLAN Interface
<vlan_id>	VLAN identifier(s): VID

EXAMPLE

```
SM8TAT2DPB# ping ?
  ip      IP (ICMP) echo
  ipv6    IPv6 (ICMPv6) echo
SM8TAT2DPB# ping ip 3 interval 4 repeat 1 size 3
PING server 0.0.0.3, 3 bytes of data.
recvfrom: Operation timed out
Sent 1 packets, received 0 OK, 0 bad
SM8TAT2DPB#

SM8TAT2DPB# ping ipv6 <v_ipv6_addr> [ repeat <count> ] [ size <size> ] [ interval <seconds> ]
[ interface vlan <v_vlan_id> ]
SM8TAT2DPB# ping ipv6 2001:cdba::3257:9652 interval 0 interface vlan 1 repeat 2
size 2
PING6 server 2001:cdba::3257:9652, 2 bytes of data.
sendto
sendto
Sent 0 packets, received 0 OK, 0 bad
SM8TAT2DPB#
```

15

RELOAD Commands

Reload system.

Syntax

```
reload { { cold | warm } [ sid <usid> ] } | { defaults [ keep-ip ] }
```

Parameter

cold	Reload cold, i.e. reboot.
defaults	Reload defaults without rebooting.
keep-ip	Attempt to keep VLAN1 IP setup.

EXAMPLE

```
SM8TAT2DPB# reload defaults
% Reloading defaults. Please stand by.
SM8TAT2DPB# reload cold
% Cold reload in progress, please stand by.
SM8TAT2DPB# +M25PXX : Init device with JEDEC ID 0x20BA19.
Luton26 board detected (VSC7427 Rev. D).
RedBoot(tm) bootstrap and debug environment [ROMRAM]
Non-certified release, version 1_15a-Vitesse - built 18:36:46, Sep  9 2014
Copyright (C) 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009
Free Software Foundation, Inc.
RedBoot is free software, covered by the eCos license, derived from the GNU General Public License.
You are welcome to change it and/or distribute copies of it under certain conditions. Under the
license terms, RedBoot's source code and full license terms must have been made available to you.
Redboot comes with ABSOLUTELY NO WARRANTY.
Platform: VCore-III (MIPS32 24KEc) LUTON26
RAM: 0x80000000-0x88000000 [0x80021f70-0x87fe1000 available]
FLASH: 0x40000000-0x41ffffff, 512 x 0x10000 blocks
== Executing boot script in 1.000 seconds - enter ^C to abort
RedBoot> fis load -d managed
Image loaded from 0x80040000-0x80bf3d80
RedBoot> go
```


16 SEND Commands

Send a message to other tty lines

Syntax

```
send { * | <session_list> | console 0 | vty <vty_list> } <message>
```

Parameter

*	All tty lines
<0~16>	Send a message to multiple lines
console	Primary terminal line
0	Send a message to a specific line
vty	Virtual terminal
<0~15>	Send a message to multiple lines
<LINE>	Message to be sent to lines, in 128 characters

EXAMPLE

```
SM8TAT2DPB# send * yes,i do
Enter TEXT message. End with the character 'y'.

y

-----
*** Message from line 0:
yes,i do

-----

SM8TAT2DPB#
```

17

SHOW Commands

Show running system information

Table : SHOW Commands

Command	Function
aaa	Login methods
access	Access management
access-list	Access list
aggregation	Aggregation port configuration
clock	Configure time-of-day clock
dot1x	IEEE Standard for port-based Network Access Control
green-ethernet	Green ethernet (Power reduction)
history	Display the session command history
interface	Interface status and configuration
ip	Internet Protocol
ipmc	IPv4/IPv6 multicast configuration
ipv6	IPv6 configuration commands
lACP	LACP configuration/status
line	TTY line information
lldp	Display LLDP neighbors information.
logging	Syslog
loop-protect	Loop protection configuration
mac	Mac Address Table information
mvr	Multicast VLAN Registration configuration
ntp	Configure NTP
platform	platform specific information
poE	Power over ethernet
port-security	
privilege	Display command privilege
pVLAN	PVLAN status
qoS	Quality of Service
radius-server	RADIUS configuration

rmon	RMON statistics
running-config	Show running system information
sflow	Statistics flow.
snmp	Display SNMP configurations
spanning-tree	STP Bridge
switchport	Display switching mode characteristics
System	show system information
tacacs-server	TACACS+ configuration
terminal	Display terminal configuration parameters
upnp	Display UPnP configurations
users	Display information about terminal lines
version	System hardware and software status
vlan	VLAN status
voice	Voice appliance attributes
web	Web

aaa

Display Login methods.

SYNTAX

```
show aaa [ | {begin | exclude | include } <LINE>]
```

Parameter

	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show aaa
console : local
telnet  : local
ssh     : local
http    : local
https   : no
SM8TAT2DPB#
```

access

Display Access management.

SYNTAX

show access management [statistics | <access_id_list>]

Parameter

- management** Access management configuration
- statistics** Statistics data
- <AccessidList : 1~16>** ID of access management entry
- |** Output modifiers
- begin** Begin with the line that matches
- exclude** Exclude lines that match
- include** Include lines that match
- <LINE>** String to match output lines

EXAMPLE

```
SM8TAT2DPB# show access management
Switch access management mode is disabled

W: WEB/HTTPS
S: SNMP
T: TELNET/SSH

Idx VID  Start IP Address          End IP Address           W S T
-----
SM8TAT2DPB# show access management statistics

Access Management Statistics:
-----
HTTP    Receive:      0  Allow:      0  Discard:    0
HTTPS  Receive:      0  Allow:      0  Discard:    0
SNMP    Receive:      0  Allow:      0  Discard:    0
TELNET  Receive:      0  Allow:      0  Discard:    0
SSH     Receive:      0  Allow:      0  Discard:    0
SM8TAT2DPB#
```

access-list

Show Access list parameters.

SYNTAX

```
show access-list [ interface [ * | Gigabitetherne <PORT_LIST> ] ] [ rate-limiter [ <RateLimiterList : 1~16> ] ] [ ace
statistics [ <Aceld : 1~256> ] ]
show access-list ace-status [ static ] [ loop-protect ] [ dhcp ] [ upnp ] [ arp-inspection ] [ mep ] [ ipmc ]
[ ip-source-guard ] [ ip-mgmt ] [ conflicts ]
```

Parameter

interface	Select an interface to configure
*	All Switches or All Ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18
rate-limiter	Rate limiter
< RateLimiterList : 1~16>	Rate limiter ID
ace	Access list entry
statistics	Traffic statistics
<Aceld : 1~256>	ACE ID
ace-status	The local ACEs status
static	The ACEs that are configured by users manually
loop-protect	The ACEs that are configured by Loop Protect module
dhcp	The ACEs that are configured by DHCP module
upnp	The ACEs that are configured by UPnP module
arp-inspection	The ACEs that are configured by ARP Inspection module
mep	The ACEs that are configured by MEP module
ipmc	The ACEs that are configured by IPMC module
ip-source-guard	The ACEs that are configured by IP Source Guard module
ip-mgmt	The ACEs that are configured by IP Management module
conflicts	The conflicts ACEs that does not applied to the hardware due to hardware limitations
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```

M8TAT2DPB# show access-list ace statistics rate-limiter
ID   Type      Ing. Port  Policy  Frame Type              Action Rate
L.   Port Redir. Mirror  Counter
-----
-----
10   GLOBAL   ALL       Any     ANY                      Deny   Disa
bled Disabled   Disabled 1380

Switch access-list ace number: 1

Switch access-list rate limiter ID 1 is 1 pps
Switch access-list rate limiter ID 2 is 1 pps
Switch access-list rate limiter ID 3 is 1 pps
Switch access-list rate limiter ID 4 is 1 pps
Switch access-list rate limiter ID 5 is 1 pps
Switch access-list rate limiter ID 6 is 1 pps
Switch access-list rate limiter ID 7 is 1 pps
Switch access-list rate limiter ID 8 is 1 pps
Switch access-list rate limiter ID 9 is 1 pps
Switch access-list rate limiter ID 10 is 1 pps
Switch access-list rate limiter ID 11 is 1 pps
Switch access-list rate limiter ID 12 is 1 pps
Switch access-list rate limiter ID 13 is 1 pps
Switch access-list rate limiter ID 14 is 1 pps
Switch access-list rate limiter ID 15 is 1 pps
Switch access-list rate limiter ID 16 is 1 pps
SM8TAT2DPB#

```

aggregation

Show Aggregation port configuration.

SYNTAX

```
show aggregation [ mode ] [ | {begin | exclude | include } <LINE>]
```

Parameter

mode	Traffic distribution mode
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show aggregation Mode
Aggregation Mode:

SMAC : Enabled
DMAC : Disabled
IP   : Enabled
Port : Enabled
SM8TAT2DPB #
```

clock

Show Configure time-of-day clock.

SYNTAX

```
show clock [detail]
```

Parameter

detail Display detailed information

EXAMPLE

```
SM8TAT2DPB# show clock detail
System Time      : 2016-08-11T15:21:37+00:00

Timezone : Timezone Offset : 0 ( 0 minutes)
Timezone Acronym :

Daylight Saving Time Mode : Disabled.
Daylight Saving Time Start Time Settings :
    Week: 0
    Day: 0
    Month: 0
    Date: 0
    Year: 0
    Hour: 0
    Minute: 0
Daylight Saving Time End Time Settings :
    Week: 0
    Day: 0
    Month: 0
    Date: 0
    Year: 0
    Hour: 0
    Minute: 0
Daylight Saving Time Offset : 1 (minutes)
SM8TAT2DPB#
```


dot1x

Display IEEE Standard for port-based Network Access Control.

SYNTAX

```
show dot1x statistics { eapol | radius | all } [ interface <port_type> <port_type_list> ] [ {begin | exclude | include } <LINE>]
```

```
show dot1x status [ interface ( <port_type> [ <port_type_list> ] ) ] [ brief ] [ {begin | exclude | include } <LINE>]
```

Parameter

statistics	Shows statistics for either eapol or radius.
all	Show all dot1x statistics
eapol	Show EAPOL statistics
radius	Show Backend Server statistics
<port_type >	GigabitEthernet
<port_type_list>	Port list in 1/1-18 for GigabitEthernet
Status	Shows dot1x status, such as admin state, port state and last source.
brief	Show status in a brief format
interface	Interface
*	All Switches or All Ports
GigabitEthernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for GigabitEthernet

EXAMPLE

```
SM8TAT2DPB# show dot1x statistics radius
```

	Rx Access	Rx Other	Rx Auth.	Rx Auth.	Tx
MAC					
Interface	Challenges	Requests	Successes	Failures	Responses
Address					
-----	-----	-----	-----	-----	-----
GigabitEthernet 1/1	0	0	0	0	0
-					
GigabitEthernet 1/2	0	0	0	0	0
-					
GigabitEthernet 1/3	0	0	0	0	0
-					
GigabitEthernet 1/4	0	0	0	0	0

```
-  
GigabitEthernet 1/5    0      0      0      0      0  
-  
GigabitEthernet 1/6    0      0      0      0      0  
-  
GigabitEthernet 1/7    0      0      0      0      0  
-  
GigabitEthernet 1/8    0      0      0      0      0  
-  
-- more --, next page: Space, continue: g, quit: ^C
```

green-ethernet

Display Green Ethernet (Power reduction) information.

SYNTAX

```
show green-ethernet [ interface <port_type> <port_type_list> ]
show green-ethernet eee [ interface <port_type> <port_type_list> ]
show green-ethernet energy-detect [ interface <port_type> <port_type_list> ]
show green-ethernet short-reach [ interface <port_type> <port_type_list> ]
```

Parameter

eee Shows green ethernet EEE status for a specific port or ports.

energy-detect Shows green ethernet energy-detect status for a specific port or ports.

interface Shows green ethernet status for a specific port or ports.

short-reach Shows green ethernet short-reach status for a specific interface

***** All Switches or All ports

<port_type > GigabitEthernet or

<port_type_list> Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB# show green-ethernet eee
Interface          Lnk  EEE Capable  EEE Enabled  LP  EEE Capable  In Power Save
-----
GigabitEthernet 1/1   Yes  Yes         No           No           Yes         No
GigabitEthernet 1/2   No   Yes         No           No           No          No
GigabitEthernet 1/3   No   Yes         No           No           No          No
GigabitEthernet 1/4   No   Yes         No           No           No          No
GigabitEthernet 1/5   No   Yes         No           No           No          No
GigabitEthernet 1/6   No   Yes         No           No           No          No
GigabitEthernet 1/7   No   Yes         No           No           No          No
GigabitEthernet 1/8   No   Yes         No           No           No          No
GigabitEthernet 1/9   No   Yes         No           No           No          No
-- more --, next page: Space, continue: g, quit: ^C
```

history

Display the session command history.

SYNTAX

```
show history [ | {begin | exclude | include } <LINE>]
```

Parameter

	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show history
firmware upgrade tftp://192.168.1.30/sm8tat2dpb.bin
show aaa
show access management
show access management statistics
show access-list ace statistics rate-limiter
show aggregation Mode
show clock detail
show dot1x statistics radius
show green-ethernet eee
show history
SM8TAT2DPB#
```

interface

Display Interface status and configuration.

SYNTAX

```

show interface <port_type> <port_type_list> [ switchport [ access | trunk | hybrid ] ]
show interface <port_type> <port_type_list> capabilities
show interface <port_type> <port_type_list> statistics [ { packets | bytes | errors | discards | filtered | { priority
[ <0~7> ] } } ] [ { up | down } ]
show interface <port_type> <port_type_list> status
show interface <port_type> <port_type_list> veriphy
show interface vlan [ <vlan_list> ]

```

Parameter

<port_type>	Gigabitethernet
*	All Switches or All ports
Gigabitethernet	1 Gigabitethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
capabilities	Display capabilities.
statistics	Display statistics counters.
status	Display status.
switchport	Show interface switchport information
veriphy	Run cable diagnostics and show result.
bytes	Show byte statistics.
discards	Show discard statistics.
down	Show ports which are down
errors	Show error statistics.
filtered	Show filtered statistics.
packets	Show packet statistics.
priority	Queue number
up	Show ports which are up
vlan	VLAN status
<vlan_list>	VLAN list

EXAMPLE 1: show interface (copper ports 1-3)

```
SM8TAT2DPB # show interface GigabitEthernet 1/1-3 capabilities
```

GigabitEthernet 1/1 Capabilities:

```
Connector Type      : none
```

```
Fiber Type          : none
```

```
TX Central Wavelength: none
```

```
Bit Rate            : none
```

```
Vendor OUI          : none
```

```
Vendor name         : none
```

```
Vendor PN           : none
```

```
Vendor revision     : none
```

```
Vendor Serial Number : none
```

```
Data Code           : none
```

```
Temperature         : none
```

```
Vcc:                : none
```

```
Mon1(Bias)          : none
```

```
Mon2(TX PWR)        : none
```

```
Mon3(RX PWR)        : none
```

GigabitEthernet 1/2 Capabilities:

```
Connector Type      : none
```

```
Fiber Type          : none
```

```
TX Central Wavelength: none
```

```
-- more --, next page: Space, continue: g, quit: ^C
```

EXAMPLE 2: show interface (fiber SFP ports 17-18)

```
SM8TAT2DPB# show interface GigabitEthernet 1/9-10 capabilities
```

GigabitEthernet 1/9 Capabilities:

```
Connector Type      : none
Fiber Type          : none
TX Central Wavelength: none
Bit Rate            : none
Vendor OUI          : none
Vendor name         : none
Vendor PN           : none
Vendor revision     : none
Vendor Serial Number : none
Data Code           : none
Temperature         : none
Vcc:                : none
Mon1(Bias)          : none
Mon2(TX PWR)        : none
Mon3(RX PWR)        : none
```

GigabitEthernet 1/10 Capabilities:

```
Connector Type      : none
Fiber Type          : none
TX Central Wavelength: none
-- more --, next page: Space, continue: g, quit: ^C
```

EXAMPLE 3: show interface (VLAN)

```
SM8TAT2DPB# show interface vlan
```

VLAN1

```
LINK: 00-40-c7-fe-07-df Mtu:1500 <UP BROADCAST RUNNING MULTICAST>
IPv4: 169.254.0.1/16 169.254.255.255
IPv4: 192.168.1.77/24 192.168.1.255
IPv6: fe80::240:c7ff:fefe:7df/64 <ANYCAST TENTATIVE AUTOCONF>
```

VLAN4096

```
LINK: 00-40-c7-fe-07-df Mtu:1500 <BROADCAST MULTICAST>
```

```
VLAN4097  
  LINK: 00-40-c7-fe-07-df Mtu:1500 <BROADCAST MULTICAST>  
SM8TAT2DPB#
```


ip

Show Internet Protocol (IP) parameters.

SYNTAX

```

show ip arp
show ip arp inspection [ interface {<port_type> <port_type_list>} | vlan <vlan_list> ]
show ip arp inspection entry [ dhcp-snooping | static ] [ interface <port_type> <port_type_list> ]
show ip dhcp relay [ statistics ]
show ip dhcp snooping [ statistics ] [ interface <port_type> <port_type_list> ]
show ip http server secure status
show ip igmp snooping [ vlan <vlan_list> ] [ group-database [ interface <port_type> <port_type_list> ]
[ sfm-information ] ] [ detail ]
show ip igmp snooping mrouter [ detail ]
show ip interface brief
show ip name-server
show ip route
show ip source binding [ dhcp-snooping | static ] [ interface <port_type> <port_type_list> ]
show ip ssh
show ip statistics [ system ] [ interface vlan <vlan_list> ] [ icmp ] [ icmp-msg <0~255> ]
show ip verify source [ interface <port_type> <port_type_list> ]

```

Parameter

arp	Address Resolution Protocol
inspection	ARP inspection
interface	arp inspection entry interface config
<port_type>	Gigabitethernet
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
vlan	VLAN configuration
<vlan_list>	Select a VLAN id to configure
entry	arp inspection entries
dhcp-snooping	learn from dhcp snooping
static	setting from static entries
dhcp	Dynamic Host Configuration Protocol
relay	DHCP relay agent configuration
statistics	Traffic statistics
snooping	DHCP snooping
http	Hypertext Transfer Protocol

server	HTTP web server
secure	Secure
status	Status
igmp	Internet Group Management Protocol
snooping	Snooping IGMP
vlan	Search by VLAN
<vlan_list>	VLAN identifier(s): VID
group-database	Multicast group database from IGMP
sfm-information	Including source filter multicast information from IGMP
detail	Detail running information/statistics of IGMP snooping
mrouter	Multicast router port status in IGMP
detail	Detail running information/statistics of IGMP snooping
interface	IP interface status and configuration
brief	Brief IP interface status
name-server	Domain Name System
route	Display the current ip routing table
binding	ip source binding
dhcp-snooping	learn from dhcp snooping
ssh	Secure Shell
system	IPv4 system traffic
icmp	IPv4 ICMP traffic
icmp-msg	IPv4 ICMP traffic for designated message type
<0~255>	ICMP message type ranges from 0 to 255
verify	verify command
source	verify source

EXAMPLE

```
SM8TAT2DPB# show ip statistics ?
|           Output modifiers
icmp       IPv4 ICMP traffic
icmp-msg   IPv4 ICMP traffic for designated message type
interface  Select an interface to configure
system     IPv4 system traffic
<cr>
SM8TAT2DPB# show ip statistics system

IPv4 statistics:

Rcvd: 566758 total in 72974092 bytes
      300188 local destination, 0 forwarding
      0 header error, 4606 address error, 0 unknown protocol
      0 no route, 0 truncated, 6906 discarded
Sent: 500460 total in 82673394 bytes
      300230 generated, 0 forwarded
      30 no route, 0 discarded
Frag: 0 reassemble (0 reassembled, 0 couldn't reassemble)
      0 fragment (0 fragmented, 0 couldn't fragment)
      0 fragment created
Mcast: 66340 received in 3641214 bytes
       72946 sent in 10420910 bytes
Bcast: 64040 received, 59434 sent
SM8TAT2DPB#
```

ipmc

IPv4/IPv6 multicast configuration.

SYNTAX

```
show ipmc profile [ <ProfileName : word16> ] [ detail ] [ | {begin | exclude | include } <LINE>]
```

```
show ipmc range [ <EntryName : word16> ] [ | {begin | exclude | include } <LINE>]
```

Parameter

profile	IPMC profile configuration
range	A range of IPv4/IPv6 multicast addresses for the profile
<ProfileName : word16>	Profile name in 16 char's
detail	Detail information of a profile
<EntryName : word16>	Range entry name in 16 char's
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show ipmc ?
  profile    IPMC profile configuration
  range      A range of IPv4/IPv6 multicast addresses for the profile
SM8TAT2DPB# show ipmc profile

IPMC Profile is currently disabled, please enable profile to start filtering.
SM8TAT2DPB# show ipmc range
SM8TAT2DPB# show ipmc profile

IPMC Profile is currently disabled, please enable profile to start filtering.
SM8TAT2DPB#
```

ipv6

Display IPv6 configuration commands.

SYNTAX

```

show ipv6 interface [ vlan <vlan_list> { brief | statistics } ] [ | {begin | exclude | include } <LINE>]
show ipv6 mld snooping [ vlan <vlan_list> ] [ group-database [ interface <port_type> <port_type_list> ]
[ sfm-information ] ] [ detail ]
show ipv6 mld snooping mrouter [ detail ]
show ipv6 neighbor [ interface vlan <vlan_list> ]
show ipv6 route [ interface vlan <vlan_list> ]
show ipv6 statistics [ system ] [ interface vlan <vlan_list> ] [ icmp ] [ icmp-msg <Type : 0~255> ]

```

Parameter

interface	Select an interface to configure
vlan	VLAN of IPv6 interface
<vlan_list>	IPv6 interface VLAN list
brief	Brief summary of IPv6 status and configuration
statistics	Traffic statistics
mld	Multicasat Listener Discovery
snooping	Snooping MLD
vlan	Search by VLAN
<vlan_list>	VLAN identifier(s): VID
group-database	Multicast group database from MLD
interface	Search by port
<port_type>	Gigabitethernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
sfm-information	Including source filter multicast information from MLD
detail	Detail running information/statistics of MLD snooping
mrouter	Multicast router port status in MLD
neighbor	IPv6 neighbors
route	IPv6 routes
statistics	Traffic statistics
system	IPv6 system traffic
icmp	IPv6 ICMP traffic
icmp-msg	IPv6 ICMP traffic for designated message type

<Type : 0~255>	ICMP message type ranges from 0 to 255
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show ipv6 statistics system ?
|          Output modifiers
icmp      IPv6 ICMP traffic
icmp-msg  IPv6 ICMP traffic for designated message type
interface Select an interface to configure
<cr>
SM8TAT2DPB# show ipv6 statistics system

IPv6 statistics:

Rcvd:  0 total in 0 byte
        0 local destination, 0 forwarding
        0 header error, 0 address error, 0 unknown protocol
        0 no route, 0 truncated, 0 discarded
Sent:  10 total in 656 bytes
        14 generated, 0 forwarded
        0 no route, 0 discarded
Frag:  0 reassemble (0 reassembled, 0 couldn't reassemble)
        0 fragment (0 fragmented, 0 couldn't fragment)
        0 fragment created
Mcast: 0 received in 0 byte
        10 sent in 656 bytes
Bcast: 0 received, 0 sent
SM8TAT2DPB#
```

lACP

Display LACP configuration/status.

SYNTAX

```
show lACP { internal | statistics | system-id | neighbour } [ | {begin | exclude | include } <LINE>]
```

Parameter

internal	Internal LACP configuration
neighbour	Neighbour LACP status
statistics	Internal LACP statistics
system-id	LACP system id
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show lACP ?
  internal      Internal LACP configuration
  neighbour     Neighbour LACP status
  statistics    Internal LACP statistics
  system-id     LACP system id

SM8TAT2DPB# show lACP internal
Port           Mode      Key  Role  Timeout  Priority
-----
Gi 1/1         Disabled Auto  Active Fast      32768
Gi 1/2         Disabled Auto  Active Fast      32768
Gi 1/3         Disabled Auto  Active Fast      32768
Gi 1/4         Disabled Auto  Active Fast      32768
Gi 1/5         Disabled Auto  Active Fast      32768
Gi 1/6         Disabled Auto  Active Fast      32768
Gi 1/7         Disabled Auto  Active Fast      32768
Gi 1/8         Disabled Auto  Active Fast      32768
Gi 1/9         Disabled Auto  Active Fast      32768
Gi 1/10        Disabled Auto  Active Fast      32768
SM8TAT2DPB#
```

line

Display TTY line information.

SYNTAX

```
show line [ alive ] [ | {begin | exclude | include } <LINE>]
```

Parameter

alive	Display information about alive lines
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show line ?
|      Output modifiers
alive  Display information about alive lines
<cr>

SM8TAT2DPB# show line
Line is con 0.
* You are at this line now.
Alive from Console.
Default privileged level is 2.
Command line editing is disabled
Display EXEC banner is enabled.
Display Day banner is enabled.
Terminal width is 80.
    length is 24.
    history size is 10.
    exec-timeout is 60 min 0 second.

Current session privilege is 15.
Elapsed time is 0 day 2 hour 35 min 47 sec.
Idle time is 0 day 0 hour 0 min 0 sec.

Line is vty 0.
Not alive.
Default privileged level is 2.
```



```
Command line editing is disabled
Display EXEC banner is enabled.
Display Day banner is enabled.
-- more --, next page: Space, continue: g, quit: ^C
```

Ildp

Display LLDP neighbors and LLDP Med information.

SYNTAX

```

show lldp med media-vlan-policy [ <0~31> ] [ | {begin | exclude | include } <LINE>]
show lldp med remote-device [ interface <port_type> <port_type_list> ] [ | {begin | exclude | include } <LINE>]
show lldp neighbors [ interface <port_type> <port_type_list> ] [ | {begin | exclude | include } <LINE>]
show lldp statistics [ interface <port_type> <port_type_list> ] [ | {begin | exclude | include } <LINE>]

```

Parameter

med	Display LLDP-MED neighbors information.
neighbors	Display LLDP neighbors information.
statistics	Display LLDP statistics information.
media-vlan-policy	Display media vlan policies.
remote-device	Display remote device LLDP-MED neighbors information.
<0~31>	List of policies.
Interface	
<port_type >	GigabitEthernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```

SM8TAT2DPB# show lldp interface GigabitEthernet 1/1-2
LLDP Configuration
-----
TX Interval : 1332

TX Hold : 5

TX Delay : 333

```

```
TX Reinit : 3

LLDP Port Configuration, Ena : Enabled, Dis : Disabled
-----

Port      TX/RX Mode      CDP Aware      Port Descr      Sys Name      Sys Descr
  Sys Capa      Mgmt Addr
-----
-----
1         TX/RX           Dis            Ena             Ena           Ena
  Ena           Ena
2         TX/RX           Dis            Ena             Ena           Ena
  Ena           Ena
SM8TAT2DPB# show lldp neighbors ?
|           Output modifiers
interface   Interface to display.
<cr>
SM8TAT2DPB# show lldp neighbors
No LLDP entries found
SM8TAT2DPB#
```

logging

Display Syslog information.

SYNTAX

```
show logging <loggin_id : 1-4294967295> [ | {begin | exclude | include } <LINE>]
```

```
show logging [ info ] [ warning ] [ error ] [ | {begin | exclude | include } <LINE>]
```

Parameter

<logging_id: 1-4294967295>	Logging ID
error	Error
info	Information
warning	Warning
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show logging ?
```

```

<logging_id: 1-4294967295> Logging ID
| Output modifiers
alert Alert
crit Critical
debug Debug
emerg Emergency
error Error
info Information
notice Notice
warning Warning
<cr>

```

```
SM8TAT2DPB# show logging info
```

```
Switch logging host mode is disabled
```

```
Switch logging host address is null
```

```
Number of entries on Switch 1:
```

```
Emerg : 0
```

```
Alert : 0
```

```
Crit : 0
```

Error : 0
Warning: 12
Notice : 0
Info : 46
Debug : 0
All : 58

ID	Level	Time	Message	iPush Status
2	Info	2016-08-10T16:23:46+00:00	Password of user 'admin' was change ...	
4	Info	2016-08-10T16:23:48+00:00	topologyChange	
5	Info	2016-08-10T16:23:50+00:00	topologyChange	
6	Info	2016-08-10T16:24:13+00:00	DMS: Device(SM8TAT2DPB 192.168.1.77 ...	
7	Info	2016-08-10T16:24:14+00:00	DMS: Device(192.168.1.99) On-line	
8	Info	2016-08-10T16:25:03+00:00	Login passed for user 'admin'	
9	Info	2016-08-10T16:26:20+00:00	User 'admin' restored default confi ...	
10	Info	2016-08-10T16:26:23+00:00	topologyChange	
11	Info	2016-08-10T16:26:25+00:00	topologyChange	
12	Info	2016-08-10T16:26:47+00:00	DMS: New Device(192.168.1.99) add i ...	
14	Info	2016-08-10T16:27:10+00:00	Login passed for user 'admin'	
15	Info	2016-08-10T16:30:14+00:00	Auto Saving	
16	Info	2016-08-10T16:49:54+00:00	User 'admin' logout	

-- more --, next page: Space, continue: g, quit: ^C

loop-protect

Show Loop protection configuration.

SYNTAX

```
show loop-protect [ interface <port_type> <port_type_list> ]
```

Parameter

interface	Interface status and configuration
<port_type >	GigabitEthernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB# show loop-protect

Loop Protection Configuration
=====
Loop Protection   : Disable
Transmission Time : 5 sec
Shutdown Time    : 180 sec

GigabitEthernet 1/1
-----
    Loop protect mode is enabled.
    Action is shutdown.
    Transmit mode is enabled.
    No loop.
    The number of loops is 0.
    Status is up.

GigabitEthernet 1/2
-----
    Loop protect mode is enabled.
    Action is shutdown.
    Transmit mode is enabled.
    No loop.

-- more --, next page: Space, continue: g, quit: ^C
```

mac

Show Mac Address Table information.

SYNTAX

```
show mac address-table [ conf | static | aging-time | { { learning | count } [ interface <port_type>
<port_type_list> ] } | { address <mac_addr> [ vlan <vlan_id> ] } | vlan <vlan_id> | interface <port_type>
<port_type_list> ] [ [ {begin | exclude | include } <LINE>]
```

Parameter

address-table	Mac Address Table
conf	User added static mac addresses
static	All static mac addresses
aging-time	Aging time
learning	Learn/disable/secure state
count	Total number of mac addresses
interface	Select an interface to configure
<port_type>	Gigabitethernet
*	All switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18
address	MAC address lookup
<mac_addr>	48 bit MAC address: xx:xx:xx:xx:xx:xx
vlan	VLAN lookup
<vlan_id>	VLAN IDs 1-4095
vlan	Addresses in this VLAN
<vlan_id>	VLAN IDs 1-4095
interface	Select an interface to configure
<port_type>	igabitethernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```

SM8TAT2DPB# show mac address-table ?
|           Output modifiers
address     MAC address lookup
aging-time  Aging time
conf        User added static mac addresses
count       Total number of mac addresses
interface   Select an interface to configure
learning    Learn/disable/secure state
static      All static mac addresses
vlan        Addresses in this VLAN
<cr>

SM8TAT2DPB# show mac address-table aging-time
MAC Age Time: 300

SM8TAT2DPB# show mac address-table count
Port Dynamic addresses
1      1
2      0
3      0
4      0
5      0
6      0
7      0
8      0
9      0
10     0

Total learned dynamic addresses for the switch: 1
Total static addresses in table: 4

SM8TAT2DPB# show mac address-table vlan 1
Type   VID  MAC Address      Ports
Dynamic 1   00:1b:11:b2:6d:4b GigabitEthernet 1/1
Static  1   00:40:c7:fe:07:df CPU
Static  1   33:33:00:00:00:01 GigabitEthernet 1/1-10 CPU
Static  1   33:33:00:00:00:02 GigabitEthernet 1/1-10 CPU
Static  1   33:33:ff:fe:07:df GigabitEthernet 1/1-10 CPU

```


mvr

Show Multicast VLAN Registration configuration.

SYNTAX

```
show mvr [ vlan <vlan_list> | name <word16> ] [ group-database [ interface <port_type> <port_type_list> ]
[ sfm-information ] ] [ detail ] [ | {begin | exclude | include } <LINE>]
```

Parameter

vlan	Search by VLAN
<vlan_list>	MVR multicast VLAN list
name	Search by MVR name
<word16>	MVR multicast VLAN name
group-database	Multicast group database from MVR
interface	Search by port
<port_type>	* or Gigabitethernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
sfm-information	Including source filter multicast information from MVR
detail	Detail information/statistics of MVR group database
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show mvr ?
|                Output modifiers
detail           Detail information/statistics of MVR group database
group-database   Multicast group database from MVR
name             Search by MVR name
vlan             Search by VLAN
<cr>

SM8TAT2DPB# show mvr

MVR is currently disabled, please enable MVR to start group registration.
SM8TAT2DPB#
```

platform

Show Platform specific information

SYNTAX

```

show platform phy [ interface ( <port_type> [ <v_port_type_list> ] ) ] [ | {begin | exclude | include } <LINE>]
show platform phy id [ interface ( <port_type> [ <v_port_type_list> ] ) ] [ | {begin | exclude | include } <LINE>]
show platform phy instance [ | {begin | exclude | include } <LINE>]
show platform phy status [ interface ( <port_type> [ <v_port_type_list> ] ) ] [ | {begin | exclude | include } <LINE>]
    
```

Parameter

- phy** PHYs' information
- |** Output modifiers
- begin** Begin with the line that matches
- exclude** Exclude lines that match
- include** Include lines that match
- <LINE>** String to match output lines

EXAMPLE

```

SM8TAT2DPB# show platform phy ?
  |          Output modifiers
  id
  instance   PHY Instance Information
  interface
  status
  <cr>

SM8TAT2DPB# show platform phy
Port  API Inst  WAN/LAN/1G Mode  Duplex  Speed  Link
----  -
1     Default  1G               PD      -      -      ,Yes
2     Default  1G               PD      -      -      ,No
3     Default  1G               PD      -      -      ,No
4     Default  1G               PD      -      -      ,No
5     Default  1G               PD      -      -      ,No
6     Default  1G               PD      -      -      ,No
7     Default  1G               PD      -      -      ,No
8     Default  1G               PD      -      -      ,No
9     Default  1G               PD      -      -      ,No
10    Default  1G               PD      -      -      ,No
    
```

poE

show PoE information.

SYNTAX

```

show poe auto-check [ interface ( <port_type> [ <v_port_type_list> ] ) ]
show poe config [ interface ( <port_type> [ <v_port_type_list> ] ) ]
show poe power-delay [ interface ( <port_type> [ <v_port_type_list> ] ) ]
show poe schedule [ interface ( <port_type> [ <v_port_type_list> ] ) ]
show poe status [ interface ( <port_type> [ <v_port_type_list> ] ) ]

```

Parameter

interface	
	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```

SM8TAT2DPB# show poe ?
  auto-power-reset  Show PoE Auto Power Reset configuration.
  config            Display PoE (Power Over Ethernet) config for the
                   switch.
  power-delay       Display PoE (Power Over Ethernet) power delay for the
                   switch.
  profile           poe scheduling profile
  reboot           poe reboot scheduling
  status           Display PoE (Power Over Ethernet) status for the
                   switch.

SM8TAT2DPB# show poe auto-power-reset ?
  |                Output modifiers
  interface
  <cr>

SM8TAT2DPB# show poe auto-power-reset

Ping Check : Disabled

Port Ping IP Address Start up Interval Retry Failure Log      Failure Action

```

```

Reboot
      Time      Time      Time
Time
-----
1  0.0.0.0      60      30      3  error=0,total=0 Nothing 15
2  0.0.0.0      60      30      3  error=0,total=0 Nothing 15
3  0.0.0.0      60      30      3  error=0,total=0 Nothing 15
4  0.0.0.0      60      30      3  error=0,total=0 Nothing 15
5  0.0.0.0      60      30      3  error=0,total=0 Nothing 15
6  0.0.0.0      60      30      3  error=0,total=0 Nothing 15
SM8TAT2DPB# show poe config
Primary Power Supply [W]      : 130

Port  Mode      Schedule      Priority  Max. Power [W]
-----
1  Enabled  Disable      Low      30.0
2  Enabled  Disable      Low      30.0
3  Enabled  Disable      Low      30.0
4  Enabled  Disable      Low      30.0
5  Enabled  Disable      Low      30.0
6  Enabled  Disable      Low      30.0
7  Enabled  Disable      Low      30.0
8  Enabled  Disable      Low      30.0
GigabitEthernet 1/9 does not have PoE support
GigabitEthernet 1/10 does not have PoE support
GigabitEthernet 1/9 does not have PoE support
GigabitEthernet 1/9 does not have PoE support
SM8TAT2DPB# show poe status
Interface      PD Class  Port Status      Pwr
Req Pwr Alloc Power  Current  Priority
Used
[W] Used[W]  Used[W] Used[mA]
-----
-- more --, next page: Space, continue: g, quit: ^C
    
```

ntp

Show NTP (Network Timing Protocol) info.

SYNTAX

```
show ntp status
```

Parameter

```
status          status
```

EXAMPLE

```
SM8TAT2DPB# show ntp status
NTP Mode : disabled
Automatic: disabled
Idx  Server IP host address (a.b.c.d)
---  -----
1
Idx  Server IP host address (a.b.c.d) or a host name string
---  -----
1
2
3
4
5
SM8TAT2DPB#
```

port-security**SYNTAX**

```
show port-security port [ interface <port_type> <port_type_list> ] [ | {begin | exclude | include } <LINE>
show port-security switch [ interface <port_type> <port_type_list> ] [ | {begin | exclude | include } <LINE>
```

Parameter

port	Show MAC Addresses learned by Port Security
switch	Show Port Security status.
Interface	
<port_type >	GigabitEthernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show port-security ?
  port      Show MAC Addresses learned by Port Security
  switch    Show Port Security status.
SM8TAT2DPB# show port-security port ?
  |          Output modifiers
  interface
  <cr>
SM8TAT2DPB# show port-security port
GigabitEthernet 1/1
-----
MAC Address      VID   State   Added                               Age/Hold Time
-----
<none>

GigabitEthernet 1/2
-----
```

```

MAC Address      VID  State      Added      Age/Hold Time
-----
<none>

GigabitEthernet 1/3
-----
MAC Address      VID  State      Added      Age/Hold Time
-----
<none>

GigabitEthernet 1/4
-----
MAC Address      VID  State      Added      Age/Hold Time
-----

SM8TAT2DPB# show port-security switch ?
|           Output modifiers
interface
<cr>

SM8TAT2DPB# show port-security switch
Users:
L = Limit Control
8 = 802.1X
V = Voice VLAN

Interface          Users  State      MAC Cnt
-----
GigabitEthernet 1/1    ---   No users    0
GigabitEthernet 1/2    ---   No users    0
GigabitEthernet 1/3    ---   No users    0
GigabitEthernet 1/4    ---   No users    0
GigabitEthernet 1/5    ---   No users    0
GigabitEthernet 1/6    ---   No users    0
GigabitEthernet 1/7    ---   No users    0
GigabitEthernet 1/8    ---   No users    0
GigabitEthernet 1/9    ---   No users    0
GigabitEthernet 1/10   ---   No users    0

SM8TAT2DPB#
    
```

privilege

SYNTAX

```
show privilege [ | {begin | exclude | include } <LINE>
```

Parameter

	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match

EXAMPLE

```
SM8TAT2DPB# show privilege
```

```
-----  
| The order is as the input sequence and |  
| the last one has the highest priority. |  
-----
```

```
privilege line level 5 LINE
```


pvlan

Show PVLAN status.

SYNTAX

```
show pvlan <range_list>
show pvlan isolation interface <port_type> <port_type_list>
```

Parameter

<range_list>	PVLAN id to show configuration for
isolation	show isolation configuration
<port_type >	GigabitEthernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show pvlan ?
  <range_list>    PVLAN ID to show configuration for
  isolation        show isolation configuration
  <cr>

SM8TAT2DPB# show pvlan
PVLAN ID  Ports
-----
1         GigabitEthernet 1/1, GigabitEthernet 1/2, GigabitEthernet 1/3,
          GigabitEthernet 1/4, GigabitEthernet 1/5, GigabitEthernet 1/6,
          GigabitEthernet 1/7, GigabitEthernet 1/8, GigabitEthernet 1/9,
          GigabitEthernet 1/10

SM8TAT2DPB# show pvlan isolation ?
  interface      List of port type and port ID, ex, Fast 1/1 Gigabit 2/3-5
                 Gigabit 3/2-4 Tengigabit 4/6
  <cr>
```

```
SM8TAT2DPB# show pvlan isolation
```

Port	Isolation
-----	-----
GigabitEthernet 1/1	Disabled
GigabitEthernet 1/2	Disabled
GigabitEthernet 1/3	Disabled
GigabitEthernet 1/4	Disabled
GigabitEthernet 1/5	Disabled
GigabitEthernet 1/6	Disabled
GigabitEthernet 1/7	Disabled
GigabitEthernet 1/8	Disabled
GigabitEthernet 1/9	Disabled
GigabitEthernet 1/10	Disabled

```
SM8TAT2DPB#
```

qos

Show Quality of Service data.

SYNTAX

```
show qos [ { interface [ <port_type> <port_type_list> ] } | wred | { maps [ dscp-cos ] [ dscp-ingress-translation ]
[ dscp-classify ] [ cos-dscp ] [ dscp-egress-translation ] } | storm | { qce [ <Qce : 1-256> ] } [ | {begin | exclude |
include } <LINE>
```

Parameter

interface	Interface
<port_type >	GigabitEthernet
*	All switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
maps	Global QoS Maps/Tables
qce	QoS Control Entry
storm	Storm policer
wred	Weighted Random Early Discard
cos-dscp	Map for cos to dscp
dscp-classify	Map for dscp classify enable
dscp-cos	Map for dscp to cos
dscp-egress-translation	Map for dscp egress translation
dscp-ingress-translation	Map for dscp ingress translation
<Qce : 1-256>	QCE ID
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```

SM8TAT2DPB# show qos ?
    |           Output modifiers
interface  Interface
maps       Global QoS Maps/Tables
qce        QoS Control Entry
storm      Storm policer
<cr>

SM8TAT2DPB# show qos storm
qos storm:
=====
Unicast   : disabled          1
Multicast : disabled          1
Broadcast : disabled          1
SM8TAT2DPB# show qos interface
interface GigabitEthernet 1/1
qos cos 0
qos pcp 0
qos dpl 0
qos dei 0
qos trust tag disabled
qos map tag-cos pcp 0 dei 0 cos 1 dpl 0
qos map tag-cos pcp 0 dei 1 cos 1 dpl 1
qos map tag-cos pcp 1 dei 0 cos 0 dpl 0
qos map tag-cos pcp 1 dei 1 cos 0 dpl 1
qos map tag-cos pcp 2 dei 0 cos 2 dpl 0
qos map tag-cos pcp 2 dei 1 cos 2 dpl 1
qos map tag-cos pcp 3 dei 0 cos 3 dpl 0
qos map tag-cos pcp 3 dei 1 cos 3 dpl 1
qos map tag-cos pcp 4 dei 0 cos 4 dpl 0
qos map tag-cos pcp 4 dei 1 cos 4 dpl 1
qos map tag-cos pcp 5 dei 0 cos 5 dpl 0
qos map tag-cos pcp 5 dei 1 cos 5 dpl 1
qos map tag-cos pcp 6 dei 0 cos 6 dpl 0
-- more --, next page: Space, continue: g, quit: ^C

```

radius-server

Display RADIUS configuration.

SYNTAX

```
show radius-server [statistics] [ | {begin | exclude | include } <LINE>
```

Parameter

statistics	RADIUS statistics
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show radius-server ?
|          Output modifiers
statistics  RADIUS statistics
<cr>

SM8TAT2DPB# show radius-server
Global RADIUS Server Timeout      : 5 seconds
Global RADIUS Server Retransmit   : 3 times
Global RADIUS Server Deadtime     : 0 minutes
Global RADIUS Server Key          :
Global RADIUS Server Attribute 4  :
Global RADIUS Server Attribute 95 :
Global RADIUS Server Attribute 32 :
No hosts configured!

SM8TAT2DPB# show radius-server statistics
Global RADIUS Server Timeout      : 5 seconds
Global RADIUS Server Retransmit   : 3 times
Global RADIUS Server Deadtime     : 0 minutes
Global RADIUS Server Key          :
Global RADIUS Server Attribute 4  :
Global RADIUS Server Attribute 95 :
Global RADIUS Server Attribute 32 :
No hosts configured!

SM8TAT2DPB#
```

rmon

Display RMON statistics.

SYNTAX

```
show rmon alarm [ <1~65535> ] [ | {begin | exclude | include } <LINE>
show rmon event [ <1~65535> ] [ | {begin | exclude | include } <LINE>
show rmon history [ <1~65535> ] [ | {begin | exclude | include } <LINE>
show rmon statistics [ <1~65535> ] [ | {begin | exclude | include } <LINE>
```

Parameter

alarm	Display the RMON alarm table
event	Display the RMON event table
history	Display the RMON history table
statistics	Display the RMON statistics table
<1~65535>	Alarm/Event/History/Statistics entry list
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show rmon ?
alarm      Display the RMON alarm table
event      Display the RMON event table
history     Display the RMON history table
statistics  Display the RMON statistics table

SM8TAT2DPB# show rmon alarm ?
<1~65535>  Alarm entry list
|          Output modifiers
<cr>

SM8TAT2DPB# show rmon event
SM8TAT2DPB# show rmon alarm
SM8TAT2DPB# show rmon history
SM8TAT2DPB# show rmon statistics
SM8TAT2DPB#
```

running-config

Show running system information.

SYNTAX

```

show running-config [ all-defaults ] [ | {begin | exclude | include } <LINE>
show running-config feature <CWORD> [ all-defaults ] [ | {begin | exclude | include } <LINE>
show running-config interface <port_type> <port_type_list> [ all-defaults ] [ | {begin | exclude | include } <LINE>
show running-config interface vlan <vlan_list> [ all-defaults ] [ | {begin | exclude | include } <LINE>
show running-config line { console | vty } <range_list> [ all-defaults ] [ | {begin | exclude | include } <LINE>
show running-config vlan <vlan_list> [ all-defaults ] [ | {begin | exclude | include } <LINE>

```

Parameter

all-defaults	Include most/all default values
feature	Show configuration for specific feature
interface	Show specific interface(s)
line	Show line settings
vlan	VLAN
CWORD	Valid words are 'GVRP' 'access' 'access-list' 'aggregation' 'arp-inspection' 'auth' 'clock' 'dhcp' 'dhcp-snooping' 'dns' 'dot1x' 'green-ethernet' 'http' 'icli' 'ip-igmp-snooping' 'ip-igmp-snooping-port' 'ip-igmp-snooping-vlan' 'ipmc-profile' 'ipmc-profile-range' 'ipv4' 'ipv6' 'ipv6-mld-snooping' 'ipv6-mld-snooping-port' 'ipv6-mld-snooping-vlan' 'lACP' 'lldp' 'logging' 'loop-protect' 'mac' 'mep' 'monitor' 'mstp' 'mvr' 'mvr-port' 'ntp' 'phy' 'poe' 'port' 'port-security' 'pvlan' 'qos' 'rmon' 'sflow' 'snmp' 'source-guard' 'ssh' 'system' 'upnp' 'user' 'vlan' 'voice-vlan' 'web-privilege-group-level'
<port_type >	GigabitEthernet
*	All switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
<vlan_list>	List of VLAN numbers
console	Console
vty	VTY
<range_list>	List of console/VTYs
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show running-config ?
|           Output modifiers
all-defaults  Include most/all default values
feature       Show configuration for specific feature
interface     Show specific interface(s)
line          Show line settings
vlan          VLAN
<cr>

SM8TAT2DPB# show running-config all-defaults ?
|           Output modifiers
<cr>

SM8TAT2DPB# show running-config all-defaults
Building configuration...
hostname SM8TAT2DPB
no logging on
no logging host
username admin privilege 15 password encrypted YWRtaW4=
username jefferson privilege 15 password none
no access management
no loop-protect
loop-protect transmit-time 5
loop-protect shutdown-time 180
no ip dhcp server
no ip dhcp server per-port
!
vlan 1
  name default
!
!
no ipmc profile
!
no ip routing
ip route 0.0.0.0 0.0.0.0 192.168.1.254
ip name-server 8.8.8.8
-- more --, next page: Space, continue: g, quit: ^C
```


sflow

Display Statistics flow information.

SYNTAX

```
show sflow [ statistics { receiver | samplers [[ <range_list> ] <port_type> <port_type_list> ] } ] [ {begin | exclude | include }
<LINE>
```

Parameter

statistics	sFlow statistics.
receiver	Show statistics for receiver.
samplers	Show statistics for samplers.
<range_list>	runtime, see sflow_ici_functions.c
<port_type >	GigabitEthernet
*	All switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show sflow
Agent Configuration:
=====
Agent Address: 127.0.0.1
Receiver Configuration:
=====
Owner       : <none>
Receiver    : 0.0.0.0
UDP Port    : 6343
Max. Datagram: 1400 bytes
Time left   : 0 seconds

No enabled collectors (receivers). Skipping displaying per-port info.
SM8TAT2DPB#
```

snmp

Display SNMP configurations.

SYNTAX

```

show snmp
show snmp access [ <GroupName : word32> { v1 | v2c | v3 | any } { auth | noauth | priv } ] [ | {begin | exclude | include } <LINE>
show snmp community v3 [ <Community : word127> ] [ | {begin | exclude | include } <LINE>
show snmp host [ <ConfName : word32> ] [ system ] [ switch ] [ interface ] [ aaa ] [ | {begin | exclude | include } <LINE>
show snmp security-to-group [ { v1 | v2c | v3 } <SecurityName : word32> ] [ | {begin | exclude | include } <LINE>
show snmp user [ <UserName : word32> <EngineId : word10-32> ] [ | {begin | exclude | include } <LINE>
show snmp view [ <ViewName : word32> <OidSubtree : word255> ] [ | {begin | exclude | include } <LINE>

```

Parameter

access	access configuration
<GroupName : word32>	Group name
v1	v1 security model
v2c	v2c security model
v3	v3 security model
any	any security model
auth	authNoPriv Security Level
noauth	noAuthNoPriv Security Level
priv	authPriv Security Level
community	Community
v3	SNMPv3
<Community : word127>	Specify community name
host	Set SNMP host's configurations
<ConfName : word32>	Name of the host configuration
system	System event group
switch	Switch event group
interface	Interface event group
aaa	AAA event group
security-to-group	security-to-group configuration
<SecurityName : word32>	security group name
user	User
<UserName : word32>	Security user name

<EngineId : word10-32>	Security Engine ID
view	MIB view configuration
<ViewName : word32>	MIB view name
<OidSubtree : word255>	MIB view OID
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show snmp ?
|                Output modifiers
access           access configuration
community       Community
host             Set SNMP host's configurations
mib             MIB(Management Information Base)
security-to-group security-to-group configuration
user            User
view            MIB view configuration
<cr>

SM8TAT2DPB# show snmp

SNMP Configuration
SNMP Mode          : enabled
SNMP Version       : 2c
Read Community     : public
Write Community    : private
Trap Mode          : disabled
Trap Version       : 1

SNMPv3 Communities Table:
Community         : public
Source IP         : 0.0.0.0
Source Mask       : 0.0.0.0

Community         : private
```

```
Source IP   : 0.0.0.0
```

```
Source Mask : 0.0.0.0
```

```
SNMPv3 Users Table:
```

```
User Name           : default_user
```

```
Engine ID           : 800007e5017f000001
```

```
-- more --, next page: Space, continue: g, quit: ^C
```

spanning-tree

Show STP Bridge configuration.

SYNTAX

```

show spanning-tree [ summary | active | { interface <port_type> <port_type_list> } | { detailed [ interface
<port_type> <port_type_list> ] } | { mst [ configuration | { <0-7> [ interface <port_type> <port_type_list> ] } ] } ] |
{begin | exclude | include } <LINE>

```

Parameter

summary	STP summary
active	STP active interfaces
interface	Choose port
<port_type>	Gigabitethernet
*	All switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
detailed	STP statistics
interface	List of port type and port ID, ex, 1/1-18
mst	Configuration
configuration	STP bridge instance no (0-7, CIST=0, MST2=1...)
<0-7>	Choose port
<port_type >	GigabitEthernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show spanning-tree ?
```

```

|           Output modifiers
active      STP active interfaces
detailed    STP statistics
interface   Choose port
mst         Configuration
summary     STP summary
<cr>
```

```
SM8TAT2DPB# show spanning-tree
```

```
CIST Bridge STP Status
```

```
Bridge ID    : 32768.00-40-C7-FE-07-DF
```

```
Root ID      : 32768.00-40-C7-FE-07-DF
```

```
Root Port    : -
```

```
Root PathCost: 0
```

```
Regional Root: 32768.00-40-C7-FE-07-DF
```

```
Int. PathCost: 0
```

```
Max Hops     : 20
```

```
TC Flag      : Steady
```

```
TC Count     : 0
```

```
TC Last      : -
```

Port	Port Role	State	Pri	PathCost	Edge	P2P	Uptime
Gi 1/1	DesignatedPort	Forwarding	128	20000	Yes	Yes	2048d 23:36:28

```
SM8TAT2DPB#
```

switchport

Display switching mode characteristics.

SYNTAX

```
show switchport forbidden [ { vlan <vlan_id> } | { name <word> } ] [ | {begin | exclude | include } <LINE>
```

Parameter

forbidden	Lookup VLAN Forbidden port entry.
name	name - Show forbidden access for specific VLAN name.
vlan	vid - Show forbidden access for specific VLAN id.
<vlan_id>	VLAN id
<word>	VLAN name
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show switchport forbidden ?
|      Output modifiers
name  name - Show forbidden access for specific VLAN name.
vlan  vid - Show forbidden access for specific VLAN id.
<cr>

SM8TAT2DPB# show switchport forbidden
Forbidden VLAN table is empty
SM8TAT2DPB#
```

tacacs-server

TACACS+ configuration.

SYNTAX

```
show tacacs-server [ | {begin | exclude | include } <LINE>
```

Parameter

	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show tacacs-server
Global TACACS+ Server Timeout      : 5 seconds
Global TACACS+ Server Deadtime     : 0 minutes
Global TACACS+ Server Key          :
No hosts configured!
SM8TAT2DPB#
```


system

Show system information.

SYNTAX

```
show system <cpu> <reboot> <cr>
```

Parameter

None

EXAMPLE

```
SM8TAT2DPB# show system
Model Name           : SM8TAT2DPB
System Description   : Managed Switch, 8-port Gigabit PoE+, 2-port SFP/RJ
-45 Combo
Location            :
Contact             :
System Name         : SM8TAT2DPB
System Date         : 2016-08-11T13:11:10 00:00
System Uptime       : 20:47:31
Bootloader Version  : v1.15f
Firmware Version    : v6.48.2057 2016-06-16
Hardware Version    : v1.01
Mechanical Version  : v1.01
Serial Number       : A065116AR2600011
MAC Address         : 00-40-c7-fe-07-df
Memory              : Total=84115 KBytes, Free=66063 KBytes, Max=65525 K
Bytes
FLASH               : 0x40000000-0x41ffffff, 512 x 0x10000 blocks
SM8TAT2DPB# show system cpu status
Average load in 100 ms : 0%
Average load in 1 sec  : 9%
Average load in 10 sec : 9%
```

```
SM8TAT2DPB# show system reboot
```

```
Switch Reboot Mode: Disable
```

```
Switch Reboot Entry:
```

	Reboot Time
Week Day	HH : MM
-----	-----
Monday	- -
Tuesday	- -
Wednesday	- -
Thursday	- -
Friday	- -
Saturday	- -
Sunday	- -

```
SM8TAT2DPB#
```

terminal

Show terminal configuration parameters.

SYNTAX

```
show terminal [ | {begin | exclude | include } <LINE>
```

Parameter

	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show terminal
Line is con 0.
  * You are at this line now.
  Alive from Console.
  Default privileged level is 2.
  Command line editing is disabled
  Display EXEC banner is enabled.
  Display Day banner is enabled.
  Terminal width is 80.
    length is 24.
    history size is 10.
    exec-timeout is 60 min 0 second.

  Current session privilege is 15.
  Elapsed time is 0 day 3 hour 32 min 25 sec.
  Idle time is 0 day 0 hour 0 min 0 sec.

SM8TAT2DPB#
```

upnp

Display UPnP configurations.

SYNTAX

```
show upnp [ | {begin | exclude | include } <LINE>
```

Parameter

	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show upnp
UPnP Mode           : Disabled
UPnP TTL            : 4
UPnP Advertising Duration : 100
SM8TAT2DPB#
```

users

Display information about terminal lines.

SYNTAX

```
show users myself [ | {begin | exclude | include } <LINE>
```

Parameter

myself	Display information about mine
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show users myself
Line is con 0.
  * You are at this line now.
  Connection is from Console.
  User name is admin.
  Privilege is 15.
  Elapsed time is 0 day 3 hour 34 min 22 sec.
  Idle time is 0 day 0 hour 0 min 0 sec.

SM8TAT2DPB#
```

version

Show system hardware and software status.

SYNTAX

```
show version [ | {begin | exclude | include } <LINE>
```

Parameter

	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show ver

MEMORY          : Total=82171 KBytes, Free=63554 KBytes, Max=62897 KBytes
FLASH           : 0x40000000-0x41ffffff, 512 x 0x10000 blocks
MAC Address     : 00-40-c7-1c-b6-46
Previous Restart : Cold

System Contact  :
System Name     : SM8TAT2DPB
System Location :
System Time     : 2011-01-01T22:11:09+00:00
System Uptime   : 22:11:09

Active Image
-----
Image           : managed
Version         : SM8TAT2DPB (standalone) v6.48.1652
Date            : 2015-12-03T21:20:09+08:00

Alternate Image
-----
Image           : managed.bk
Version         : SM8TAT2DPB (standalone) v6.40.1605
Date            : 2015-11-12T20:51:41+08:00

SM8TAT2DPB#
```

vlan

Display VLAN parameters.

SYNTAX

```

show vlan [ id <vlan_list> | name <vword32> | brief ]
show vlan protocol [ eth2 { <0x600-0xffff> | arp | ip | ipx | at } ] [ snap { <0x0-0xfffff> | rfc_1042 | snap_8021h }
<0x0-0xffff> ] [ llc <0x0-0xff> <0x0-0xff> ]
show vlan status [admin [interface] | all | combined | conflicts | gvrp | interface | mstp | mvr | nas | vcl | voice-vlan ]
[<port_type ><port_type_list>]

```

Parameter

id	VLAN status by VLAN id
<vlan_list>	VLAN IDs 1-4095
name	VLAN status by VLAN name
<vword32>	A VLAN name
brief	VLAN summary information
protocol	Protocol-based VLAN status
eth2	Ethernet protocol based VLAN status
<0x600-0xffff>	Ether Type(Range: 0x600 - 0xFFFF)
arp	Ether Type is ARP
ip	Ether Type is IP
ipx	Ether Type is IPX
at	Ether Type is AppleTalk
snap	SNAP-based VLAN status
<0x0-0xfffff>	SNAP OUI (Range 0x000000 - 0FFFFFFF)
rfc_1042	SNAP OUI is rfc_1042
snap_8021h	SNAP OUI is 8021h
<0x0-0xffff>	PID (Range: 0x0 - 0xFFFF)
llc	LLC-based VLAN status
<0x0-0xff>	DSAP (Range: 0x00 - 0xFF)
<0x0-0xff>	SSAP (Range: 0x00 - 0xFF)
admin	Show the VLANs configured by administrator.
all	Show all VLANs configured.
combined	Show the VLANs configured by a combination.
conflicts	Show VLANs configurations that has conflicts.
gvrp	Show the VLANs configured by GVRP.
interface	Show the VLANs configured for a specific interface(s).

mstp	Show the VLANs configured by MSTP.
mvr	Show the VLANs configured by MVR.
nas	Show the VLANs configured by NAS.
vcl	Show the VLANs configured by VCL.
voice-vlan	Show the VLANs configured by Voice VLAN.
interface	Show the VLANs configured for a specific interface(s).
<port_type >	GigabitEthernet
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet

EXAMPLE

```
SM8TAT2DPB# show vlan ?
```

```

brief      VLAN summary information
id         VLAN status by VLAN id
ip-subnet  Show VLAN ip-subnet entries.
mac        Show VLAN MAC entries.
membership VLAN membership
name       VLAN status by VLAN name
protocol   Protocol-based VLAN status
status     Show the VLANs configured for each interface.
<cr>
```

```
SM8TAT2DPB# show vlan brief
```

```

VLAN  Name                               Interfaces
----  -
1     default                               Gi 1/1-10
```

```
SM8TAT2DPB# show vlan id 1
```

```

VLAN  Name                               Interfaces
----  -
1     default                               Gi 1/1-10
```

```
SM8TAT2DPB# show vlan membership ?
```

```

admin      Show the VLANs configured by administrator
combined   Show the VLANs configured by a combination
forbidden  Show VLANs configurations that has forbidden
gvrp       Show the VLANs configured by GVRP
id         VLAN membership by VLAN id
```



```
mvr          Show the VLANs configured by MVR
name        VLAN membership by VLAN name
nas         Show the VLANs configured by NAS
voice-vlan  Show the VLANs configured by Voice VLAN
<cr>
SM8TAT2DPB#
```

voice

Show Voice VLAN attributes.

SYNTAX

```
show voice vlan [ oui <oui> | interface <port_type> <port_type_list> ] [ | {begin | exclude | include } <LINE>
```

Parameter

vlan	Vlan for voice traffic
oui	OUI configuration
<oui>	OUI value
interface	Select an interface to configure
<port_type>	* or Gigabitethernet
*	All Switches or All ports
Gigabitethernet	1 Gigabit Ethernet Port
<port_type_list>	Port list in 1/1-18 for Gigabitethernet
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show voice vlan
Switch voice vlan is disabled
Switch voice vlan ID is 1000
Switch voice vlan aging-time is 86400 seconds
Switch voice vlan traffic class is 7

Telephony OUI  Description
-----  -----

Voice VLAN switchport is configured on following:

GigabitEthernet 1/1 :
-----
GigabitEthernet 1/1 switchport voice vlan mode is disabled
GigabitEthernet 1/1 switchport voice security is disabled
GigabitEthernet 1/1 switchport voice discovery protocol is oui
```

```
GigabitEthernet 1/2 :  
-----  
GigabitEthernet 1/2 switchport voice vlan mode is disabled  
GigabitEthernet 1/2 switchport voice security is disabled  
GigabitEthernet 1/2 switchport voice discovery protocol is oui  
  
-- more --, next page: Space, continue: g, quit: ^C
```

web

Display web privileges.

SYNTAX

```
show web privilege group [ <word> ] level [ | {begin | exclude | include } <LINE>
```

Parameter

privilege	Web privilege
group	Web privilege group
CWORD	Valid words are 'Aggregation' 'DHCP' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'GARP' 'GVRP' 'Green_Ethernet' 'IP2' 'IPMC_Snooping' 'LACP' 'LLDP' 'Loop_Protect' 'MAC_Table' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'POE' 'Ports' 'Private_VLANs' 'QoS' 'RPC' 'Security' 'Spanning_Tree' 'System' 'Timer' 'UPnP' 'VCL' 'VLANs' 'Voice_VLAN' 'XXRP' 'sFlow' 'sFlow'
level	Web privilege group level
 	Output modifiers
begin	Begin with the line that matches
exclude	Exclude lines that match
include	Include lines that match
<LINE>	String to match output lines

EXAMPLE

```
SM8TAT2DPB# show web privilege group ?
  CWORD  Valid words are 'ACTIVATE' 'Aggregation' 'DHCP' 'DMS_client'
         'DMS_server' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'GARP'
         'GVRP' 'Green_Ethernet' 'IP2' 'IPMC_Snooping'
         'IP_Phone_Auto_Provisioning' 'LACP' 'LLDP' 'Loop_Protect'
         'MAC_Table' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'POE' 'Ports'
         'Private_VLANs' 'QoS' 'RPC' 'SMTP' 'Security' 'Spanning_Tree'
         'System' 'TS_client' 'TS_server' 'Timer' 'Trap_Event'
         'Trouble_Shooting' 'UPnP' 'VCL' 'VLANs' 'VTUN' 'Voice_VLAN' 'XXRP'
         'cloud_management' 'sFlow'
  level  Web privilege group level
```

```

SM8TAT2DPB# show web privilege group level ?
|      Output modifiers
<cr>
SM8TAT2DPB# show web privilege group level
Group Name                Privilege Level
                          CRO CRW SRO SRW
-----
ACTIVATE                  5 10  5 10
Aggregation               5 10  5 10
cloud_management          5 10  5 10
Debug                    15 15 15 15
DHCP                      5 10  5 10
Dhcp_Client               5 10  5 10
Diagnostics               5 10  5 10
DMS_client                5 10  5 10
DMS_server                5 10  5 10
EEE                       5 10  5 10
GARP                      5 10  5 10
Green_Ethernet            5 10  5 10
GVRP                      5 10  5 10
IP2                       5 10  5 10
IP_Phone_Auto_Provisioning 5 10  5 10
IPMC_Snooping             5 10  5 10
LACP                      5 10  5 10
LLDP                      5 10  5 10
Loop_Protect              5 10  5 10
-- more --, next page: Space, continue: g, quit: ^C
    
```

18

TERMINAL Commands

Set terminal line parameters

Syntax

terminal editing

terminal exec-timeout <0-1440> [<0-3600>]

terminal help

terminal history size <0-32>

terminal length <0 or 3-512>

terminal width <0 or 40-512>

Parameter

editing	Enable command line editing
exec-timeout	Set the EXEC timeout
help	Description of the interactive help system
history	Control the command history function
length	Set number of lines on a screen
width	Set width of the display terminal
<0-1440>	Timeout in minutes
<0-3600>	Timeout in seconds
size	Set history buffer size
<0-32>	Number of history commands, 0 means disable
<0 or 3-512>	Number of lines on screen (0 for no pausing)
<0 or 40-512>	Number of characters on a screen line (0 for unlimited width)

EXAMPLE

SM8TAT2DPB# **terminal ?**

editing	Enable command line editing
exec-timeout	Set the EXEC timeout
help	Description of the interactive help system
history	Control the command history function
length	Set number of lines on a screen
width	Set width of the display terminal

SM8TAT2DPB# **terminal exec-timeout ?**

<0-1440> Timeout in minutes

SM8TAT2DPB# **terminal exec-timeout 60 ?**

<0-3600> Timeout in seconds

<cr>

SM8TAT2DPB# **terminal exec-timeout 60**

SM8TAT2DPB# **terminal history size 10**

SM8TAT2DPB# **terminal help**

Help may be requested at any point in a command by entering a question mark '?'. If nothing matches, the help list will be empty and you must backup until entering a '?' shows the available options.

Two styles of help are provided:

1. Full help is available when you are ready to enter a command argument (e.g. 'show ?') and describes each possible argument.
2. Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. 'show pr?'.)

SM8TAT2DPB#

19 IP Commands

IPv4 command.

Syntax

```
ip dhcp retry interface vlan <vlan_id>
```

Parameter

dhcp	Dhcp command
retry	Restart the DHCP query process
interface	Interface
vlan	Vlan interface
<vlan_id>	Vlan ID

EXAMPLE

```
SM8TAT2DPB# ip dhcp retry interface vlan 1
% Failed to restart DHCP client on VLAN = 1.
SM8TAT2DPB#
```


20

Traceroute Commands

Copy from source to destination

SYNTAX

```
traceroute ip <v_ip_addr> [ protocol { icmp | udp | tcp } ] [ wait <v_wait_time> ] [ ttl <v_max_ttl> ] [ nqueries <v_nqueries> ]
```

Parameter

ip	IP
<word1-255>	destination address
nqueries	Specify number of probe packets
protocol	Specify protocol including icmp, udp and tcp
ttl	Specify max TTL
wait	Specify wait time

EXAMPLE

```
SM8TAT2DPB# traceroute ip 22 nqueries 3 protocol icmp ttl 3 wait 3  
traceroute to 22 (0.0.0.22), 3 hops max, 140 byte packets  
1 * * *  
2 * * *  
3 * * *  
SM8TAT2DPB#
```

21 CLI Command Reference

This chapter introduces the CLI privilege levels and command modes.

- The privilege level determines whether or not the user can run the particular commands;
- If you can run the particular command, then you must run the command in the correct mode.

21.1 Privilege Level

Every command has a privilege level (0-15). You can run a command if the session's privilege level is greater than or equal to the command's privilege level. The session's privilege level initially comes from the login account's privilege level; it is possible to change the session's privilege level after logging in.

Privilege Level	Types of Commands at This Privilege Level
0	Display basic system information
13	Configure features except for login accounts, the authentication method sequence, multiple logins, and administrator and enable passwords.
15	Configure login accounts, the authentication method sequence, multiple logins, and administrator and enable passwords.

21.2 Command Modes

The CLI is divided into several modes. If a user has enough privilege to run a particular command, they have to run the command in the correct mode. The modes available depend on the session's privilege level.

Mode	Prompt	Command Function in This Mode
exec	<sys_name>#	Display current config, diagnostics, maintenance
config	<sys_name>(config)#	Configure features other than those below
Config-if	<sys_name>(config-interface)#	Configure ports
Config-if-vlan	<sys_name>(config-if-vlan)#	Configure static vlan
Config-line	<sys_name>(config-line)#	Line Configuration
Config-impcc-profile	<sys_name>(config-impcc-profile)#	IPMC Profile
Config-snmp-host	<sys_name>(config-snmp-host)#	SNMP Server Host
Config-stp-aggr	<sys_name>(config-stp-aggr)#	STP Aggregation
Config-dhcp-pool	<sys_name>(config-dhcp-pool)#	DHCP Pool Configuration
Config-rfc2544-profile	<sys_name>(config-rfc2544-profile)#	RFC2544 Profile

21.3 Command Summary

COMMAND	DESCRIPTION	P	M
show access management	Use the show access management user EXEC command without keywords to display the access management configuration, or use the statistics keyword to display statistics, or use the <AccessId> keyword to display the specific access management entry.	15	EXEC
clear access management statistics	Use the clear access management statistics privileged EXEC command to clear the statistics maintained by access management.	15	EXEC
access management	Use the access management global configuration command to enable the access management. Use the no form of this command to disable the access management.	15	GLOBAL_CONFIG
access management <1-16> <1-4094> <ipv4_addr> [to <ipv4_addr>] { [web] [snmp] [telnet] all }	Use the access management <AccessId> global configuration command to set the access management entry for IPv4 address.	15	GLOBAL_CONFIG
access management <1-16> <1-4094> <ipv6_addr> [to <ipv6_addr>] { [web] [snmp] [telnet] all }	Use the access management <AccessId> global configuration command to set the access management entry for IPv6 address.	15	GLOBAL_CONFIG
no access management <1~16>	Use the no access management <AccessIdList> global configuration command to delete the specific access management entry.	15	GLOBAL_CONFIG
access-list action { permit deny }	Use the access-list action interface configuration command to configure access-list action. The access-list interface configuration will affect the received frames if it doesn't match any	15	INTERFACE_PORT_LIST

	ACE.		
access-list rate-limiter <1-16>	Use the access-list rate-limiter interface configuration command to configure the access-list rate-limiter ID . The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
no access-list rate-limiter	Use the no access-list rate-limiter interface configuration command to disable the access-list rate-limiter. The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
access-list { redirect port-copy } interface { <port_type_id> <port_type_list> }	Use the no access-list redirect interface configuration command to configure the access-list redirect interface.	15	INTERFACE_PORT_LIST
no access-list { redirect port-copy }	Use the no access-list redirect interface configuration command to disable the access-list redirect. The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
access-list mirror	Use the access-list mirror interface configuration command to enable access-list mirror. Use the no form of this command to disable access-list mirror. The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
access-list logging	Use the access-list logging interface configuration command to enable access-list logging. Use the no form of this command to disable access-list logging. The access-list interface configuration will affect the received	15	INTERFACE_PORT_LIST

	frames if it doesn't match any ACE.		
access-list shutdown	Use the access-list shutdown interface configuration command to enable access-list shutdown. Use the no form of this command to disable access-list shutdown. The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
access-list evc-policer <1-256>	Use the access-list evc-policer interface configuration command to configure the access-list evc-policer ID. The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
no access-list evc-policer	Use the no access-list evc-policer interface configuration command to configure the access-list evc-policer ID. The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
access-list policy <0-255>	Use the access-list policy interface configuration command to configure the access-list policy value. The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
no access-list policy	Use the no access-list policy interface configuration command to restore the default access-list policy ID. The access-list interface configuration will affect the received frames if it doesn't match any ACE.	15	INTERFACE_PORT_LIST
access-list port-state	Use the access-list port-state interface configuration command to enable access-list port state. Use the no form of	15	INTERFACE_PORT_LIST

	this command to disable access-list port state.		
access-list rate-limiter [<1~16>] { pps <1,2,4,8,16,32,64,128,256,512> 100pps <1-32767> kpps <1,2,4,8,16,32,64,128,256,512,1024> 100kbps <0-10000> }	Use the access-list rate-limiter global configuration command to configure the access-list rate-limiter.	15	INTERFACE_PORT_LIST
default access-list rate-limiter [<1~16>]	Use the default access-list rate-limiter global configuration command to restore the default setting of access-list rate-limiter.	15	GLOBAL_CONFIG
access-list ace [update] <1-256> [next {<1-256> last}] [ingress {switch <switch_id> switchport {<1-53> <1-53>}} interface {<port_type_id> <port_type_list>} any]] [policy <0-255> [policy-bitmask <0x0-0xFF>]] [tag {tagged untagged any}} [vid {<1-4095> any}} [tag-priority {<0-7> 0-1 2-3 4-5 6-7 0-3 4-7 any}} [dmac-type {unicast multicast broadcast any}} [frametype { any} etype [etype-value {<0x600-0x7ff,0x801-0x805,0x807-0x86dc,0x86de-0xffff>} any}} [smac {<mac_addr> any}} [dmac {<mac_addr> any}}] [arp [sip {<ipv4_subnet> any}} [dip {<ipv4_subnet> any}} [smac {<mac_addr> any}} [arp-opcode {arp rarp other any}}] [arp-flag [arp-request {<0-1> any}}] [arp-smac {<0-1> any}}] [arp-tmac {<0-1> any}}] [arp-len {<0-1> any}}] [arp-ip {<0-1> any}}] [arp-ether {<0-1> any}}]]] ipv4 [sip {<ipv4_subnet> any}}] [dip {<ipv4_subnet> any}}] [ip-protocol {<0,2-5,7-16,18-255> any}}] [ip-flag [ip-ttl {<0-1> any}}] [ip-options {<0-1> any}}] [ip-fragment {<0-1> any}}]]] ipv4-icmp [sip {<ipv4_subnet> any}}] [dip {<ipv4_subnet> any}}] [icmp-type {<0-255> any}}] [icmp-code	Use the access-list ace global configuration command to set the access-list ace. The command without the update keyword will create or overwrite an existing ACE, any unspecified parameter will be set to its default value. Use the update keyword to update an existing ACE and only specified parameter are modified. The ACE must be ordered by an appropriate sequence, the received frame will only be hit on the first matched ACE. Use the next or last keyword to adjust the ACE's sequence order.	15	GLOBAL_CONFIG

<pre> {<0-255> any}} [ip-flag [ip-ttl {<0-1> any}} [[ip-options {<0-1> any}} [ip-fragment {<0-1> any}}]]] ipv4-udp [sip {<ipv4_subnet> any}} [dip {<ipv4_subnet> any}} [sport {<0-65535> [to <0-65535>] any}}] [dport {<0-65535> [to <0-65535>] any}}] [ip-flag [ip-ttl {<0-1> any}} [[ip-options {<0-1> any}} [ip-fragment {<0-1> any}}]]] ipv4-tcp [sip {<ipv4_subnet> any}} [dip {<ipv4_subnet> any}} [sport {<0-65535> [to <0-65535>] any}}] [dport {<0-65535> [to <0-65535>] any}}] [ip-flag [ip-ttl {<0-1> any}} [[ip-options {<0-1> any}} [ip-fragment {<0-1> any}}]]] [tcp-flag [tcp-fin {<0-1> any}}] [tcp-syn {<0-1> any}}] [tcp-rst {<0-1> any}}] [tcp-psh {<0-1> any}}] [tcp-ack {<0-1> any}}] [tcp-urg {<0-1> any}}]]] ipv6 [next-header {<0-5,7-16,18-57,59-255> any}}] [sip {<ipv6_addr> [sip-bitmask <uint>] any}}] [hop-limit {<0-1> any}}] ipv6-icmp [sip {<ipv6_addr> [sip-bitmask <uint>] any}}] [icmp-type {<0-255> any}}] [icmp-code {<0-255> any}}] [hop-limit {<0-1> any}}] ipv6-udp [sip {<ipv6_addr> [sip-bitmask <uint>] any}}] [sport {<0-65535> [to <0-65535>] any}}] [dport {<0-65535> [to <0-65535>] any}}] [hop-limit {<0-1> any}}] ipv6-tcp [sip {<ipv6_addr> [sip-bitmask <uint>] any}}] [sport {<0-65535> [to <0-65535>] any}}] [dport {<0-65535> [to <0-65535>] any}}] [hop-limit {<0-1> any}}] [tcp-flag [tcp-fin {<0-1> any}}] [tcp-syn {<0-1> any}}] [tcp-rst {<0-1> any}}] [tcp-psh {<0-1> any}}] [tcp-ack {<0-1> any}}] [tcp-urg {<0-1> any}}]]] [action {permit deny filter {switchport <1~53> interface <port_type_list>}}] [rate-limiter {<1-16> disable}}] [evc-policer {<1-256> disable}}] [{redirect port-copy} {switchport {<1-53> <1~53>} interface </pre>			
---	--	--	--

{<port_type_id> <port_type_list>}[disable]] [mirror [disable]] [logging [disable]] [shutdown [disable]] [lookup [disable]]			
no access-list ace <1~256>	Use the no access-list ace global configuration command to delete the access-list ace.	15	GLOBAL_CONFIG
show access-list [interface [<port_type_list>]] [rate-limiter [<1~16>]] [ace statistics [<1~256>]]	Use the show access-list privilege EXEC command without keywords to display the access-list configuration, or particularly the show access-list interface for the access-list interface configuration, or use the rate-limiter keyword to display access-list rate-limiter configuration, or use the ace keyword to display access-list ace configuration.	15	EXEC
clear access-list ace statistics	Use the clear access-list ace statistics privileged EXEC command to clear the statistics maintained by access-list, including access-list interface statistics and ACE's statistics.	15	EXEC
show access-list ace-status [static] [link-oam] [loop-protect] [dhcp] [ptp] [upnp] [arp-inspection] [mep] [ipmc] [ip-source-guard] [ip-mgmt] [conflicts] [switch <switch_list>]	Use the show access-list ace-status privilege EXEC command without keywords to display the access-list ace status for all access-list users, or particularly the access-list user for the access-list ace status. Use conflicts keyword to display the access-list ace that doesn't apply on on the hardware. In other word, it means the specific ACE is not applied to the hardware due to hardware limitations.	15	EXEC
show aggregation [mode]		15	EXEC
aggregation mode { [smac] [dmac] [ip] [port] }		15	GLOBAL_CONFIG
no aggregation mode		15	GLOBAL_CONFIG

aggregation group <uint>		15	INTERFACE_PORT_LIST
no aggregation group		15	INTERFACE_PORT_LIST
ip arp inspection	Use the ip arp inspection global configuration command to globally enable ARP inspection. Use the no form of this command to globally disable ARP inspection.	13	GLOBAL_CONFIG
ip arp inspection vlan <vlan_list>	Use the ip arp inspection global configuration command to globally enable ARP inspection. Use the no form of this command to globally disable ARP inspection.	13	GLOBAL_CONFIG
ip arp inspection vlan <vlan_list> logging { deny permit all }		13	GLOBAL_CONFIG
no ip arp inspection vlan <vlan_list> logging		13	GLOBAL_CONFIG
ip arp inspection entry interface <port_type_id> <vlan_id> <mac_ucast> <ipv4_ucast>		13	GLOBAL_CONFIG
arp_inspection_translate		13	GLOBAL_CONFIG
arp_inspection_port_mode	Use the ip arp inspection trust interface configuration command to configure a port as trusted for ARP inspection purposes. Use the no form of this command to configure a port as untrusted.	13	INTERFACE_PORT_LIST
arp_inspection_port_check_vlan	Use the ip arp inspection check-vlan interface configuration command to configure a port as VLAN mode for ARP inspection purposes. Use the no form of this command to configure a port as default.	13	INTERFACE_PORT_LIST
ip arp inspection logging { deny permit all }	Use the ip arp inspection logging interface configuration command to configure a port as some logging mode for ARP inspection purposes. Use the no form of this command to configure a	13	INTERFACE_PORT_LIST

	port as logging none.		
no ip arp inspection logging	Use the no ip arp inspection logging interface configuration command to configure a port as default logging mode for ARP inspection purposes.	13	INTERFACE_PORT_LIST
show ip arp inspection [interface <port_type_list> vlan <vlan_list>]		0	EXEC
show ip arp inspection entry [dhcp-snooping static] [interface <port_type_list>]		13	EXEC
aaa authentication login { console telnet ssh http } { [local radius tacacs] ... }	Use the aaa authentication login command to configure the authentication methods.	15	GLOBAL_CONFIG
no aaa authentication login { console telnet ssh http }		15	GLOBAL_CONFIG
radius-server timeout <1-1000>	Use the radius-server timeout command to configure the global RADIUS timeout value.	15	GLOBAL_CONFIG
no radius-server timeout	Use the no radius-server timeout command to reset the global RADIUS timeout value to default.	15	GLOBAL_CONFIG
radius-server retransmit <1-1000>	Use the radius-server retransmit command to configure the global RADIUS retransmit value.	15	GLOBAL_CONFIG
no radius-server retransmit	Use the no radius-server retransmit command to reset the global RADIUS retransmit value to default.	15	GLOBAL_CONFIG
radius-server deadtime <1-1440>	Use the radius-server deadtime command to configure the global RADIUS deadtime value.	15	GLOBAL_CONFIG
no radius-server deadtime	Use the no radius-server deadtime command to reset the global RADIUS deadtime value to default.	15	GLOBAL_CONFIG
radius-server key <line1-63>	Use the radius-server key command to configure the global RADIUS key.	15	GLOBAL_CONFIG
no radius-server key	Use the no radius-server key command	15	GLOBAL_CONFIG

	to remove the global RADIUS key.		
radius-server attribute 4 <ipv4_ucast>		15	GLOBAL_CONFIG
no radius-server attribute 4		15	GLOBAL_CONFIG
radius-server attribute 95 <ipv6_ucast>		15	GLOBAL_CONFIG
no radius-server attribute 95		15	GLOBAL_CONFIG
radius-server attribute 32 <line1-253>		15	GLOBAL_CONFIG
no radius-server attribute 32		15	GLOBAL_CONFIG
radius-server host <word1-255> [auth-port <0-65535>] [acct-port <0-65535>] [timeout <1-1000>] [retransmit <1-1000>] [key <line1-63>]	Use the radius-server host command to add a new RADIUS host.	15	GLOBAL_CONFIG
no radius-server host <word1-255> [auth-port <0-65535>] [acct-port <0-65535>]	Use the no radius-server host command to delete an existing RADIUS host.	15	GLOBAL_CONFIG
tacacs-server timeout <1-1000>	Use the tacacs-server timeout command to configure the global TACACS+ timeout value.	15	GLOBAL_CONFIG
no tacacs-server timeout	Use the no tacacs-server timeout command to reset the global TACACS+ timeout value to default.	15	GLOBAL_CONFIG
tacacs-server deadtime <1-1440>	Use the tacacs-server deadtime command to configure the global TACACS+ deadtime value.	15	GLOBAL_CONFIG
no tacacs-server deadtime	Use the no tacacs-server deadtime command to reset the global TACACS+ deadtime value to default.	15	GLOBAL_CONFIG
tacacs-server key <line1-63>	Use the tacacs-server key command to configure the global TACACS+ key.	15	GLOBAL_CONFIG
no tacacs-server key	Use the no tacacs-server key command to remove the global TACACS+ key.	15	GLOBAL_CONFIG
tacacs-server host <word1-255> [port <0-65535>] [timeout <1-1000>] [key <line1-63>]	Use the tacacs-server host command to add a new TACACS+ host.	15	GLOBAL_CONFIG
no tacacs-server host <word1-255> [port <0-65535>]	Use the no tacacs-server host command to delete an existing TACACS+ host.	15	GLOBAL_CONFIG
show aaa	Use the show aaa command to view the currently active authentication login	15	GLOBAL_CONFIG

	methods.		
show radius-server [statistics]	Use the show radius-server command to view the current RADIUS configuration and statistics.	15	EXEC
show tacacs-server	Use the show tacacs-server command to view the current TACACS+ configuration.	15	EXEC
debug auth { console telnet ssh http } <word31> [<word31>]		debug	EXEC
clock summer-time <word16> recurring [<1-5> <1-7> <1-12> <hhmm> <1-5> <1-7> <1-12> <hhmm> [<1-1440>]]		13	GLOBAL_CONFIG
clock summer-time <word16> date [<1-12> <1-31> <2000-2097> <hhmm> <1-12> <1-31> <2000-2097> <hhmm> [<1-1440>]]		13	GLOBAL_CONFIG
no clock summer-time		13	GLOBAL_CONFIG
clock timezone <word16> <-23-23> [<0-59>]		13	GLOBAL_CONFIG
no clock timezone		13	GLOBAL_CONFIG
show clock detail		0	EXEC
clock summer-time <word16> recurring [<1-5> <1-7> <1-12> <hhmm> <1-5> <1-7> <1-12> <hhmm> [<1-1440>]]		13	GLOBAL_CONFIG
clock summer-time <word16> date [<1-12> <1-31> <2000-2097> <hhmm> <1-12> <1-31> <2000-2097> <hhmm> [<1-1440>]]		13	GLOBAL_CONFIG
no clock summer-time		13	GLOBAL_CONFIG
clock timezone <word16> <-23-23> [<0-59>]		13	GLOBAL_CONFIG
no clock timezone		13	GLOBAL_CONFIG
show clock detail		0	EXEC
show ip dhcp detailed statistics { server client snooping relay normal-forward combined } [interface <port_type_list>]	Use the show ip dhcp detailed statistics user EXEC command to display statistics. Notice that the normal forward per-port TX statistics isn't increased if the incoming DHCP packet is done by L3 forwarding mechanism. Notice that	0	EXEC

	the normal forward per-port TX statistics isn't increased if the incoming DHCP packet is done by L3 forwarding mechanism.		
clear ip dhcp detailed statistics { server client snooping relay helper all } [interface <port_type_list>]	Use the clear ip dhcp detailed statistics privileged EXEC command to clear the statistics, or particularly the IP DHCP statistics for the interface. Notice that except for clear statistics on all interfaces, clear the statistics on specific port may not take effect on global statistics since it gathers the different layer overview.	15	EXEC
clear ip dhcp relay statistics	Use the clear ip dhcp relay statistics privileged EXEC command to clear the statistics maintained by IP DHCP relay.	15	EXEC
show ip dhcp relay [statistics]	Use the show ip dhcp relay user EXEC command without keywords to display the DHCP relay configuration, or use the statistics keyword to display statistics.	0	EXEC
ip dhcp relay	Use the ip dhcp relay global configuration command to enable the DHCP relay server. Use the no form of this command to disable the DHCP relay server.	15	GLOBAL_CONFIG
ip helper-address <ipv4_ucast>	Use the ip helper-address global configuration command to configure the host address of DHCP relay server.	15	GLOBAL_CONFIG
no ip helper-address	Use the no ip helper-address global configuration command to clear the host address of DHCP relay server.	15	GLOBAL_CONFIG
ip dhcp relay information option	Use the ip dhcp relay information option global configuration command to enable the DHCP relay information option. Use the no form of this command to disable	15	GLOBAL_CONFIG

	<p>the DHCP relay information option.</p> <p>The option 82 circuit ID format as "[vlan_id][module_id][port_no]". The first four characters represent the VLAN ID, the fifth and sixth characters are the module ID (always equal 0), and the last two characters are the port number.</p> <p>For example, "00030108" means the DHCP message receive form VLAN ID 3, switch ID 1, port No 8. And the option 82 remote ID value is equal the switch MAC address.</p>		
<pre>ip dhcp relay information policy { drop keep replace }</pre>	<p>Use the ip dhcp relay information policy global configuration command to configure the DHCP relay information policy. When DHCP relay information mode operation is enabled, if the agent receives a DHCP message that already contains relay agent information it will enforce the policy. The 'Replace' policy is invalid when relay information mode is disabled.</p>	15	GLOBAL_CONFIG
<pre>no ip dhcp relay information policy</pre>	<p>Use the ip dhcp relay information policy global configuration command to restore the default DHCP relay information policy.</p>	15	GLOBAL_CONFIG
<pre>show ip dhcp pool [<word32>]</pre>		0	EXEC
<pre>show ip dhcp pool counter [<word32>]</pre>		debug	EXEC
<pre>show ip dhcp excluded-address</pre>		0	EXEC
<pre>show ip dhcp server binding [state {allocated committed expired}] [type {automatic manual expired}]</pre>		0	EXEC
<pre>show ip dhcp server binding <ipv4_ucast></pre>		0	EXEC
<pre>show ip dhcp server</pre>		0	EXEC
<pre>show ip dhcp server statistics</pre>		0	EXEC

show ip dhcp server declined-ip		0	EXEC
show ip dhcp server declined-ip <ipv4_addr>		0	EXEC
clear ip dhcp server binding <ipv4_ucast>		13	EXEC
clear ip dhcp server binding { automatic manual expired }		13	EXEC
clear ip dhcp server statistics		13	EXEC
ip dhcp server		13	GLOBAL_CONFIG
ip dhcp excluded-address <ipv4_addr> [<ipv4_addr>]		13	GLOBAL_CONFIG
no ip dhcp pool <word32>		13	GLOBAL_CONFIG
ip dhcp server		13	INTERFACE_VLAN
network <ipv4_addr> <ipv4_netmask>		13	DHCP_POOL
no network		13	DHCP_POOL
broadcast <ipv4_addr>		13	DHCP_POOL
no broadcast		13	DHCP_POOL
default-router <ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast>]]]		13	DHCP_POOL
no default-router		13	DHCP_POOL
lease { <0-365> [<0-23> [<uint>]] infinite }		13	DHCP_POOL
no lease		13	DHCP_POOL
domain-name <word128>		13	DHCP_POOL
no domain-name		13	DHCP_POOL
dns-server <ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast>]]]		13	DHCP_POOL
no dns-server		13	DHCP_POOL
ntp-server <ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast>]]]		13	DHCP_POOL
no ntp-server		13	DHCP_POOL
netbios-name-server <ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast>]]]		13	DHCP_POOL
no netbios-name-server		13	DHCP_POOL
netbios-node-type { b-node h-node m-node p-node }		13	DHCP_POOL
no netbios-node-type		13	DHCP_POOL
netbios-scope <line128>		13	DHCP_POOL

no netbios-scope		13	DHCP_POOL
nis-domain-name <word128>		13	DHCP_POOL
no nis-domain-name		13	DHCP_POOL
nis-server <ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast> [<ipv4_ucast>]]]		13	DHCP_POOL
no nis-server		13	DHCP_POOL
host <ipv4_ucast> <ipv4_netmask>		13	DHCP_POOL
no host		13	DHCP_POOL
client-identifier { fqdn <line128> mac-address <mac_addr> }		13	DHCP_POOL
no client-identifier		13	DHCP_POOL
hardware-address <mac_ucast>		13	DHCP_POOL
no hardware-address		13	DHCP_POOL
client-name <word32>		13	DHCP_POOL
no client-name		13	DHCP_POOL
vendor class-identifier <string64> specific-info <hexval32>		13	DHCP_POOL
no vendor class-identifier <string64>		13	DHCP_POOL
debug dhcp server memsize		debug	EXEC
debug dhcp server declined add <ipv4_addr>		debug	EXEC
debug dhcp server declined delete <ipv4_addr>		debug	EXEC
show ip dhcp snooping [interface <port_type_list>]	Use the show ip dhcp snooping user EXEC command to display the DHCP snooping configuration.	0	EXEC
show ip dhcp snooping [statistics] [interface <port_type_list>]	Use the show ip dhcp snooping user EXEC command without keywords to display the DHCP snooping configuration, or particularly the ip dhcp snooping statistics for the interface, or use the statistics keyword to display statistics.	0	EXEC
clear ip dhcp snooping statistics [interface <port_type_list>]	Use the clear ip dhcp snooping statistics privileged EXEC command to clear the statistics maintained by IP DHCP snooping, or particularly the IP DHCP	15	EXEC

	snooping statistics for the interface.		
ip dhcp snooping	Use the ip dhcp snooping global configuration command to globally enable DHCP snooping. Use the no form of this command to globally disable DHCP snooping.	15	GLOBAL_CONFIG
dhcp_snooping_port_mode	Use the ip dhcp snooping trust interface configuration command to configure a port as trusted for DHCP snooping purposes. Use the no form of this command to configure a port as untrusted.	15	INTERFACE_PORT_LIST
show ip dhcp snooping table	Use the show ip dhcp snooping table user EXEC command to display the IP assigned information that is obtained from DHCP server except for local VLAN interface IP addresses.	15	EXEC
ip name-server { <ipv4_ucast> dhcp [interface vlan <vlan_id>] }	Set the DNS server for resolving domain names	15	GLOBAL_CONFIG
no ip name-server	Stop resolving domain names by accessing DNS server	15	GLOBAL_CONFIG
show ip name-server	Display the active domain name server information	0	EXEC
ip dns proxy	Enable DNS proxy service	15	GLOBAL_CONFIG
show version	Use show version to display firmware information.	0	EXEC
firmware upgrade <word>	Use firmware upgrade to load new firmware image to the switch.	15	EXEC
firmware swap	Use firmware swap to swap the active and alternative firmware images.	15	EXEC
show green-ethernet fan	Shows Fan status (chip Temperature and fan speed).	15	GLOBAL_CONFIG
green-ethernet fan temp-on <-127-127>	Sets temperature at which to turn fan on to the lowest speed.	15	GLOBAL_CONFIG
no green-ethernet fan temp-on	Sets temperature at which to turn fan on	15	GLOBAL_CONFIG

	to the lowest speed to default.		
green-ethernet fan temp-max <-127-127>	Sets temperature where the fan must be running at full speed.	15	GLOBAL_CONFIG
no green-ethernet fan temp-max	Sets temperature at which the fan will be running at full speed to default.	15	GLOBAL_CONFIG
green-ethernet led interval <0~24> intensity <0-100>	Use green-ethernet led interval to configure the LED intensity at specific interval of the day.	15	GLOBAL_CONFIG
no green-ethernet led interval <0~24>		15	GLOBAL_CONFIG
green-ethernet led on-event { [link-change <0-65535>] [error] } *1	Use green-ethernet led on-event to configure when to turn LEDs intensity to 100%%.	15	GLOBAL_CONFIG
no green-ethernet led on-event [link-change] [error]		15	GLOBAL_CONFIG
show green-ethernet eee [interface <port_type_list>]	Shows Green Ethernet EEE status.	15	EXEC
show green-ethernet short-reach [interface <port_type_list>]	Shows Green Ethernet short-reach status.	15	EXEC
show green-ethernet energy-detect [interface <port_type_list>]	Shows Green Ethernet energy-detect status.	15	EXEC
show green-ethernet [interface <port_type_list>]	Shows Green Ethernet status.	15	EXEC
green-ethernet eee	Sets EEE mode.	15	INTERFACE_PORT_LIST
green-ethernet eee urgent-queues [<range_list>]	Sets EEE urgent queues.	15	INTERFACE_PORT_LIST
green-ethernet eee optimize-for-power	Sets if EEE should be optimized for least traffic latency or least power consumption	15	GLOBAL_CONFIG
green-ethernet energy-detect	Enables energy-detect power savings.	15	INTERFACE_PORT_LIST
green-ethernet short-reach	Enables short-reach power savings.	15	INTERFACE_PORT_LIST
show ip http server secure status	Use the show ip http server secure status privileged EXEC command to display the secure HTTP web server status.	15	EXEC
ip http secure-server	Use the ip http secure-server global configuration command to enable the secure HTTP web server. Use the no	15	GLOBAL_CONFIG

	form of this command to disable the secure HTTP web server.		
ip http secure-redirect	Use the http secure-redirect global configuration command to enable the secure HTTP web redirection. When the secure HTTP web server is enabled, the feature automatic redirect the none secure HTTP web connection to the secure HTTP web connection. Use the no form of this command to disable the secure HTTP web redirection.	15	GLOBAL_CONFIG
reload { { cold warm } [sid <1-16>] } { defaults [keep-ip] }	Reload system, either cold (reboot) or restore defaults without reboot.	15	EXEC
show running-config [all-defaults]		15	EXEC
show running-config feature <word> [all-defaults]		15	EXEC
show running-config interface <port_type_list> [all-defaults]		15	EXEC
show running-config interface vlan <vlan_list> [all-defaults]		15	EXEC
show running-config vlan <vlan_list> [all-defaults]		15	EXEC
show running-config line { console vty } <range_list> [all-defaults]		15	EXEC
copy { startup-config running-config <word> } { startup-config running-config <word> } [syntax-check]		15	EXEC
dir		15	EXEC
more <word>		15	EXEC
delete <word>		debug	EXEC
debug icfg wipe-flash-fs-conf-block		debug	EXEC
debug icfg wipe-specific-block {local global} <uint>		debug	EXEC
debug icfg silent-upgrade status		debug	EXEC
debug icfg dir		debug	EXEC
debug icfg error-trace <line>		debug	EXEC
ip routing	Enable routing for IPv4 and IPv6	15	GLOBAL_CONFIG

no ip routing	Disable routing for IPv4 and IPv6	15	GLOBAL_CONFIG
ip address {{<ipv4_addr> <ipv4_netmask>} {dhcp [fallback <ipv4_addr> <ipv4_netmask> [timeout <uint>]]}}	IP address configuration	15	INTERFACE_VLAN
ip dhcp retry interface vlan <vlan_id>	Restart the dhcp client	15	EXEC
no ip address	IP address configuration	15	INTERFACE_VLAN
ip route <ipv4_addr> <ipv4_netmask> <ipv4_addr>	Add new IP route	15	GLOBAL_CONFIG
no ip route <ipv4_addr> <ipv4_netmask> <ipv4_addr>	Delete an existing IP route	15	GLOBAL_CONFIG
show interface vlan [<vlan_list>]	Vlan interface status	15	EXEC
show ip interface brief	Brief IP interface status	0	EXEC
show ip arp	Print ARP table	0	EXEC
clear ip arp	Clear ARP cache	0	EXEC
show ip route	Routing table status	0	EXEC
ping ip <word1-255> [repeat <1-60>] [size <2-1452>] [interval <0-30>]		0	EXEC
clear ip statistics [system] [interface vlan <vlan_list>] [icmp] [icmp-msg <0~255>]		0	EXEC
show ip statistics [system] [interface vlan <vlan_list>] [icmp] [icmp-msg <0~255>]		0	EXEC
debug ipstack log [ERR NOERR] [WARNING NOWARNING] [NOTICE NONOTICE] [INFO NOINFO] [DEBUG NODEBUG] [MDEBUG NOMDEBUG] [IOCTL NOIOCTL] [INIT NOINIT] [ADDR NOADDR] [FAIL NOFAIL] [EMERG NOEMERG] [CRIT NOCRIT]		debug	EXEC
debug ip kmem		debug	EXEC
debug ip route		debug	EXEC
debug ip sockets		debug	EXEC
debug ip lpm stat ip <vlan_list>		debug	EXEC
debug ip lpm stat ipv6 <vlan_list>		debug	EXEC
debug ip lpm stat clear <vlan_list>		debug	EXEC
debug ip lpm sticky clear		debug	EXEC
debug ip lpm usage		debug	EXEC

debug ip global interface table change		debug	EXEC
debug ip vlan ipv4 created <vlan_list>		debug	EXEC
debug ip vlan ipv4 changed <vlan_list>		debug	EXEC
debug ip vlan ipv6 created <vlan_list>		debug	EXEC
debug ip vlan ipv6 changed <vlan_list>		debug	EXEC
show ip igmp snooping mrouter [detail]		0	EXEC
clear ip igmp snooping [vlan <vlan_list>] statistics		15	EXEC
show ip igmp snooping [vlan <vlan_list>] [group-database [interface <port_type_list>] [sfm-information]] [detail]		0	EXEC
ip igmp snooping		15	GLOBAL_CONFIG
ip igmp unknown-flooding		15	GLOBAL_CONFIG
ip igmp host-proxy [leave-proxy]		15	GLOBAL_CONFIG
ip igmp ssm-range <ipv4_mcast> <4-32>		15	GLOBAL_CONFIG
no ip igmp ssm-range		15	GLOBAL_CONFIG
ip igmp snooping vlan <vlan_list>		15	GLOBAL_CONFIG
no ip igmp snooping vlan [<vlan_list>]		15	GLOBAL_CONFIG
ip igmp snooping		15	INTERFACE_VLAN
ip igmp snooping querier { election address <ipv4_ucast> }		15	INTERFACE_VLAN
no ip igmp snooping querier { election address }		15	INTERFACE_VLAN
ip igmp snooping compatibility { auto v1 v2 v3 }		15	INTERFACE_VLAN
no ip igmp snooping compatibility		15	INTERFACE_VLAN
ip igmp snooping priority <0-7>		15	INTERFACE_VLAN
no ip igmp snooping priority		15	INTERFACE_VLAN
ip igmp snooping robustness-variable <1-255>		15	INTERFACE_VLAN
no ip igmp snooping robustness-variable		15	INTERFACE_VLAN
ip igmp snooping query-interval <1-31744>		15	INTERFACE_VLAN
no ip igmp snooping query-interval		15	INTERFACE_VLAN
ip igmp snooping query-max-response-time <0-31744>		15	INTERFACE_VLAN
no ip igmp snooping query-max-response-time		15	INTERFACE_VLAN
ip igmp snooping last-member-query-interval <0-31744>		15	INTERFACE_VLAN
no ip igmp snooping last-member-query-interval		15	INTERFACE_VLAN

ip igmp snooping unsolicited-report-interval <0-31744>		15	INTERFACE_VLAN
no ip igmp snooping unsolicited-report-interval		15	INTERFACE_VLAN
ip igmp snooping immediate-leave		15	INTERFACE_VLAN
ip igmp snooping mrouter		15	INTERFACE_PORT_LIST
ip igmp snooping max-groups <1-10>		15	INTERFACE_PORT_LIST
no ip igmp snooping max-groups		15	INTERFACE_PORT_LIST
ip igmp snooping filter <word16>		15	INTERFACE_PORT_LIST
no ip igmp snooping filter		15	INTERFACE_PORT_LIST
ipv6 mld snooping		15	GLOBAL_CONFIG
ipv6 mld unknown-flooding		15	GLOBAL_CONFIG
ipv6 mld host-proxy [leave-proxy]		15	GLOBAL_CONFIG
ipv6 mld ssm-range <ipv6_mcast> <8-128>		15	GLOBAL_CONFIG
no ipv6 mld ssm-range		15	GLOBAL_CONFIG
ipv6 mld snooping vlan <vlan_list>		15	GLOBAL_CONFIG
no ipv6 mld snooping vlan [<vlan_list>]		15	GLOBAL_CONFIG
ipv6 mld snooping immediate-leave		15	INTERFACE_PORT_LIST
ipv6 mld snooping mrouter		15	INTERFACE_PORT_LIST
ipv6 mld snooping max-groups <1-10>		15	INTERFACE_PORT_LIST
no ipv6 mld snooping max-groups		15	INTERFACE_PORT_LIST
ipv6 mld snooping filter <word16>		15	INTERFACE_PORT_LIST
no ipv6 mld snooping filter		15	INTERFACE_PORT_LIST
show ipv6 mld snooping mrouter [detail]		0	EXEC
clear ipv6 mld snooping [vlan <vlan_list>] statistics		15	EXEC
show ipv6 mld snooping [vlan <vlan_list>] [group-database [interface <port_type_list>] [sfm-information]] [detail]		0	EXEC
ipv6 mld snooping		15	INTERFACE_VLAN
ipv6 mld snooping querier election		15	INTERFACE_VLAN
ipv6 mld snooping compatibility { auto v1 v2 }		15	INTERFACE_VLAN
no ipv6 mld snooping compatibility		15	INTERFACE_VLAN
ipv6 mld snooping priority <0-7>		15	INTERFACE_VLAN
no ipv6 mld snooping priority		15	INTERFACE_VLAN
ipv6 mld snooping robustness-variable <1-255>		15	INTERFACE_VLAN

no ipv6 mld snooping robustness-variable		15	INTERFACE_VLAN
ipv6 mld snooping query-interval <1-31744>		15	INTERFACE_VLAN
no ipv6 mld snooping query-interval		15	INTERFACE_VLAN
ipv6 mld snooping query-max-response-time <0-31744>		15	INTERFACE_VLAN
no ipv6 mld snooping query-max-response-time		15	INTERFACE_VLAN
ipv6 mld snooping last-member-query-interval <0-31744>		15	INTERFACE_VLAN
no ipv6 mld snooping last-member-query-interval		15	INTERFACE_VLAN
ipv6 mld snooping unsolicited-report-interval <0-31744>		15	INTERFACE_VLAN
no ipv6 mld snooping unsolicited-report-interval		15	INTERFACE_VLAN
ip verify source		13	GLOBAL_CONFIG
i ip verify source		13	INTERFACE_PORT_LIST
ip verify source limit <0-2>		13	INTERFACE_PORT_LIST
no ip verify source limit		13	INTERFACE_PORT_LIST
ip verify source translate		13	GLOBAL_CONFIG
show ip verify source [interface <port_type_list>]		0	EXEC
show ip source binding [dhcp-snooping static] [interface <port_type_list>]		13	EXEC
ip source binding interface <port_type_id> <vlan_id> <ipv4_ucast> <mac_ucast>		13	GLOBAL_CONFIG
ip source binding interface <port_type_id> <vlan_id> <ipv4_ucast> <ipv4_netmask>		13	GLOBAL_CONFIG
show lacp { internal statistics system-id neighbour }	Show LACP configuration and status	15	EXEC
clear lacp statistics	Clear all LACP statistics	15	EXEC
lacp system-priority <1-65535>	Set the LACP system priority	15	GLOBAL_CONFIG
lacp	Enable LACP on an interface	15	INTERFACE_PORT_LIST
lacp key { <1-65535> auto }	Set the LACP key	15	INTERFACE_PORT_LIST
lacp role { active passive }	Set the LACP role, active or passive in transmitting BPDUs	15	INTERFACE_PORT_LIST
lacp timeout { fast slow }	Set the LACP timeout, i.e. how fast to transmit BPDUs, once a sec or once each 30 sec.	15	INTERFACE_PORT_LIST

lacp port-priority <1-65535>	Set the lacp port priority,	15	INTERFACE_PORT_LIST
lldp holdtime <2-10>	Sets LLDP hold time (The neighbor switch will discarded the LLDP information after \"hold time\" multiplied with \"timer\" seconds)	15	GLOBAL_CONFIG
no lldp holdtime		15	GLOBAL_CONFIG
lldp timer <5-32768>	Sets LLDP TX interval (The time between each LLDP frame transmitted in seconds).	15	GLOBAL_CONFIG
no lldp timer		15	GLOBAL_CONFIG
lldp reinit <1-10>	Sets LLDP reinitialization delay.	15	GLOBAL_CONFIG
no lldp reinit	Sets LLDP reinitialization delay.	15	GLOBAL_CONFIG
lldp tlv-select {management-address port-description system-capabilities system-description system-name}	Enables/disables LLDP optional TLVs.	15	INTERFACE_PORT_LIST
lldp transmit	Sets if switch will transmit LLDP frames.	15	INTERFACE_PORT_LIST
lldp receive	Sets if switch will update LLDP entry table with incoming LLDP information.	15	INTERFACE_PORT_LIST
show lldp neighbors [interface <port_type_list>]	Shows the LLDP neighbors information.	0	EXEC
show lldp statistics [interface <port_type_list>]	Shows the LLDP statistics information.	0	EXEC
clear lldp statistics	Clears the LLDP statistics.	0	EXEC
lldp transmission-delay <1-8192>	Sets LLDP transmission-delay. LLDP transmission delay (the amount of time that the transmission of LLDP frames will delayed after LLDP configuration has changed) in seconds.)	15	GLOBAL_CONFIG
no lldp transmission-delay		15	GLOBAL_CONFIG
lldp cdp-aware	Configures if the interface will be CDP aware (CDP discovery information is added to the LLDP neighbor table)	15	INTERFACE_PORT_LIST
show lldp med remote-device [interface <port_type_list>]	Show LLDP-MED neighbor device information.	0	EXEC
show lldp med media-vlan-policy [<0-31>]	Show media vlan policy(ies)	0	EXEC
lldp med location-tlv latitude { north south } <word8>	Use the lldp med location-tlv latitude to configure the location latitude.	15	GLOBAL_CONFIG

no lldp med location-tlv latitude	Use no lldp med location-tlv latitude to configure the latitude location to north 0 degrees.	15	GLOBAL_CONFIG
lldp med location-tlv longitude { west east } <word9>	Use the lldp med location-tlv longitude to configure the location longitude.	15	GLOBAL_CONFIG
no lldp med location-tlv longitude	Use no lldp med location-tlv longitude to configure the longitude location to north 0 degrees.	15	GLOBAL_CONFIG
lldp med location-tlv altitude { meters floors } <word11>	Use the lldp med location-tlv altitude to configure the location altitude.	15	GLOBAL_CONFIG
no lldp med location-tlv altitude	Use the lldp med location-tlv altitude to configure the location altitude.	15	GLOBAL_CONFIG
lldp med location-tlv civic-addr { country state county city district block street leading-street-direction trailing-street-suffix street-suffix house-no house-no-suffix landmark additional-info name zip-code building apartment floor room-number place-type postal-community-name p-o-box additional-code } <string250>	Use lldp med location-tlv civic-addr to configure the civic address.	15	GLOBAL_CONFIG
no lldp med location-tlv civic-addr { country state county city district block street leading-street-direction trailing-street-suffix street-suffix house-no house-no-suffix landmark additional-info name zip-code building apartment floor room-number place-type postal-community-name p-o-box additional-code }		15	GLOBAL_CONFIG
lldp med location-tlv elin-addr <dword25>	Use the lldp med location-tlv elin-addr to configure value for the Emergency Call Service	15	GLOBAL_CONFIG
no lldp med location-tlv elin-addr	Use the no lldp med location-tlv elin-addr to configure value for the Emergency Call Service to default value.	15	GLOBAL_CONFIG

lldp med transmit-tlv [capabilities] [location] [network-policy]	Use the lldp med transmit-tlv to configure which TLVs to transmit to link partner.	15	INTERFACE_PORT_LIST
no lldp med transmit-tlv [capabilities] [location] [network-policy]		15	INTERFACE_PORT_LIST
lldp med datum { wgs84 nad83-navd88 nad83-mlw }	Use the lldp med datum to configure the datum (geodetic system) to use.	15	GLOBAL_CONFIG
no lldp med datum		15	GLOBAL_CONFIG
lldp med fast <1-10>	Use the lldp med fast to configure the number of times the fast start LLDPDU are being sent during the activation of the fast start mechanism defined by LLDP-MED (1-10).	15	GLOBAL_CONFIG
no lldp med fast		15	GLOBAL_CONFIG
lldp med media-vlan-policy <0-31> { voice voice-signaling guest-voice-signaling guest-voice softphone-voice video-conferencing streaming-video video-signaling } { tagged <vlan_id> untagged } [l2-priority <0-7>] [dscp <0-63>]	Use the media-vlan-policy to create a policy, which can be assigned to an interface.	15	GLOBAL_CONFIG
no lldp med media-vlan-policy <0-31>		15	GLOBAL_CONFIG
lldp med media-vlan policy-list <range_list>	Use the media-vlan policy-list to assign policy to the interface.	15	INTERFACE_PORT_LIST
loop-protect	Loop protection configuration	15	GLOBAL_CONFIG
loop-protect transmit-time <1-10>	Loop protection transmit time interval	15	GLOBAL_CONFIG
no loop-protect transmit-time		15	GLOBAL_CONFIG
loop-protect shutdown-time <0-604800>	Loop protection shutdown time interval	15	GLOBAL_CONFIG
no loop-protect shutdown-time		15	GLOBAL_CONFIG
loop-protect	Loop protection configuration	15	INTERFACE_PORT_LIST
loop-protect action { [shutdown] [log] }*1		15	INTERFACE_PORT_LIST
no loop-protect action		15	INTERFACE_PORT_LIST
loop-protect tx-mode		15	INTERFACE_PORT_LIST
show loop-protect [interface <port_type_list>]		13	EXEC
mac address-table learning [secure]	Enable learning on port	15	INTERFACE_PORT_LIST
show mac address-table [conf static aging-time		0	EXEC

{ { learning count } [interface <port_type_list>] } { address <mac_addr> [vlan <vlan_id>] } vlan <vlan_id> interface <port_type_list>]			
clear mac address-table		15	EXEC
mac address-table static <mac_addr> vlan <vlan_id> interface <port_type_list>	Assign a static mac address to this port	15	GLOBAL_CONFIG
mac address-table aging-time <0,10-1000000>	Set switch aging time, 0 to disable.	15	GLOBAL_CONFIG
no mac address-table aging-time	Default aging time.	15	GLOBAL_CONFIG
monitor destination interface <port_type_id>	Sets monitor destination port.	15	GLOBAL_CONFIG
no monitor destination	Sets monitor destination port.	15	GLOBAL_CONFIG
monitor source { { interface <port_type_list> } { cpu [<range_list>] } { both rx tx }	Sets monitor source port(s).	15	GLOBAL_CONFIG
no monitor source { { interface <port_type_list> } { cpu [<range_list>] } }	Sets monitor source port(s).	15	GLOBAL_CONFIG
debug chip [{ 0 1 all }]		debug	EXEC
debug api [interface <port_type_list>] [{ ail cil }] [{ init misc port counters phy vlan pvlan mac-table acl qos aggr stp mirror evc erps eps packet fdma ts pts wm ipmc stack cmef mplscore mplsoam vxlat oam sgpio l3 afi macsec }] [full] [clear]		debug	EXEC
debug suspend		debug	EXEC
debug resume		debug	EXEC
debug kr-conf [cm1 <-32-31>] [c0 <-32-31>] [cp1 <-32-31>] [ampl <300-1275>] [{ ps25 ps35 ps55 ps70 ps120 }] [en-ob dis-ob] [ser-inv ser-no-inv]		debug	INTERFACE_PORT_LIST
show spanning-tree [summary active { interface <port_type_list> } { detailed [interface <port_type_list>] } { mst [configuration { <0-7> [interface <port_type_list>] }] }]		15	EXEC
clear spanning-tree { { statistics [interface <port_type_list>] } { detected-protocols [interface <port_type_list>] } }		15	EXEC
spanning-tree mode { stp rstp mstp }		15	GLOBAL_CONFIG

no spanning-tree mode		15	GLOBAL_CONFIG
spanning-tree transmit hold-count <1-10>		15	GLOBAL_CONFIG
no spanning-tree transmit hold-count		15	GLOBAL_CONFIG
spanning-tree mst max-hops <6-40>		15	GLOBAL_CONFIG
no spanning-tree mst max-hops		15	GLOBAL_CONFIG
spanning-tree mst max-age <6-40> [forward-time <4-30>]		15	GLOBAL_CONFIG
no spanning-tree mst max-age		15	GLOBAL_CONFIG
spanning-tree mst forward-time <4-30>		15	GLOBAL_CONFIG
no spanning-tree mst forward-time		15	GLOBAL_CONFIG
spanning-tree edge bpdu-filter		15	GLOBAL_CONFIG
spanning-tree edge bpdu-guard		15	GLOBAL_CONFIG
spanning-tree recovery interval <30-86400>		15	GLOBAL_CONFIG
no spanning-tree recovery interval		15	GLOBAL_CONFIG
spanning-tree mst <0-7> priority <0-61440>		15	GLOBAL_CONFIG
no spanning-tree mst <0-7> priority		15	GLOBAL_CONFIG
spanning-tree mst <0-7> vlan <vlan_list>		15	GLOBAL_CONFIG
no spanning-tree mst <0-7> vlan		15	GLOBAL_CONFIG
spanning-tree mst name <word32> revision <0-65535>		15	GLOBAL_CONFIG
no spanning-tree mst name		15	GLOBAL_CONFIG
spanning-tree		15	INTERFACE_PORT_LIST
spanning-tree edge		15	INTERFACE_PORT_LIST
spanning-tree auto-edge		15	INTERFACE_PORT_LIST
spanning-tree link-type { point-to-point shared auto }		15	INTERFACE_PORT_LIST
no spanning-tree link-type		15	INTERFACE_PORT_LIST
spanning-tree restricted-role		15	INTERFACE_PORT_LIST
spanning-tree restricted-tcn		15	INTERFACE_PORT_LIST
spanning-tree bpdu-guard		15	INTERFACE_PORT_LIST
spanning-tree mst <0-7> cost { <1-200000000> auto }		15	INTERFACE_PORT_LIST
no spanning-tree mst <0-7> cost		15	INTERFACE_PORT_LIST
spanning-tree mst <0-7> port-priority <0-240>		15	INTERFACE_PORT_LIST
no spanning-tree mst <0-7> port-priority		15	INTERFACE_PORT_LIST

spanning-tree		15	STP_AGGR
spanning-tree edge		15	STP_AGGR
spanning-tree auto-edge		15	STP_AGGR
spanning-tree link-type { point-to-point shared auto }		15	STP_AGGR
no spanning-tree link-type		15	STP_AGGR
spanning-tree restricted-role		15	STP_AGGR
spanning-tree restricted-tcn		15	STP_AGGR
spanning-tree bpdu-guard		15	STP_AGGR
spanning-tree mst <0-7> cost { <1-200000000> auto }		15	STP_AGGR
no spanning-tree mst <0-7> cost		15	STP_AGGR
spanning-tree mst <0-7> port-priority <0-240>		15	STP_AGGR
no spanning-tree mst <0-7> port-priority		15	STP_AGGR
mvr vlan <vlan_list> type { source receiver }		15	INTERFACE_PORT_LIST
mvr name <word16> type { source receiver }		15	INTERFACE_PORT_LIST
no mvr vlan <vlan_list> type		15	INTERFACE_PORT_LIST
no mvr name <word16> type		15	INTERFACE_PORT_LIST
mvr immediate-leave		15	INTERFACE_PORT_LIST
clear mvr [vlan <vlan_list> name <word16>] statistics		15	EXEC
show mvr [vlan <vlan_list> name <word16>] [group-database [interface <port_type_list>] [sfm-information]] [detail]		0	EXEC
mvr		15	GLOBAL_CONFIG
mvr vlan <vlan_list> [name <word16>]		15	GLOBAL_CONFIG
no mvr vlan <vlan_list>		15	GLOBAL_CONFIG
mvr vlan <vlan_list> mode { dynamic compatible }		15	GLOBAL_CONFIG
mvr name <word16> mode { dynamic compatible }		15	GLOBAL_CONFIG
no mvr vlan <vlan_list> mode		15	GLOBAL_CONFIG
no mvr name <word16> mode		15	GLOBAL_CONFIG
mvr vlan <vlan_list> igmp-address <ipv4_ucast>		15	GLOBAL_CONFIG
mvr name <word16> igmp-address <ipv4_ucast>		15	GLOBAL_CONFIG
no mvr vlan <vlan_list> igmp-address		15	GLOBAL_CONFIG

no mvr name <word16> igmp-address		15	GLOBAL_CONFIG
mvr vlan <vlan_list> frame priority <0-7>		15	GLOBAL_CONFIG
mvr vlan <vlan_list> frame tagged		15	GLOBAL_CONFIG
mvr name <word16> frame priority <0-7>		15	GLOBAL_CONFIG
mvr name <word16> frame tagged		15	GLOBAL_CONFIG
no mvr vlan <vlan_list> frame priority		15	GLOBAL_CONFIG
no mvr name <word16> frame priority		15	GLOBAL_CONFIG
mvr vlan <vlan_list> last-member-query-interval <0-31744>		15	GLOBAL_CONFIG
mvr name <word16> last-member-query-interval <0-31744>		15	GLOBAL_CONFIG
no mvr vlan <vlan_list> last-member-query-interval		15	GLOBAL_CONFIG
no mvr name <word16> last-member-query-interval		15	GLOBAL_CONFIG
mvr vlan <vlan_list> channel <word16>		15	GLOBAL_CONFIG
no mvr vlan <vlan_list> channel		15	GLOBAL_CONFIG
no mvr name <word16> channel		15	GLOBAL_CONFIG
show dot1x statistics { eapol radius all} [interface <port_type_list>]	Shows statistics for either eapol or radius.	0	EXEC
show dot1x status [interface <port_type_list>] [brief]	Shows dot1x status, such as admin state, port state and last source.	0	EXEC
clear dot1x statistics [interface <port_type_list>]	Clears the statistics counters	15	EXEC
dot1x re-authentication	Set Re-authentication state	15	GLOBAL_CONFIG
dot1x authentication timer re-authenticate <1-3600>	The period between re-authentication attempts in seconds	15	GLOBAL_CONFIG
no dot1x authentication timer re-authenticate		15	GLOBAL_CONFIG
dot1x timeout tx-period <1-65535>	the time between EAPOL retransmissions.	15	GLOBAL_CONFIG
no dot1x timeout tx-period		15	GLOBAL_CONFIG
dot1x authentication timer inactivity <10-1000000>	Time in seconds between check for activity on successfully authenticated MAC addresses.	15	GLOBAL_CONFIG
no dot1x authentication timer inactivity		15	GLOBAL_CONFIG
dot1x timeout quiet-period <10-1000000>	Time in seconds before a MAC-address	15	GLOBAL_CONFIG

	that failed authentication gets a new authentication chance.		
no dot1x timeout quiet-period		15	GLOBAL_CONFIG
dot1x re-authenticate	Refresh (restart) 802.1X authentication process.	15	INTERFACE_PORT_LIST
dot1x initialize [interface <port_type_list>]	Force re-authentication immediately	15	EXEC
dot1x system-auth-control	Set the global NAS state	15	GLOBAL_CONFIG
dot1x port-control { force-authorized force-unauthorized auto single multi mac-based }	Sets the port security state.	15	INTERFACE_PORT_LIST
no dot1x port-control	Sets the port security state.	15	INTERFACE_PORT_LIST
dot1x guest-vlan	Enables/disables guest VLAN	15	INTERFACE_PORT_LIST
dot1x max-reauth-req <1-255>	The number of times a Request Identity EAPOL frame is sent without response before considering entering the Guest VLAN	15	GLOBAL_CONFIG
no dot1x max-reauth-req	The number of times a Request Identity EAPOL frame is sent without response before considering entering the Guest VLAN	15	GLOBAL_CONFIG
dot1x guest-vlan <1-4095>	Guest VLAN ID used when entering the Guest VLAN.	15	GLOBAL_CONFIG
no dot1x guest-vlan	Guest VLAN ID used when entering the Guest VLAN.	15	GLOBAL_CONFIG
dot1x guest-vlan supplicant	The switch remembers if an EAPOL frame has been received on the port for the life-time of the port. Once the switch considers whether to enter the Guest VLAN, it will first check if this option is enabled or disabled. If disabled (unchecked; default), the switch will only enter the Guest VLAN if an EAPOL frame has not been received on the port for the life-time of the port. If enabled (checked), the switch will consider	15	GLOBAL_CONFIG

	entering the Guest VLAN even if an EAPOL frame has been received on the port for the life-time of the port.		
dot1x radius-qos	Enables/disables per-port state of RADIUS-assigned QoS.	15	INTERFACE_PORT_LIST
dot1x radius-vlan	Enables/disables per-port state of RADIUS-assigned VLAN.	15	INTERFACE_PORT_LIST
dot1x feature { [guest-vlan] [radius-qos] [radius-vlan] } *1	Globally enables/disables a dot1x feature functionality	15	GLOBAL_CONFIG
show dot1x statistics { eapol radius all } [interface <port_type_list>]	Shows statistics for either eapol or radius.	0	EXEC
ntp	Enable NTP	13	GLOBAL_CONFIG
ntp server <1-5> ip-address {<ipv4_ucast> <ipv6_ucast> <hostname>}		13	GLOBAL_CONFIG
ntp server <1-5> ip-address {<ipv4_ucast> <hostname>}		13	GLOBAL_CONFIG
no ntp server ip_address		13	GLOBAL_CONFIG
show ntp status		13	EXEC
show platform phy [interface <port_type_list>]	Show PHY module's information for all or a given interface	15	EXEC
show platform phy id [interface <port_type_list>]	Platform PHY's IDs	15	EXEC
show platform phy instance		15	EXEC
show platform phy failover		15	EXEC
platform phy instance restart { cool warm }		15	EXEC
platform phy instance default-activate		15	EXEC
show platform phy status [interface <port_type_list>]		15	EXEC
no platform phy instance		15	GLOBAL_CONFIG
platform phy failover		15	INTERFACE_PORT_LIST
debug phy read [<0~31>] [<0-0xffff>] [addr-sort]		debug	INTERFACE_PORT_LIST
debug phy write [<0~31>] <0-0xffff> [<0-0xffff>]		debug	INTERFACE_PORT_LIST
debug phy do-page-chk [enable disable]		debug	EXEC
debug phy force-pass-through-speed {1G 100M 10M}		debug	INTERFACE_PORT_LIST

debug phy reset		debug	INTERFACE_PORT_LIST
debug phy gpio <0-13> mode {output input alternative}		debug	INTERFACE_PORT_LIST
debug phy gpio <0-13> get		debug	INTERFACE_PORT_LIST
show poe [interface <port_type_list>]	Use the show poe to show PoE status.	0	EXEC
poe mode { standard plus }	Use poe mode to configure of PoE mode.	15	INTERFACE_PORT_LIST
no poe mode	Use poe mode to configure of PoE mode.	15	INTERFACE_PORT_LIST
poe priority { low high critical }	Use poe priority to configure PoE priority.	15	INTERFACE_PORT_LIST
no poe priority	Use poe priority to configure PoE priority.	15	INTERFACE_PORT_LIST
poe management mode { class-consumption class-reserved-power allocation-consumption allocation-reserved-power lldp-consumption lldp-reserved-power }	Use management mode to configure PoE power management method.	15	GLOBAL_CONFIG
no poe management mode		15	GLOBAL_CONFIG
poe power limit { <fword2.1> }	Use poe power limit to configure the maximum allowed power for the interface when power management is in allocation mode.	15	INTERFACE_PORT_LIST
no poe power limit	Use poe power limit to configure the maximum allowed power for the interface when power management is in allocation mode.	15	INTERFACE_PORT_LIST
poe supply sid <1~16> <1-2000>	Use poe supply to specify the maximum power the power supply can deliver.	15	GLOBAL_CONFIG
no poe supply [sid <1~16>]		15	GLOBAL_CONFIG
poe schedule-mode	Configure PoE Schedule mode.	15	INTERFACE_PORT_LIST
no poe schedule-mode	disable PoE power management method.	15	INTERFACE_PORT_LIST
poe select-all <range_list>	Configure PoE Schedule mode.	15	GLOBAL_CONFIG
no poe schedule-all <range_list>	disable PoE power management method.	15	GLOBAL_CONFIG

poe delay-mode <range_list>	Configure PoE Power Delay mode.	15	GLOBAL_CONFIG
no poe delay-mode <range_list>		15	GLOBAL_CONFIG
poe delay-time <range_list> <0-300>	Configure PoE Power Delay time.	15	GLOBAL_CONFIG
poe hour <0-23>	This command is used to set hour time per week to enable PoE.	15	INTERFACE_PORT_LIST
no poe hour <0-23>	This command is used to set hour time per week to disable PoE.	15	INTERFACE_PORT_LIST
poe Sun	This command is used to set hour time on Sunday to enable PoE.	15	INTERFACE_PORT_LIST
no poe Sun	This command is used to set hour time on Sunday to disable PoE.	15	INTERFACE_PORT_LIST
poe Mon	This command is used to set hour time on Monday to enable PoE.	15	INTERFACE_PORT_LIST
no poe Mon	This command is used to set hour time on Monday to disable PoE.	15	INTERFACE_PORT_LIST
poe Tue	This command is used to set hour time on Tuesday to enable PoE.	15	INTERFACE_PORT_LIST
no poe Tue	This command is used to set hour time on Tuesday to disable PoE.	15	INTERFACE_PORT_LIST
poe Wed	This command is used to set hour time on Wednesday to enable PoE.	15	INTERFACE_PORT_LIST
no poe Wed	This command is used to set hour time on Wednesday to disable PoE.	15	INTERFACE_PORT_LIST
poe Thr	This command is used to set hour time on Thursday to enable PoE.	15	INTERFACE_PORT_LIST
no poe Thr	This command is used to set hour time on Thursday to enable PoE.	15	INTERFACE_PORT_LIST
poe Fri	This command is used to set hour time on Friday to enable PoE.	15	INTERFACE_PORT_LIST
no poe Fri	This command is used to set hour time on Friday to disable PoE.	15	INTERFACE_PORT_LIST
poe Sat	This command is used to set hour time on Saturday to enable PoE.	15	INTERFACE_PORT_LIST
no poe Sat	This command is used to set hour time on Saturday to disable PoE.	15	INTERFACE_PORT_LIST

show interface <port_type_list> statistics [{ packets bytes errors discards filtered { priority [<0-7>] } }] [{ up down }]	Shows the statistics for the interface.	0	EXEC
show interface <port_type_list> veriphy	Run and display cable diagnostics.	0	EXEC
clear statistics [interface] <port_type_list>	Clears the statistics for the interface.	0	EXEC
show interface <port_type_list> capabilities		0	EXEC
show interface <port_type_list> status	Display status for the interface.	0	EXEC
mtu <'VTSS_MAX_FRAME_LENGTH_STANDARD'-V TSS_MAX_FRAME_LENGTH_MAX'>	Use mtu to specify maximum frame size (1518-9600 bytes).	15	INTERFACE_PORT_LIST
no mtu	Use no mtu to set maximum frame size to default.	15	INTERFACE_PORT_LIST
shutdown	Use shutdown to shutdown the interface.	15	INTERFACE_PORT_LIST
speed {2500 1000 100 10 auto {[10] [100] [1000]} }	Configures interface speed. If you use 10, 100, or 1000 keywords with the auto keyword the port will only advertise the specified speeds.	15	INTERFACE_PORT_LIST
no speed	Use "no speed" to configure interface to default speed.	15	INTERFACE_PORT_LIST
duplex { half full auto [half full] }	Use duplex to configure interface duplex mode.	15	INTERFACE_PORT_LIST
no duplex	Use "no duplex" to set duplex to default.	15	INTERFACE_PORT_LIST
media-type { rj45 sfp dual }	Use media-type to configure the interface media type.	15	INTERFACE_PORT_LIST
no media-type	Use to configure the interface media-type type to default.	15	INTERFACE_PORT_LIST
flowcontrol { on off }	Use flowcontrol to configure flow control for the interface.	15	INTERFACE_PORT_LIST
no flowcontrol	Use no flowcontrol to set flow control to default.	15	INTERFACE_PORT_LIST
excessive-restart	Use excessive-restart to configure backoff algorithm in half duplex mode.	15	INTERFACE_PORT_LIST
show web privilege group [<cword>] level		0	EXEC
web privilege group <cword> level { [cro <0-15>]		15	GLOBAL_CONFIG

[crw <0-15>] [sro <0-15>] [srw <0-15>] }*1			
no web privilege group [<word>] level		15	GLOBAL_CONFIG
show port-security port [interface <port_type_list>]	Show MAC Addresses learned by Port Security	0	EXEC
show port-security switch [interface <port_type_list>]	Show Port Security status.	0	EXEC
no port-security shutdown [interface <port_type_list>]	Reopen one or more ports whose limit is exceeded and shut down.	15	EXEC
port-security	Enable/disable port security globally.	15	GLOBAL_CONFIG
port-security aging	Enable/disable port security aging.	15	GLOBAL_CONFIG
port-security aging time <10-1000000>	Time in seconds between check for activity on learned MAC addresses.	15	GLOBAL_CONFIG
no port-security aging time		15	GLOBAL_CONFIG
port-security	Enable/disable port security per interface.	15	INTERFACE_PORT_LIST
port-security maximum [<1-1024>]	Maximum number of MAC addresses that can be learned on this set of interfaces.	15	INTERFACE_PORT_LIST
no port-security maximum		15	INTERFACE_PORT_LIST
port-security violation { protect trap trap-shutdown shutdown }	The action involved with exceeding the limit.	15	INTERFACE_PORT_LIST
no port-security violation	The action involved with exceeding the limit.	15	INTERFACE_PORT_LIST
pvlan <range_list>	Use the pvlan add or remove command to add or remove a port from a PVLAN.	13	INTERFACE_PORT_LIST
pvlan isolation	Use the pvlan isolation command to add the port into an isolation group.	13	INTERFACE_PORT_LIST
show pvlan [<range_list>]	Use the show pvlan command to view the PVLAN configuration.	13	EXEC
show pvlan isolation [interface <port_type_list>]	Use the show pvlan isolation command to view the PVLAN isolation configuration.	13	EXEC
show qos [{ interface [<port_type_list>] } wred { maps [dscp-cos] [dscp-ingress-translation] [dscp-classify] [cos-dscp]		15	EXEC

[dscp-egress-translation] } storm { qce [<1-256>] }			
qos map dscp-cos { <0-63> <dscp> } cos <0-7> dpl <dpl>		15	GLOBAL_CONFIG
no qos map dscp-cos { <0-63> <dscp> }		15	GLOBAL_CONFIG
qos map dscp-ingress-translation { <0-63> <dscp> } to { <0-63> <dscp> }		15	GLOBAL_CONFIG
no qos map dscp-ingress-translation { <0-63> <dscp> }		15	GLOBAL_CONFIG
qos map dscp-classify { <0-63> <dscp> }		15	GLOBAL_CONFIG
qos map cos-dscp <0-7> dpl <0-1> dscp { <0-63> <dscp> }		15	GLOBAL_CONFIG
no qos map cos-dscp <0-7> dpl <0-1>		15	GLOBAL_CONFIG
qos map dscp-egress-translation { <0-63> <dscp> } <0-1> to { <0-63> <dscp> }		15	GLOBAL_CONFIG
no qos map dscp-egress-translation { <0-63> <dscp> } <0-1>		15	GLOBAL_CONFIG
qos wred queue <0-5> min-th <0-100> mdp-1 <0-100> mdp-2 <0-100> mdp-3 <0-100>		15	GLOBAL_CONFIG
qos wred queue <0-5> min-fl <0-100> max <1-100> [fill-level]		15	GLOBAL_CONFIG
no qos wred queue <0-5>		15	GLOBAL_CONFIG
qos storm { unicast multicast broadcast } { { <1,2,4,8,16,32,64,128,256,512> [kfps] } { 1024 kfps } }		15	GLOBAL_CONFIG
no qos storm { unicast multicast broadcast }		15	GLOBAL_CONFIG
qos qce { [update] } <uint> [{ next <uint> } last] [interface <port_type_list>] [smac { <mac_addr> <oui> any }] [dmac { <mac_addr> unicast multicast broadcast any }] [tag { [type { untagged tagged c-tagged s-tagged any }] [vid { <vcap_vr> any }] [pcp { <pcp> any }] [dei { <0-1> any }] } *1] [inner-tag { [type { untagged tagged c-tagged s-tagged any }] [vid { <vcap_vr> any }] [pcp { <pcp> any }]		15	GLOBAL_CONFIG

<pre>[dei { <0-1> any }] *1 [frame-type { any { etype [{ <0x600-0x7ff,0x801-0x86dc,0x86de-0xffff> any }] llc [dsap { <0-0xff> any }] [ssap { <0-0xff> any }] [control { <0-0xff> any }] { snap [{ <0-0xffff> any }] ipv4 [proto { <0-255> tcp udp any }] [sip { <ipv4_subnet> any }] [dip { <ipv4_subnet> any }] [dscp { <vcap_vr> <dscp> any }] [fragment { yes no any }] [sport { <vcap_vr> any }] [dport { <vcap_vr> any }] ipv6 [proto { <0-255> tcp udp any }] [sip { <ipv4_subnet> any }] [dip { <ipv4_subnet> any }] [dscp { <vcap_vr> <dscp> any }] [sport { <vcap_vr> any }] [dport { <vcap_vr> any }]] [action [[cos { <0-7> default }] [dpl { <0-1> default }] [pcp-dei { <0-7> <0-1> default }] [dscp { <0-63> <dscp> default }] [policy { <uint> default }]] *1]</pre>			
no qos qce <'QCE_ID_START'-'QCE_ID_END'>		15	GLOBAL_CONFIG
qos qce refresh		15	GLOBAL_CONFIG
qos cos <0-7>		15	GLOBAL_CONFIG
no qos cos		15	INTERFACE_PORT_LIST
qos dpl <dpl>		15	INTERFACE_PORT_LIST
no qos dpl		15	INTERFACE_PORT_LIST
qos pcp <0-7>		15	INTERFACE_PORT_LIST
no qos pcp		15	INTERFACE_PORT_LIST
qos dei <0-1>		15	INTERFACE_PORT_LIST
no qos dei		15	INTERFACE_PORT_LIST
qos trust tag		15	INTERFACE_PORT_LIST
qos trust dscp		15	INTERFACE_PORT_LIST
qos map tag-cos pcp <0-7> dei <0-1> cos <0-7> dpl <dpl>		15	INTERFACE_PORT_LIST
no qos map tag-cos pcp <0-7> dei <0-1>		15	INTERFACE_PORT_LIST
qos policer <uint> [fps] [flowcontrol]		15	INTERFACE_PORT_LIST
no qos policer		15	INTERFACE_PORT_LIST

qos queue-policer queue <0~7> <uint>		15	INTERFACE_PORT_LIST
qos queue-policer queue <0~7> <uint>		15	INTERFACE_PORT_LIST
no qos queue-policer queue <0~7>		15	INTERFACE_PORT_LIST
qos wrr <1-100> <1-100> <1-100> <1-100> <1-100> <1-100>		15	INTERFACE_PORT_LIST
no qos wrr		15	INTERFACE_PORT_LIST
qos shaper <uint>		15	INTERFACE_PORT_LIST
no qos shaper		15	INTERFACE_PORT_LIST
qos queue-shaper queue <0~7> <uint> [excess]		15	INTERFACE_PORT_LIST
no qos queue-shaper queue <0~7>		15	INTERFACE_PORT_LIST
qos tag-remark { pcp <0-7> dei <0-1> mapped }		15	INTERFACE_PORT_LIST
no qos tag-remark		15	INTERFACE_PORT_LIST
qos map cos-tag cos <0~7> dpl <0~1> pcp <0-7> dei <0-1>		15	INTERFACE_PORT_LIST
no qos map cos-tag cos <0~7> dpl <0~1>		15	INTERFACE_PORT_LIST
qos dscp-translate		15	INTERFACE_PORT_LIST
qos dscp-classify { zero selected any }		15	INTERFACE_PORT_LIST
no qos dscp-classify		15	INTERFACE_PORT_LIST
qos dscp-remark { rewrite remap remap-dp }		15	INTERFACE_PORT_LIST
no qos dscp-remark		15	INTERFACE_PORT_LIST
qos storm { unicast broadcast unknown } <100-13200000> [fps]		15	INTERFACE_PORT_LIST
no qos storm { unicast broadcast unknown }		15	INTERFACE_PORT_LIST
qos qce { [addr { source destination }] [key { double-tag normal ip-addr mac-ip-addr }] }*1		15	INTERFACE_PORT_LIST
no qos qce { [addr] [key] }*1		15	INTERFACE_PORT_LIST
debug qos shaper cir { <100-3300000> [cbs <4096-258048>] } { [eir <100-3300000> [ebs <4096-258048>]] }		debug	INTERFACE_PORT_LIST
no debug qos shaper		debug	INTERFACE_PORT_LIST
debug qos queue-shaper queue <0~7> { cir <100-3300000> [cbs <4096-258048>] } { [eir <100-3300000> [ebs <4096-258048>]] } [excess]		debug	INTERFACE_PORT_LIST
no debug qos queue-shaper queue <0~7>		debug	INTERFACE_PORT_LIST

debug show qos shapers		debug	EXEC
debug qos cmef [{ enable disable }]		debug	EXEC
show rmon statistics [<1-65535>]		15	EXEC
show rmon history [<1-65535>]		15	EXEC
show rmon alarm [<1-65535>]		15	EXEC
show rmon event [<1-65535>]		15	EXEC
rmon alarm <1-65535> <word255> <1-2147483647> {absolute delta} rising-threshold <-2147483648-2147483647> [<0-65535>] falling-threshold <-2147483648-2147483647> [<0-65535>] {[rising falling both]}		15	GLOBAL_CONFIG
no rmon alarm <1-65535>		15	GLOBAL_CONFIG
rmon event <1-65535> [log] [trap <word127>] {[description <line127>]}		15	GLOBAL_CONFIG
no rmon event <1-65535>		15	GLOBAL_CONFIG
rmon collection stats <1-65535>		15	INTERFACE_PORT_LIST
no rmon collection stats <1-65535>		15	INTERFACE_PORT_LIST
rmon collection history <1-65535> [buckets <1-65535>] [interval <1-3600>]		15	INTERFACE_PORT_LIST
no rmon collection history <1-65535>		15	INTERFACE_PORT_LIST
show sflow statistics { receiver [<range_list>] samplers [interface [<range_list>] <port_type_list>]}	Use sflow statistics to show statistics for either receiver or sample interface.	0	EXEC
show sflow	Use show sflow to display the current sFlow configuration.	0	EXEC
clear sflow statistics { receiver [<range_list>] samplers [interface [<range_list>] <port_type_list>] }	Clearing statistics.	15	EXEC
sflow agent-ip {ipv4 <ipv4_addr> ipv6 <ipv6_addr>}	The agent IP address used as agent-address in UDP datagrams. Defaults to IPv4 loopback address.	15	GLOBAL_CONFIG
no sflow agent-ip	Sets the agent IP address used as agent-address in UDP datagrams to 127.0.0.1.	15	GLOBAL_CONFIG
sflow timeout [receiver <range_list>]	Receiver timeout measured in seconds.	15	GLOBAL_CONFIG

<0-2147483647>	The switch decrements the timeout once per second, and as long as it is non-zero, the receiver receives samples. Once the timeout reaches 0, the receiver and all its configuration is reset to defaults.		
no sflow timeout [receiver <range_list>]	Receiver timeout measured in seconds. The switch decrements the timeout once per second, and as long as it is non-zero, the receiver receives samples. Once the timeout reaches 0, the receiver and all its configuration is reset to defaults.	15	GLOBAL_CONFIG
sflow collector-address [receiver <range_list>] [<word>]	Collector address	15	GLOBAL_CONFIG
no sflow collector-address [receiver <range_list>]		15	GLOBAL_CONFIG
sflow collector-port [receiver <range_list>] <1-65535>	Collector UDP port. Valid range is 0-65536.	15	GLOBAL_CONFIG
no sflow collector-port [receiver <range_list>]	Collector UDP port. Valid range is 0-65536.	15	GLOBAL_CONFIG
sflow max-datagram-size [receiver <range_list>] <200-1468>	Maximum datagram size.	15	GLOBAL_CONFIG
no sflow max-datagram-size [receiver <range_list>]	Maximum datagram size.	15	GLOBAL_CONFIG
sflow sampling-rate [sampler <range_list>] [<1-4294967295>]	Specifies the statistical sampling rate. The sample rate is specified as N to sample 1/Nth of the packets in the monitored flows. There are no restrictions on the value, but the switch will adjust it to the closest possible sampling rate.	15	INTERFACE_PORT_LIST
sflow max-sampling-size [sampler <range_list>] [<14-200>]	Specifies the maximum number of bytes to transmit per flow sample.	15	INTERFACE_PORT_LIST
no sflow max-sampling-size [sampler <range_list>]	Specifies the maximum number of bytes to transmit per flow sample.	15	INTERFACE_PORT_LIST

sflow counter-poll-interval [sampler <range_list>] [<1-3600>]	The interval - in seconds - between counter poller samples.	15	INTERFACE_PORT_LIST
no sflow counter-poll-interval [<range_list>]	The interval - in seconds - between counter poller samples.	15	INTERFACE_PORT_LIST
sflow [<range_list>]	Enables/disables flow sampling on this port.	15	INTERFACE_PORT_LIST
show smtp	Email information	0	EXEC
smtp delete { server username sender returnpath mailaddress <1-6> }	Delete email server	15	GLOBAL_CONFIG
smtp mailaddress <1-6> <word47>	Set email server	15	GLOBAL_CONFIG
smtp returnpath <word47>		15	GLOBAL_CONFIG
smtp returnpath <word47>		15	GLOBAL_CONFIG
smtp sender <word47>		15	GLOBAL_CONFIG
smtp username <word31> <word31>		15	GLOBAL_CONFIG
smtp server <word47>		15	GLOBAL_CONFIG
smtp level <0-7>		15	GLOBAL_CONFIG
show snmp		15	EXEC
show snmp community v3 [<word127>]		15	EXEC
show snmp user [<word32> <word10-32>]			
show snmp security-to-group [{ v1 v2c v3 } <word32>]			
show snmp access [<word32> { v1 v2c v3 any } { auth noauth priv }]			
show snmp view [<word32> <word255>]			
snmp-server	Enable SNMP server.	13	GLOBAL_CONFIG
snmp-server engine-id local <word10-32>	To specify SNMP server's engine ID.	13	GLOBAL_CONFIG
no snmp-server engine-id local	To set SNMP server's engine ID to default value.	15	GLOBAL_CONFIG
snmp-server version { v1 v2c v3 }	Set the SNMP server version to SNMPv1, SNMPv2c or SNMPv3.	15	GLOBAL_CONFIG
no snmp-server version	Set SNMP server's version to default setting.	15	GLOBAL_CONFIG
snmp-server community v2c <word127> [ro rw]		15	GLOBAL_CONFIG
snmp-server community v3 <word127> [<ipv4_addr> <ipv4_netmask>]		15	GLOBAL_CONFIG

no snmp-server community v2c		15	GLOBAL_CONFIG
no snmp-server community v3 <word127>		15	GLOBAL_CONFIG
snmp-server user <word32> engine-id <word10-32> [{md5 <word8-32> sha <word8-40> } [priv { des aes } <word8-32>]]		15	GLOBAL_CONFIG
no snmp-server user <word32> engine-id <word10-32>		15	GLOBAL_CONFIG
snmp-server security-to-group model { v1 v2c v3 } name <word32> group <word32>		15	GLOBAL_CONFIG
no snmp-server security-to-group model { v1 v2c v3 } name <word32>		15	GLOBAL_CONFIG
snmp-server access <word32> model { v1 v2c v3 any } level { auth noauth priv } [read <word255>] [write <word255>]		15	GLOBAL_CONFIG
no snmp-server access <word32> model { v1 v2c v3 any } level { auth noauth priv }		15	GLOBAL_CONFIG
snmp-server view <word32> <word255> { include exclude }		15	GLOBAL_CONFIG
no snmp-server view <word32> <word255>		15	GLOBAL_CONFIG
snmp-server contact <line255>	To specify the system contact string.	15	GLOBAL_CONFIG
no snmp-server contact	To clear the system contact string.	15	GLOBAL_CONFIG
snmp-server location <line255>	To specify the system location string.	15	GLOBAL_CONFIG
no snmp-server location	To specify the system location string.	15	GLOBAL_CONFIG
show snmp mib context	Use the show snmp mib context user EXEC command to display \ the supported MIBs in the switch.	15	EXEC
show snmp mib ifmib ifIndex	Use the show snmp mib ifmib ifIndex user EXEC command to \ display the SNMP ifIndex(defined in IF-MIB) mapping \ information in the switch.	15	EXEC
show snmp mib redefine	Use the show snmp mib redefine user EXEC command to display \ information in the switch.	15	EXEC

	the redefined MIBs in the switch, that are different \ definitions from the standard MIBs.		
snmp-server trap		15	GLOBAL_CONFIG
no snmp-server host <word32>		15	GLOBAL_CONFIG
shutdown		15	SNMPS_HOST
host { <ipv4_ucast> <hostname> } [<-1-65535>] [traps informs]		15	SNMPS_HOST
host <ipv6_ucast> [<-1-65535>] [traps informs]		15	SNMPS_HOST
no host		15	SNMPS_HOST
version { v1 [<word127>] v2 [<word127>] v3 [probe engineID <word10-32>] [<word32>] }		15	SNMPS_HOST
no version		15	SNMPS_HOST
informs retries <0-255> timeout <0-2147>		15	SNMPS_HOST
no informs		15	SNMPS_HOST
traps [aaa authentication] [system [coldstart] [warmstart]] [switch [stp] [rmon]]		15	SNMPS_HOST
no traps		15	SNMPS_HOST
snmp-server host <word32> traps [linkup] [linkdown] [lldp]		15	INTERFACE_PORT_LIST
no snmp-server host <word32> traps		15	INTERFACE_PORT_LIST
show snmp host [<word32>] [system] [switch] [interface] [aaa]		15	EXEC
show ip ssh	Use the show ip ssh privileged EXEC \ command to display the SSH status.	15	EXEC
ip ssh	Use the ip ssh global configuration command to \ enable the SSH. Use the no form of this \ command to disable the SSH.	15	GLOBAL_CONFIG
show network-clock	Show selector state.	0	EXEC
clear network-clock clk-source <range_list>	Clear active WTR timer.	15	EXEC
network-clock clk-source <range_list> nominate { clk-in {interface <port_type_id> } }	Nominate a clk input to become a selectable clock source.	15	GLOBAL_CONFIG
no network-clock clk-source <range_list>		15	GLOBAL_CONFIG

nominate			
network-clock input-source { 1544khz 2048khz 10mhz }	Sets the station clock input frequency	15	GLOBAL_CONFIG
no network-clock input-source		15	GLOBAL_CONFIG
network-clock output-source { 1544khz 2048khz 10mhz }	Sets the station clock output frequency	15	GLOBAL_CONFIG
no network-clock output-source		15	GLOBAL_CONFIG
network-clock clk-source <range_list> aneg-mode { master slave forced }	Sets the preferred negotiation.	15	GLOBAL_CONFIG
no network-clock clk-source <range_list> aneg-mode		15	GLOBAL_CONFIG
network-clock clk-source <range_list> hold-timeout <3-18>	The hold off timer value in 100 ms.Valid values are range 3-18.	15	GLOBAL_CONFIG
no network-clock clk-source <range_list> hold-timeout		15	GLOBAL_CONFIG
network-clock selector { { manual clk-source <uint> } selected nonrevertive revertive holdover freerun }	Selection mode of nominated clock sources	15	GLOBAL_CONFIG
no network-clock selector		15	GLOBAL_CONFIG
network-clock clk-source <range_list> priority <0-1>	Priority of nominated clock sources.	15	GLOBAL_CONFIG
no network-clock clk-source <range_list> priority		15	GLOBAL_CONFIG
network-clock wait-to-restore <0-12>	WTR time (0-12 min) '0' is disable	15	GLOBAL_CONFIG
no network-clock wait-to-restore		15	GLOBAL_CONFIG
network-clock ssm-holdover { prc ssua ssub eec2 eec1 dnu inv }	Hold Over SSM overwrite	15	GLOBAL_CONFIG
no network-clock ssm-holdover		15	GLOBAL_CONFIG
network-clock ssm-freerun { prc ssua ssub eec2 eec1 dnu inv }	Free Running SSM overwrite	15	GLOBAL_CONFIG
no network-clock ssm-freerun		15	GLOBAL_CONFIG
network-clock clk-source <range_list> ssm-overwrite { prc ssua ssub eec2 eec1 dnu }	Clock source SSM overwrite	15	GLOBAL_CONFIG
no network-clock clk-source <range_list> ssm-overwrite		15	GLOBAL_CONFIG

network-clock option { eec1 eec2 }	EEC options	15	GLOBAL_CONFIG
no network-clock option		15	GLOBAL_CONFIG
network-clock synchronization ssm	SSM enable/disable.	15	INTERFACE_PORT_LIST
show logging [info] [warning] [error] [switch <switch_list>]	Use the show logging privileged EXEC command without keywords to display the logging configuration, or particularly the logging message summary for the logging level.	15	EXEC
show logging <1-4294967295> [switch <switch_list>]	Use the show logging privileged EXEC command with logging ID to display the detail logging message. OC_CMD_DEFAULT =	15	EXEC
clear logging [info] [warning] [error] [switch <switch_list>]	Use the clear logging privileged EXEC command to clear the logging message.	15	EXEC
logging on	Use the logging on global configuration command to enable the logging server. Use the no form of this command to disable the logging server.	15	GLOBAL_CONFIG
logging host { <ipv4_ucast> <hostname> }	Use the logging host global configuration command to configure the host address of logging server.	15	GLOBAL_CONFIG
no logging host	Use the no logging host global configuration command to clear the host address of logging server.	15	GLOBAL_CONFIG
logging level { info warning error }	Use the logging level global configuration command to configure what level of message will send to logging server.	15	GLOBAL_CONFIG
show clock	Show running system information	0	EXEC
show version	System hardware and software status	0	EXEC
password unencrypted <line31>	Use the password encrypted <password> global configuration command to configure administrator password with unencrypted password for the local switch access.	15	GLOBAL_CONFIG

password encrypted <word4-44>	Use the password encrypted <password> global configuration command to configure administrator password with encrypted password for the local switch access.	15	GLOBAL_CONFIG
password none	Use the password none global configuration command to remove the administrator password.	15	GLOBAL_CONFIG
show system	Show system information	0	EXEC
system contact <line255>	To specify the system contact string.	15	GLOBAL_CONFIG
no system contact	To clear the system contact string.	15	GLOBAL_CONFIG
system location <line255>	To specify the system location string.	15	GLOBAL_CONFIG
no system location	To specify the system location string.	15	GLOBAL_CONFIG
system name <line255>	To specify the system mode name string.	15	GLOBAL_CONFIG
no system name	To specify the system model name string.	15	GLOBAL_CONFIG
show thermal-protect [interface <port_type_list>]	Shows thermal protection status (chip temperature and port status).	15	EXEC
thermal-protect prio <0~3> temperature <0-255>	Thermal protection configurations.	15	GLOBAL_CONFIG
no thermal-protect prio <0~3>	Sets temperature at which to turn ports with the corresponding priority off.	15	GLOBAL_CONFIG
thermal-protect port-prio <0-3>	Sets temperature at which to turn ports with the corresponding priority off.	15	INTERFACE_PORT_LIST
no thermal-protect port-prio	Sets temperature at which to turn ports with the corresponding priority off.	15	INTERFACE_PORT_LIST
show upnp		15	EXEC
upnp		15	GLOBAL_CONFIG
upnp ttl <1-255>		15	GLOBAL_CONFIG
no upnp ttl		15	GLOBAL_CONFIG
upnp advertising-duration <100-86400>		15	GLOBAL_CONFIG
no upnp advertising-duration		15	GLOBAL_CONFIG
username <word31> privilege <0-15> password unencrypted <line31>	Use the username <username> privilege <level> password encrypted <password> global configuration	15	GLOBAL_CONFIG

	command to add a user with unencrypted password for the local switch access.		
username <word31> privilege <0-15> password encrypted <word4-44>	Use the username <username> privilege <level> password encrypted <password> global configuration command to add a user with encrypted password for the local switch access.	15	GLOBAL_CONFIG
username <word31> privilege <0-15> password none	Use the username <username> privilege <level> password none global configuration command to remove the password for specific username.	15	GLOBAL_CONFIG
no username <word31>	Use the no username <username> global configuration command to delete a local user.	15	GLOBAL_CONFIG
vlan protocol {{eth2 {<0x600-0xffff> arp ip ipx at}} {snap {<0x0-0xffff> rfc-1042 snap-8021h} <0x0-0xffff>} {llc <0x0-0xff> <0x0-0xff>} } group <word16>		13	GLOBAL_CONFIG
switchport vlan mac <mac_ucast> vlan <vlan_id>	Use the switchport vlan mac command to associate a MAC address to VLAN ID.	13	INTERFACE_PORT_LIST
switchport vlan protocol group <word16> vlan <vlan_id>	Use the no form of this command to remove the group to vlan mapping.	13	INTERFACE_PORT_LIST
show vlan protocol [eth2 {<0x600-0xffff> arp ip ipx at}] [snap {<0x0-0xffff> rfc-1042 snap-8021h} <0x0-0xffff>] [llc <0x0-0xff> <0x0-0xff>]	Use the switchport vlan protocol group command to add group to vlan mapping.	13	EXEC
show vlan mac [address <mac_ucast>]		13	EXEC
show vlan ip-subnet [id <1-128>]		13	EXEC
switchport vlan ip-subnet id <1-128> <ipv4_subnet> vlan <vlan_id>		13	INTERFACE_PORT_LIST
no switchport vlan ip-subnet id <1-128>		13	INTERFACE_PORT_LIST
debug vcl policy <uint>		debug	INTERFACE_PORT_LIST
no debug vcl policy		debug	GLOBAL_CONFIG

debug show vcl policy		debug	EXEC
switchport mode {access trunk hybrid}	Use the switchport mode command to define the type of the port.	13	INTERFACE_PORT_LIST
no switchport mode		13	INTERFACE_PORT_LIST
switchport access vlan <vlan_id>	Use the switchport access vlan command to configure a port to a VLAN. Valid VLAN IDs are 1 to 4095.	13	INTERFACE_PORT_LIST
no switchport access vlan		13	INTERFACE_PORT_LIST
switchport trunk native vlan <vlan_id>	Use the switchport native vlan command to configure a port VLAN ID for a trunk port.	13	INTERFACE_PORT_LIST
no switchport trunk native vlan	Set trunk mode characteristics of the interface	13	INTERFACE_PORT_LIST
switchport hybrid native vlan <vlan_id>	Use the switchport native vlan command to configure a port VLAN ID for a hybrid port.	13	INTERFACE_PORT_LIST
no switchport hybrid native vlan	Set hybrid mode characteristics of the interface	13	INTERFACE_PORT_LIST
switchport hybrid port-type { unaware c-port s-port s-custom-port }	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
no switchport hybrid port-type	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
switchport hybrid ingress-filtering	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
switchport hybrid acceptable-frame-type { all tagged untagged }	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
no switchport hybrid acceptable-frame-type	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
switchport hybrid egress-tag {none all [except-native]}	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
no switchport hybrid egress-tag	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
switchport trunk vlan tag native	Set trunk characteristics of the interface	13	INTERFACE_PORT_LIST
switchport trunk allowed vlan {all none [add	Set trunk mode characteristics of the	13	INTERFACE_PORT_LIST

remove except] <vlan_list>	interface		
no switchport trunk allowed vlan	Set trunk characteristics of the interface,	13	INTERFACE_PORT_LIST
switchport hybrid allowed vlan {all none [add remove except] <vlan_list>	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
no switchport hybrid allowed vlan	Set hybrid characteristics of the interface	13	INTERFACE_PORT_LIST
vlan ethertype s-custom-port <0x0600-0xffff>		13	GLOBAL_CONFIG
no vlan {{ethertype s-custom-port} <vlan_list>		15	GLOBAL_CONFIG
show interface <port_type_list> switchport [access trunk hybrid]	Use the show interfaces command to display the administrative and operational status of all interfaces or a specified interface.	0	EXEC
show vlan [id <vlan_list> name <vword32> brief]	Use the show vlan command to view the VLAN configuration.	13	EXEC
show vlan status [interface <port_type_list>] [combined admin nas mvr voice-vlan mstp erps vcl evc gvrp all conflicts]	Use the show VLAN status command to view the VLANs configured for each interface.	13	EXEC
name <vword32>	Use the name <vword32> command to configure VLAN name.	13	CONFIG_VLAN
no name	The no form of this command will restore the VLAN name to its default.	13	CONFIG_VLAN
switchport forbidden vlan {add remove} <vlan_list>	Adds or removes forbidden VLANs from the current list of forbidden VLANs	15	INTERFACE_PORT_LIST
no switchport forbidden vlan	Allows for adding VLANs to an interface	15	INTERFACE_PORT_LIST
show switchport forbidden [{vlan <vlan_id> {name <word>}]	Lookup VLAN Forbidden port entry.	0	EXEC
voice vlan	Use the voice vlan global configuration command to enable voice vlan. Use the no form of this command to globally disable voice vlan.	15	GLOBAL_CONFIG
voice vlan vid <vlan_id>	Use the voice vlan vid global configuration command to configure voice vlan vid.	15	GLOBAL_CONFIG
no voice vlan vid	Use the no voice vlan vid global configuration command to restore the	15	GLOBAL_CONFIG

	default voice vlan vid.		
voice vlan aging-time <10-10000000>	Use the voice vlan aging-time global configuration command to configure default voice vlan aging-time.	15	GLOBAL_CONFIG
no voice vlan aging-time	Use the no voice vlan aging-time global configuration command to restore the default voice vlan aging-time.	15	GLOBAL_CONFIG
voice vlan class { <0-7> low normal medium high }	Use the voice vlan class global configuration command to configure voice vlan class.	15	GLOBAL_CONFIG
no voice vlan class	Use the no voice vlan class global configuration command to restore the default voice vlan class.	15	GLOBAL_CONFIG
voice vlan oui <oui> [description <line32>]	Use the voice vlan oui global configuration command to set the oui entry for voice vlan.	15	GLOBAL_CONFIG
no voice vlan oui <oui>	Use the no voice vlan oui global configuration command to delete the oui entry.	15	GLOBAL_CONFIG
switchport voice vlan mode { auto force disable }	Use the switchport voice vlan mode interface configuration command to configure to switchport voice vlan mode.	15	INTERFACE_PORT_LIST
no switchport voice vlan mode	Use the no switchport voice vlan mode interface configuration command to restore the default switchport voice vlan mode.	15	INTERFACE_PORT_LIST
switchport voice vlan security	Use the switchport voice vlan security interface configuration command to configure switchport voice vlan security mode. Use the no form of this command to globally disable switchport voice vlan security mode.	15	INTERFACE_PORT_LIST
switchport voice vlan discovery-protocol {oui lldp both}	Use the switchport voice vlan discovery-protocol interface configuration command to configure to	15	INTERFACE_PORT_LIST

	switchport voice vlan discovery-protocol.		
no switchport voice vlan discovery-protocol	Use the no switchport voice vlan discovery-protocol interface configuration command to restore the default switchport voice vlan discovery-protocol.	15	INTERFACE_PORT_LIST
show voice vlan [oui <oui> interface <port_type_list>]	Use the show voice vlan privilege EXEC command without keywords to display the voice vlan configuration, or particularly switchport configuration for the interface, or use the oui keyword to display oui table.	15	EXEC
debug gvrp protocol-state interface <port_type_list> vlan <vlan_list>		debug	EXEC
debug gvrp msti		debug	EXEC
debug gvrp statistic		debug	EXEC
gvrp		15	GLOBAL_CONFIG
gvrp time { [join-time <1-20>] [leave-time <60-300>] [leave-all-time <1000-5000>] }*1		15	GLOBAL_CONFIG
gvrp max-vlans <1-4095>		15	GLOBAL_CONFIG
gvrp		15	INTERFACE_PORT_LIST
gvrp join-request vlan <vlan_list>		15	INTERFACE_PORT_LIST
gvrp leave-request vlan <vlan_list>		15	INTERFACE_PORT_LIST

22 CLI Summary

Help (List) Command

```
Username: admin
Password: admin
SM8TAT2DPB# ?

  clear      Reset functions
  configure  Enter configuration mode
  copy       Copy from source to destination
  debug      Debugging functions
  delete     Delete one file in flash: file system
  dir        Directory of all files in file system
  disable    Turn off privileged commands
  do         To run exec commands in config mode
  dot1x      IEEE Standard for port-based Network Access Control
  enable     Turn on privileged commands
  exit       Exit from EXEC mode
  firmware   Firmware upgrade/swap
  help       Description of the interactive help system
  ip         IPv4 commands
  logout     Exit from EXEC mode
  more       Display file
  no         Negate a command or set its defaults
  ping       Send ICMP echo messages
  reload     Reload system.
  send       Send a message to other tty lines
  show       Show running system information
  terminal   Set terminal line parameters
  traceroute traceroute program
```

Help Command

```
SM8TAT2DPB# help
```

Help may be requested at any point in a command by entering a question mark '?'. If nothing matches, the help list will be empty and you must backup until entering a '?' shows the available options.

Two styles of help are provided:

1. Full help is available when you are ready to enter a command argument (e.g. 'show ?') and describes each possible argument.
2. Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. 'show pr?'.)

```
SM8TAT2DPB#
```

Show Commands

```
SM8TAT2DPB# show ?
```

aaa	Login methods
access	Access management
access-list	Access list
aggregation	Aggregation port configuration
clock	Configure time-of-day clock
dot1x	IEEE Standard for port-based Network Access Control
event	Show trap event configuration
green-ethernet	Green ethernet (Power reduction)
history	Display the session command history
interface	Interface status and configuration
ip	Internet Protocol
ipmc	IPv4/IPv6 multicast configuration
ipv6	IPv6 configuration commands
lACP	LACP configuration/status
line	TTY line information
lldp	Display LLDP configure information.
logging	Syslog
loop-protect	Loop protection configuration
mac	Mac Address Table information

mvr	Multicast VLAN Registration configuration
ntp	Configure NTP
platform	Platform specific information
poe	Power Over Ethernet.
port-security	Port Security Status
privilege	Display command privilege
pvlan	PVLAN configuration
qos	Quality of Service
radius-server	RADIUS configuration
rmon	RMON statistics
running-config	Show running system information
sflow	Statistics flow.
sntp	Show email information
snmp	Display SNMP configurations
spanning-tree	STP Bridge
switchport	Display switching mode characteristics
system	system
tacacs-server	TACACS+ configuration
terminal	Display terminal configuration parameters
upnp	Display UPnP configurations
users	Display information about terminal lines
version	System hardware and software status
vlan	VLAN status
voice	Voice appliance attributes
web	Web

Show Version Command

```
SM8TAT2DPB# show ver

MEMORY          : Total=84115 KBytes, Free=66078 KBytes, Max=65911 KBytes
FLASH           : 0x40000000-0x41ffffff, 512 x 0x10000 blocks
MAC Address     : 00-40-c7-fe-07-df
Previous Restart : Cool

System Contact  :
System Name     : SM8TAT2DPB
System Location :
System Time     : 2011-01-01T00:26:16+00:00
System Uptime   : 00:26:16

Active Image
-----
Image           : managed
Version        : SM8TAT2DPB (standalone) v6.48.2057
Date           : 2016-06-16T18:41:32+08:00

Alternate Image
-----
Image           : managed.bk
Version        :
Date           :
```

```
SM8TAT2DPB#
```


Configure Commands

```
SM8TAT2DPB# configure terminal
```

```
SM8TAT2DPB(config)# ?
```

aaa	Authentication, Authorization and Accounting
access	Access management
access-list	Access list
aggregation	Aggregation mode
banner	Define a login banner
clock	Configure time-of-day clock
default	Set a command to its defaults
do	To run exec commands in config mode
dot1x	IEEE Standard for port-based Network Access Control
enable	Modify enable password parameters
end	Go back to EXEC mode
event	Trap event severity level
exit	Exit from current mode
green-ethernet	Green ethernet (Power reduction)
gvrp	Enable GVRP feature
help	Description of the interactive help system
hostname	Set system's network name
interface	Select an interface to configure
ip	Internet Protocol
ipmc	IPv4/IPv6 multicast configuration
ipv6	IPv6 configuration commands
lacp	LACP settings
line	Configure a terminal line
lldp	LLDP configurations.
logging	Syslog
loop-protect	Loop protection configuration
mac	MAC table entries/configuration
monitor	Set monitor configuration.
mvr	Multicast VLAN Registration configuration
no	Negate a command or set its defaults
ntp	Configure NTP
poe	Power Over Ethernet.

port-security	Enable/disable port security globally.
privilege	Command privilege parameters
qos	Quality of Service
radius-server	Configure RADIUS
rmon	Remote Monitoring
sflow	Statistics flow.
sntp	Set email information
snmp-server	Set SNMP server's configurations
spanning-tree	Spanning Tree protocol
system	Set Board Configuration
tacacs-server	Configure TACACS+
upnp	Set UPnP's configurations
username	Establish User Name Authentication
vlan	VLAN commands
voice	Voice appliance attributes
web	Web

SM8TAT2DPB(config)#

Show Running Config Commands

```
SM8TAT2DPB# show running-config ?
|                Output modifiers
all-defaults     Include most/all default values
feature          Show configuration for specific feature
interface        Show specific interface(s)
line             Show line settings
vlan             VLAN
<cr>
```

```
SM8TAT2DPB# show running-config all-defaults
Building configuration...
hostname SM8TAT2DPB
no logging on
no logging host
username admin privilege 15 password encrypted YWRtaW4=
no access management
no loop-protect
loop-protect transmit-time 5
loop-protect shutdown-time 180
no ip dhcp server
no ip dhcp server per-port
!
vlan 1
  name default
!
!
no ipmc profile
!
no ip routing
ip route 0.0.0.0 0.0.0.0 192.168.1.254
ip name-server 8.8.8.8
no ip dns proxy
-- more --, next page: Space, continue: g, quit: ^C
```

Alphabetical List of Commands

SM8TAT2DPB# c?

clear Reset functions
configure Enter configuration mode
copy Copy from source to destination

SM8TAT2DPB# d?

debug Debugging functions
delete Delete one file in flash: file system
dir Directory of all files in file system
disable Turn off privileged commands
do To run exec commands in config mode
dot1x IEEE Standard for port-based Network Access Control

SM8TAT2DPB# e?

enable Turn on privileged commands
exit Exit from EXEC mode

SM8TAT2DPB# f?

firmware Firmware upgrade/swap

SM8TAT2DPB# h?

help Description of the interactive help system
<cr>

SM8TAT2DPB# i?

ip IPv4 commands

SM8TAT2DPB# l?

logout Exit from EXEC mode
<cr>

SM8TAT2DPB# m?

more Display file

SM8TAT2DPB# n?

no Negate a command or set its defaults

SM8TAT2DPB# p?

ping Send ICMP echo messages

SM8TAT2DPB# r?

reload Reload system.

SM8TAT2DPB# s?

send Send a message to other tty lines
show Show running system information

SM8TAT2DPB# t?

terminal Set terminal line parameters
traceroute traceroute program

Alphabetical List of Config Commands

SM8TAT2DPB(config)# a?

aaa Authentication, Authorization and Accounting
access Access management
access-list Access list
aggregation Aggregation mode

SM8TAT2DPB(config)# b?

banner Define a login banner

SM8TAT2DPB(config)# c?

clock Configure time-of-day clock

SM8TAT2DPB(config)# d?

default Set a command to its defaults
do To run exec commands in config mode
dot1x IEEE Standard for port-based Network Access Control

SM8TAT2DPB(config)# e?

enable Modify enable password parameters
end Go back to EXEC mode
event Trap event severity level
exit Exit from current mode

SM8TAT2DPB(config)# g?

green-ethernet Green ethernet (Power reduction)
gvrp Enable GVRP feature

SM8TAT2DPB(config)# h?

help Description of the interactive help system
hostname Set system's network name

SM8TAT2DPB(config)# i?

interface Select an interface to configure
ip Internet Protocol
ipmc IPv4/IPv6 multicast configuration
ipv6 IPv6 configuration commands

SM8TAT2DPB(config)# l?

lACP LACP settings

```
line          Configure a terminal line
lldp          LLDP configurations.
logging       Syslog
loop-protect  Loop protection configuration
SM8TAT2DPB(config)# m?
mac          MAC table entries/configuration
monitor      Set monitor configuration.
mvr          Multicast VLAN Registration configuration
SM8TAT2DPB(config)# n?
no           Negate a command or set its defaults
ntp          Configure NTP
SM8TAT2DPB(config)# p?
poe          Power Over Ethernet.
port-security Enable/disable port security globally.
privilege    Command privilege parameters
SM8TAT2DPB(config)# q?
qos          Quality of Service
SM8TAT2DPB(config)# r?
radius-server Configure RADIUS
rmon         Remote Monitoring
SM8TAT2DPB(config)# s?
sflow        Statistics flow.
smtp         Set email information
snmp-server  Set SNMP server's configurations
spanning-tree Spanning Tree protocol
system       Set Board Configuration
SM8TAT2DPB(config)# t?
tacacs-server Configure TACACS+
SM8TAT2DPB(config)# u?
upnp         Set UPnP's configurations
username     Establish User Name Authentication
SM8TAT2DPB(config)# v?
vlan         VLAN commands
voice        Voice appliance attributes
```

23 Configure DHCP Per Port

You can configure DHCP Per Port via the CLI and Web UI. The DHCP Per Port factory default mode is Disabled. See the *SM8TAT2DPB Web User Guide* for web UI mode operation.

The switch's DHCP server assigns IP addresses. Clients get IP addresses in sequence and the switch assigns IP addresses to on a per-port basis starting from the configured IP range. For example, if the IP address range is configured as 192.168.10.20 - 192.168.10.37 with one DHCP device connected to port 1, the client will always get IP address 192.168.10.20, then port 3 is always distributed IP address 192.168.10.22, even if port 2 is an empty port (because port 2 is always distributed IP address 192.168.10.21).

The switch does not allow a DHCP per Port pool to include the switch's address.

IP address assigned range and VLAN 1 should stay in the same subnet mask.

The configurable IP address range is allowed to configure over 18 IP addresses, but the switch always assigns one IP address per port connecting device.

The DHCP Per Port function is only supported on VLAN 1.

When the DHCP Per Port function is enabled, the switch software will automatically create the related DHCP pool named "DHCP_Per _Port".

Once the DHCP Per Port function is enabled on one switch, IPv4 DHCP client at VLAN1 mode (DMS DHCP mode), DHCP server mode are all limited to be enabled at the same time (an error message displays if attempted).

If the DHCP server pool has been configured, once you enable the DHCP Per port function that DHCP server pool configuration will be overwritten.

Only for VLAN 1, clients issued DHCP packets will not be broadcast/forwarded to other ports. DHCP packets in others VLANs will be broadcast/forwarded to others ports.

The DHCP Per Port function allows the switch to connect only one DHCP client device.

The DHCP Per Port function is configured and shown using these CLI commands:

- **# show ip dhcp server**
- (config)# **ip dhcp server per-port**
- (config)# **no ip dhcp server per-port**

The CLI commands to configure and show DHCP Per Port are described below.

Command: Show the current DHCP Server and DHCP Per Port configuration

Syntax: **show ip dhcp server** <cr>

Description: Show if DHCP server is globally enabled or disabled, if all VLANs are disabled or enabled, and if the DHCP server Per Port function is disabled or enabled.

Example: Display the current DHCP Server and Per Port configuration, change the config, and display the results:

```
SM8TAT2DPB(config)# do show ip dhcp server
```

```
DHCP server is globally enabled.
```

```
Enabled VLANs are 1.
```

```
DHCP server per port is disabled.
```

```
SM8TAT2DPB(config)# ip dhcp server per-port
```

```
SM8TAT2DPB(config)# do show ip dhcp server
```

```
DHCP server is globally enabled.
```

```
Enabled VLANs are 1.
```

```
DHCP server per port is enabled.
```

```
SM8TAT2DPB(config)# no ip dhcp server per-port
```

```
SM8TAT2DPB(config)# do show ip dhcp server
```

```
DHCP server is globally enabled.
```

```
Enabled VLANs are 1.
```

```
DHCP server per port is disabled.
```

```
SM8TAT2DPB(config)#
```


Command: Configure the DHCP Per Port function

Syntax: **ip dhcp server per-port** <cr>

Description: Toggle the DHCP Per Port function from Disabled (default) to Enabled.

Example: Toggle the DHCP Per Port function and show the resulting config:

```
SM8TAT2DPB# show ip dhcp server

DHCP server is globally disabled.
  All VLANs are disabled.

SM8TAT2DPB# con ter
SM8TAT2DPB(config)# ip dhcp ?
    excluded-address  Prevent DHCP from assigning certain addresses
    pool              Configure DHCP address pools
    relay             DHCP relay agent configuration
    server            Enable DHCP server
    snooping          DHCP snooping
SM8TAT2DPB(config)# ip dhcp server ?
    <cr>
SM8TAT2DPB(config)# ip dhcp server
SM8TAT2DPB(config)# end
SM8TAT2DPB# show ip dhcp server

DHCP server is globally enabled.
  All VLANs are disabled.

SM8TAT2DPB#
```

Appendix A Service, Warranty & Tech Support

See the *SM8TAT2DPB Install Guide* for related information.

Appendix B Compliance Information

See the *SM8TAT2DPB Install Guide* for related information.



Transition Networks
10900 Red Circle Drive
Minnetonka, MN 55343 USA
Tel: 952- 941-7600 or 1-800-526-9267
Fax: 952-941-2322
Copyright© 2016 Transition Networks. All rights reserved.
Printed in the U.S.A.
SM8TAT2DPB Install Guide 33700 Rev. A