

# 5-port & 8-port 10/100BaseTX Industrial Switch

---

## User Manual



**SISTF1010-250-LR(T)**

**&**

**SISTF1010-280-LR(T)**

**TRANSITION**  
NETWORKS®

V1.10

Jun 2009

# FCC Warning

This Equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# CE Mark Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

# Content

---

FCC Warning .....	i
CE Mark Warning .....	i
Overview .....	1
Introduction .....	1
Features .....	3
Technical Specification .....	4
Packing List.....	1
Safety Precaution.....	1
Hardware Description .....	2
Front Panel.....	2
Top View .....	3
LED Indicators.....	4
Ports .....	5
Cabling .....	6
Wiring the Power Inputs .....	7
Wiring the Fault Alarm Contact .....	8
Mounting Installation.....	9

DIN-Rail Mounting .....	9
Wall Mount Plate Mounting .....	11
Hardware Installation .....	12
Installation Steps .....	12
Troubleshooting .....	14

# Overview

---

## Introduction

This user manual is suitable for the products as follows:

- 5-port 10/100TX Unmanaged Industrial Switch
- 8-port 10/100TX Unmanaged Industrial Switch

The unmanaged industrial switch is a cost-effective solution and meets the high reliability requirements demanded by industrial applications.

### High-Speed Transmissions

The Industrial switch includes a switch controller that can automatically sense transmission speeds (10/100 Mbps). The RJ-45 interface can auto-detect, so MDI or MDI-X is automatically selected and a crossover cable is not required. All Ethernet ports have memory buffers that support the store-and-forward mechanism. This assures that data is properly transmitted.

### Dual Power Input

To reduce the risk of power failure, the Industrial switch provides +12 ~ +48 V<sub>DC</sub> dual power inputs. If there is power failure, the Industrial switch will automatically switch to the secondary power input.

### Flexible Mounting

The industrial switch is extremely compact and can be mounted on a DIN-rail or a panel, so it is suitable for any space-constrained environment.

### Advanced Protection

The power inputs provide up to 3,000 V<sub>DC</sub> EFT protection, which secures the equipment against unregulated voltage and makes the system safer and more reliable. The RJ-45 Ethernet ports include 6,000 V<sub>DC</sub> ESD protection.

**Extended Operating Temperature**

The operating temperature of the Industrial switch is between -40 ~ 65°C (extended operating temperature model) or -10 ~ 50°C (standard model). With such a wide range, you can use the Industrial switch in some of the harshest industrial environments that exist.

**Easy Troubleshooting**

LED indicators make troubleshooting quick and easy. Each 10/100 Base-TX port has 2 LEDs that display the link status, transmission speed and collision status. Also the three power indicators P1, P2 and Fault help you diagnose immediately.

## Features

- Provides 5 x 10/100 Mbps (5-port 10/100TX model) or 8 x 10/100 Mbps (8-port 10/100TX model) Ethernet ports.
- Supports full/half duplex flow control
- Supports MDI/MDI-X auto-crossover
- Supports surge (EFT) protection 3,000 V<sub>DC</sub> for power line
- Supports 6,000 V<sub>DC</sub> Ethernet ESD protection
- Provides broadcast storm protection
- Embedded with a switch controller, supports auto-negotiation
- Embedded with memory buffer, supports store & forward transmission
- Supports redundant +12 ~ +48 V<sub>DC</sub> power input
- Provides flexible mounting: DIN-rail, Panel Mounting
- Supports Extended operating temperatures from -40 ~ 65°C (-LRT model) or -10 ~ 50°C (-LR model)

## Technical Specification

The technical specifications of the Industrial Switch are listed as follows.

### Communications

<b>Compatibility</b>	IEEE 802.3, 802.3u
<b>LAN</b>	10/100Base-TX
<b>Transmission Distance</b>	Up to 100 m
<b>Transmission Speed</b>	Up to 100 Mbps
<b>Broadcast Storm Rate Limit</b>	200pps (100M), 20pps (10M)

### Interface

<b>Connectors</b>	5 x RJ-45 (5-port 10/100TX) 8 x RJ-45 (8-port 10/100TX) 6-pin removable screw terminal (power)
<b>LED Indicators</b>	Unit: P1, P2, Fault TX port: Link/Active, Full Duplex/Collision

### Power

<b>Power Consumption</b>	5-port 10/100TX: 2.93 Watts max. 8-port 10/100TX: 4.71 Watts max.
<b>Power Input</b>	2 x Unregulated +12 ~ +48 V <sub>DC</sub>
<b>Fault Output</b>	1 Relay Output

### Mechanism

<b>Dimensions (WxHxD)</b>	30 x 95 x 140
---------------------------	---------------

24-Hour Technical Support: 1-800-260-1312

International: 00-1-952-941-7600



**Enclosure** IP-30, Metal shell with solid mounting kits  
**Mounting** DIN35 rail, Wall

## Protection

**ESD (Ethernet)** 6,000 V<sub>DC</sub>  
**Surge (EFT for power)** 3,000 V<sub>DC</sub>  
**Power Reverse** Yes

## Environment

**Standard Operating Temperature** -10 °C ~ +50 °C (32 °F ~ 140 °F)  
**Extend Operating Temperature** -40 ~ 75 °C (-40 °F ~ 167 °F)  
**(-LRT models only)**  
**Operating Humidity** 5% ~ 95% (non-condensing)  
**Storage Temperature** -40 ~ 85 °C (-40 °F ~ 185 °F)

## Certifications

**Safety** UL, cUL, CE EN60950-1  
Class 1 / Division 2  
**EMC** FCC Class A  
CE EN61000-4-2 (ESD)  
CE EN61000-4-3 (RS)  
CE EN61000-4-4 (EFT)  
CE EN61000-4-5 (Surge)  
CE EN61000-4-6 (CS)  
CE EN61000-4-8 (Magnetic Field)

CE EN61000-4-11 (Voltage DIP)

CE EN61000-6-2

CE EN61000-6-4

## Packing List

- 1 x 5-port 10/100TX Industrial Ethernet Switch, or 1x 8-port 10/100TX Industrial Ethernet Switch
- 1 x User Manual
- 2 x Wall Mounting Bracket and Screws

Compare the contents of the industrial switch with the standard checklist above. If any item is damaged or missing, please contact the local dealer for service.

## Safety Precaution

*Attention IF DC voltage is supplied by an external circuit, please use a protection device on the power supply input.*


# Hardware Description

---

The following will introduce the Industrial switch's hardware spec, port, cabling information, and wiring installation.

## Front Panel


The Front Panel of the 5-port and 8-port 10/100BaseTX Industrial Switch is shown as below.

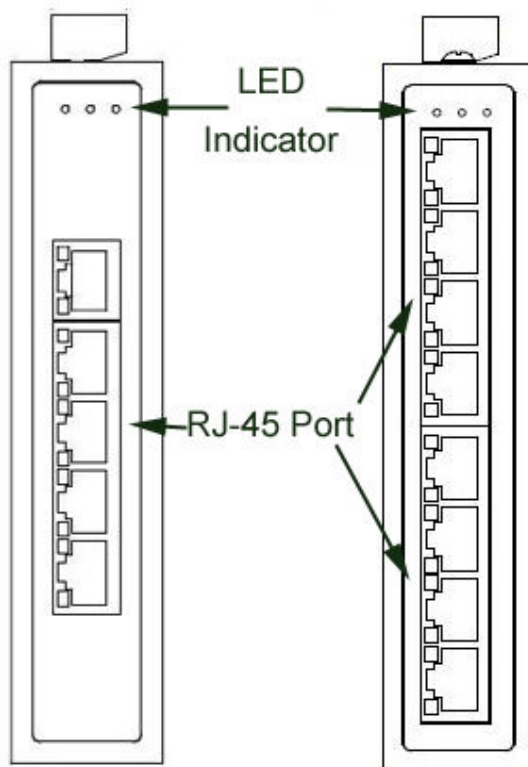

Front Panel of the 5-port & 8-port 10/100BaseTX Industrial Switch

## Top View

The top panel of the 5-port & 8-port 10/100BaseTX Industrial Switch is equipped with a terminal block connector for connecting input power and providing the fault output contacts.

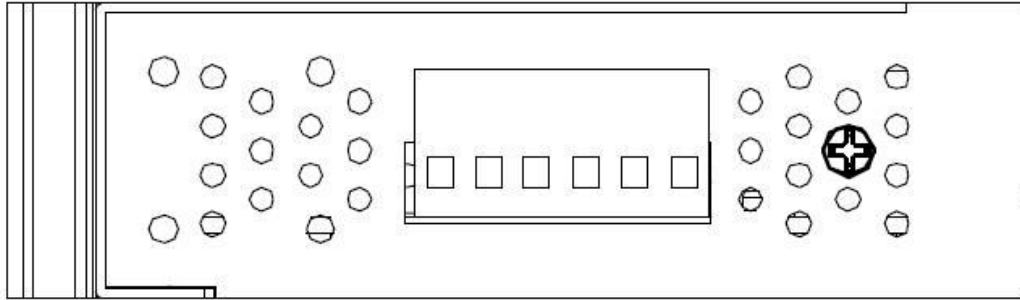

Top Panel of the 5-port & 8-port 10/100BaseTX Industrial Switch

## LED Indicators

There are a few LEDs to display the input power and network status located on the front panel of the Industrial switch; each of them has its own specific meaning as illustrated in the table below.

LED	Color	Description	
P1	Green	On	Power input 1 is active
		Off	Power input 1 is inactive
P2	Green	On	Power input 2 is active
		Off	Power input 2 is inactive
Fault	Red	On	Power input 1 or 2 is inactive
		Off	Power input 1 and 2 are both functional, or no power inputs
Link/Active (1~5 or 1~8)	Green	On	Connected to network
		Flashing	Networking is active
		Off	Not connected to network
Duplex/Collision (1~5 or 1~8)	Orange	On	Ethernet port full duplex
		Flashing	Collision of packets occurs
		Off	Ethernet port half duplex or not connect to network

## Ports

**RJ-45 ports (Auto MDI/MDIX):** The RJ-45 ports are auto-sensing for 10Base-T or 100Base-TX device connections. Auto MDI/MDIX means that you can connect to another switch or workstation without changing to straight through or crossover cabling. See figures below for straight through and crossover cable schematic.



### ■ RJ-45 Pin Assignments

Pin Number	Assignment
1	Tx+
2	Tx-
3	Rx+
6	Rx-


*Note* “+” and “-” signs represent the polarity of the wires that make up each wire pair.

All ports on this industrial switch support automatic MDI/MDI-X operation, you can use straight-through cables (See Figure below) for all network connections to PCs or servers, or to other switches or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3 and 6 at the other end of the cable. The table below shows the 10BASE-T/ 100BASE-TX MDI and MDI-X port pin outs.

Pin MDI-X	Signal Name	MDI Signal Name
1	Receive Data plus (RD+)	Transmit Data plus (TD+)
2	Receive Data minus (RD-)	Transmit Data minus (TD-)
3	Transmit Data plus (TD+)	Receive Data plus (RD+)
6	Transmit Data minus (TD-)	Receive Data minus (RD-)

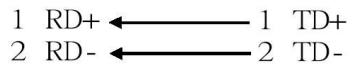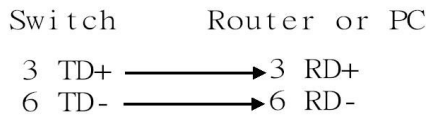

Straight Through Cable Schematic

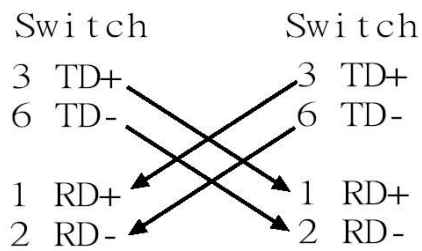

Cross Over Cable Schematic


## Cabling

Use the four twisted-pair, Category 5 cabling for RJ-45 port connection. The cable between the switch and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) long.




## Wiring the Power Inputs

Please follow the steps below to insert the power wire.

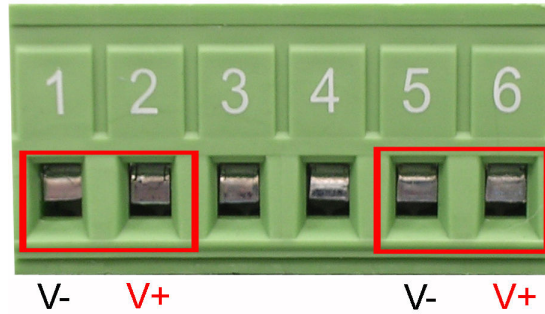


1. Insert the positive and negative wires into the V+ and V- contacts on the terminal block connector.

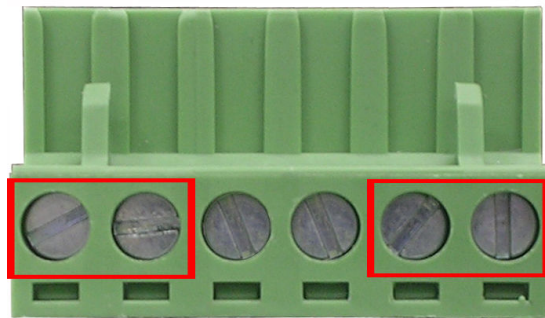

2. Tighten the wire-clamp screws to secure the wires.

## Wiring the Fault Alarm Contact

The fault alarm contact is in the middle of the terminal block connector as the picture shows below. Insert the wires to an external alarm system or indicator. Fault status will be signaled by the alarm contacts if the power fails or there is a port link failure (for managed model) and form an open circuit.

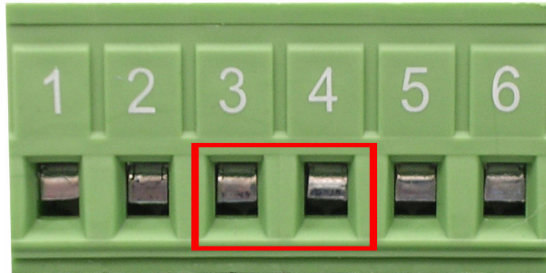

Insert the wires into the fault alarm contact (No. 3 & 4)

---

**Note**     *The wire gauge for the terminal block should be in the range between 12~24 AWG.*


---

# Mounting Installation

---

## DIN-Rail Mounting

The DIN-Rail is screwed on the industrial switch at the factory. If the DIN-Rail is not screwed on the industrial switch, please see the following figure to screw the DIN-Rail on the switch. Follow the steps below to hang the industrial switch.

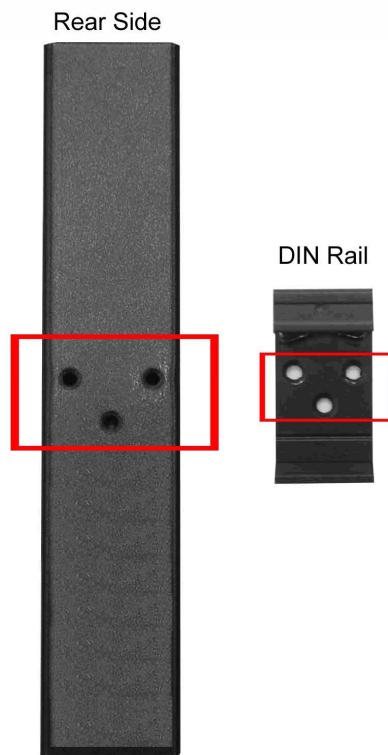


1. Use the screws to screw on the DIN-Rail on the industrial switch
2. To remove the DIN-Rail, reverse the step 1.

3. First, insert the top of DIN-Rail into the track.



4. Then, lightly push the button of DIN-Rail into the track.

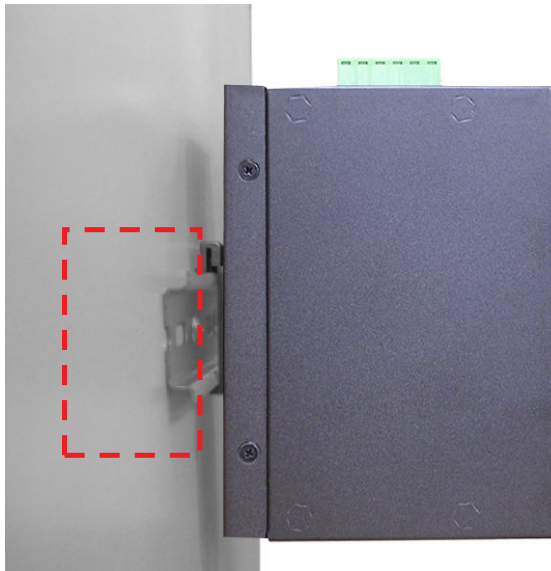


5. Check the DIN-Rail is tightly on the track.
6. To remove the industrial switch from the track, reverse steps above.

## Wall Mount Plate Mounting


Follow the steps below to mount the industrial switch with wall mount plate.

1. Remove the DIN-Rail from the industrial switch; loosen the screws to remove the DIN-Rail.
2. Place the wall mount plate on the top & bottom side of the industrial switch.
3. Use the screws to screw the wall mount plate on the industrial switch.
4. Use the hook holes at the corners of the wall mount plate to hang the industrial switch on the wall.
5. To remove the wall mount plate, reverse steps above.

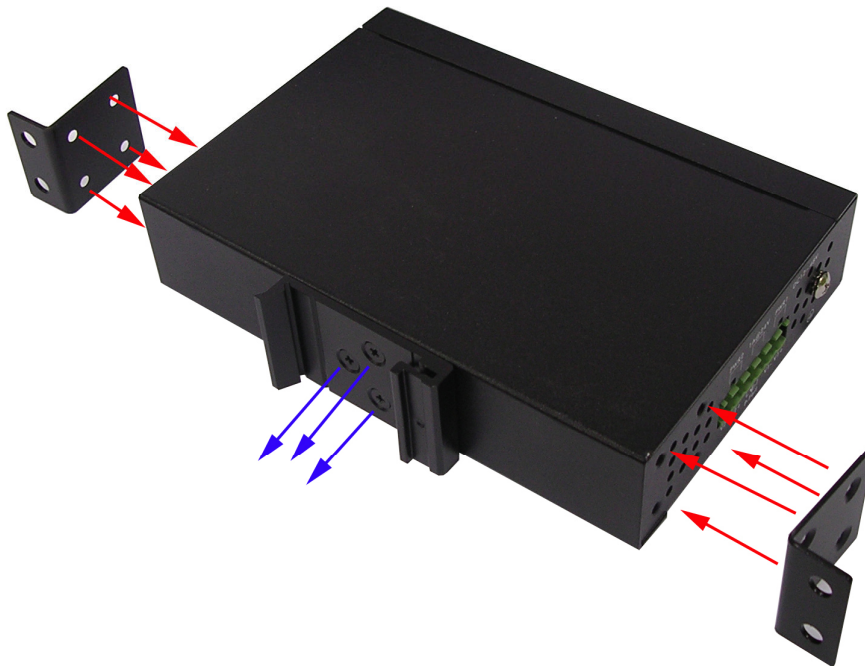

# Hardware Installation

Below we will describe how to install the 5-port or 8-port 10/100Base-TX Industrial Switch in the application.

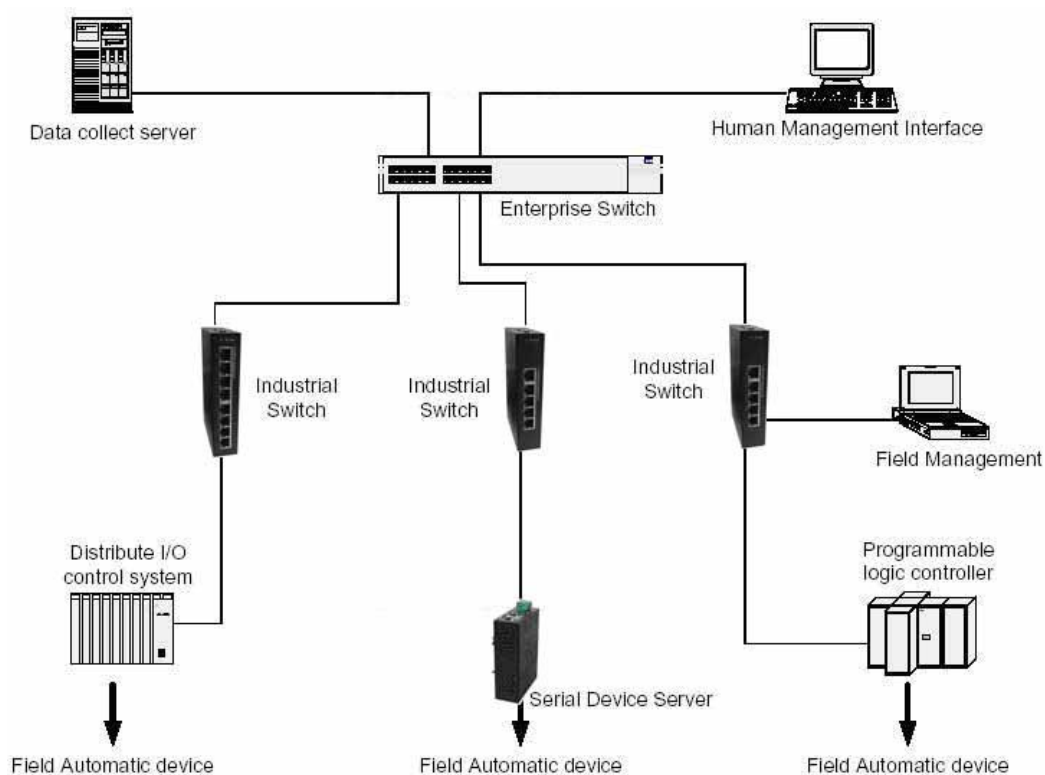

## Installation Steps

1. Unpack the Industrial switch packing.
2. Check the DIN-Rail is screwed on the Industrial switch. If the DIN-Rail is not screwed on the Industrial switch. Please refer to **DIN-Rail Mounting** section for DIN-Rail

24-Hour Technical Support: 1-800-260-1312

International: 00-1-952-941-7600

installation. If you want to wall mount the Industrial switch, then please refer to **Wall Mount Plate Mounting** section for wall mount plate installation.

3. To hang the Industrial switch on the DIN-Rail track or wall, please refer to the **Mounting Installation** section.
4. Power on the Industrial switch. For instructions on how to wire the power; please refer to the **Wiring the Power Inputs** section. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for meaning of LED lights.
5. Prepare the twisted-pair, straight through Category 5 cable for Ethernet connection.
6. Insert one side of Category 5 cables into the Industrial switch Ethernet port (RJ-45 port) and another side of category 5 cables to the network devices' Ethernet port (RJ-45 port), ex: switch, PC or server. The UTP port (RJ-45) LED on the Industrial switch will light up when the cable is connected with the network device. Please refer to the **LED Indicators** section for LED light meaning.

*Note*        *Be sure the connected network devices support MDI/MDI-X. If it does not support, then use the crossover category 5 cable.*

7. When all connections are all set and LED lights all show in normal, the installation is complete.

# Troubleshooting

---

- Verify that you are using the right power cord/adaptor. Using a power adapter output higher than the rated power input may damage the switch.
- Select the proper UTP/STP cable to construct your network. Please check that you are using the right cable. Use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable for RJ-45 connections: 100Ω Category 3, 4, or 5 cable for 10Mbps connections or 100Ω Category 5 cable for 100Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- **Diagnosing LED Indicators:** To assist in identifying problems, the switch can be easily monitored through the front panel LED indicators, which describe common problems the user may encounter and where the user can find possible solutions.
- IF the power indicator does not light on when the power cord is plugged in, you may have a problem with the power cord. Check for loose power connections, power losses or surges at the power outlet. If you still cannot resolve the problem, contact your local dealer for assistance.
- If the LED indicators are normal with the correctly connected cables and the packets still cannot transmit, please check your system's Ethernet devices' configuration or status.